


FORD

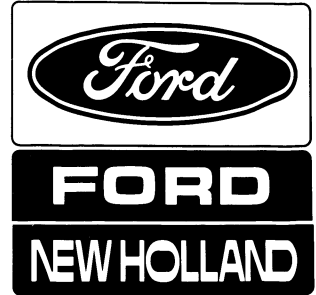

Operator's Manual

Series 715C


Rear Mounted Two Stage Snowblowers

Model 9828503 - 52''

Model 9828504 - 62''

For Compact Series Tractors

42648010

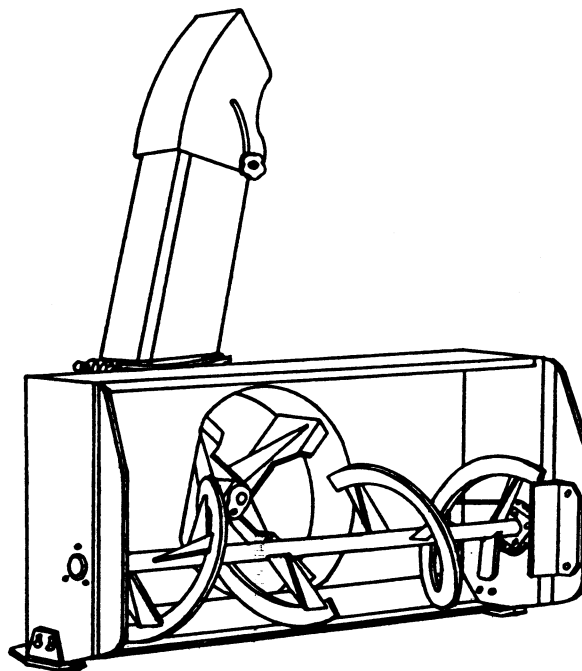

Reprinted

OWNER ASSISTANCE

We at Ford New Holland, Inc., and your Ford New Holland Dealer want you to be completely satisfied with your investment. Normally any problems with your equipment will be handled by your Dealer's Service Department. Sometimes however, a misunderstanding can occur. If your problem has not been handled to your satisfaction, we suggest the following:

1. Contact the Owner or General Manager of your dealership, explain the problem, and request assistance. When additional assistance is needed, your dealer has direct access to our branch offices.
2. If you cannot obtain satisfaction by doing this, contact the Ford New Holland, Inc. Branch Office in your area and provide them with:
 - Your name, address and telephone number.
 - Your equipment Model and Serial numbers.
 - Your dealership name and address.
 - The purchase date and amount of use on your equipment.
 - The nature of the problem you are experiencing.

FORD NEW HOLLAND, INC.- Branch Offices

WESTERN U.S.

San Francisco, California
P.O. Box 6100
Fairfield, CA 94533
Phone: (717)423-9200

SOUTHEASTERN U.S.

Atlanta, Georgia
2000 Mountain Industrial Road
Tucker, GA 30084
Phone: (404)723-3615

NORTH CENTRAL U.S.

Minneapolis, Minnesota
P.O. Box 1342,
Minneapolis, MN 55440
Phone: (612)887-4232

NORTHEASTERN U.S.

New Holland, Pennsylvania
500 Diller Avenue
New Holland, PA 17557
Phone: (717)355-3951

SOUTH CENTRAL U.S.

Dallas, Texas
P.O. Box 10227
Dallas, TX 75207
Phone: (214)939-4919

WESTERN CANADA

Calgary, Alberta
Box #1616, Main Post Office
Calgary, Alberta T2P-2M7
Phone: (403)569-3208

EASTERN CANADA

Toronto, Ontario
P.O. Box 3610
Guelph, Ontario N1H-6P1
Phone: (519)767-4824

IF YOU NEED FURTHER ASSISTANCE, CONTACT:

Consumer Services Department
Mail Station 500
Ford New Holland, Inc.
New Holland, PA 17557
Phone: (717)355-1545

When contacting Ford New Holland, Inc.'s Branch Office or Consumer Services Department, be aware that your problem will likely be resolved in your dealership, using his facilities, equipment and personnel, so it is important that your initial contact be with your dealer.

TABLE OF CONTENTS

Contents	Page
OWNER ASSISTANCE (inside front cover)	
INTRODUCTION	2
SAFETY PRECAUTION	3
OPERATION -	
Operating controls	6
Adjustments	7
Preparing for snow removal	8
Snow removal methods	9
MAINTENANCE	10
ASSEMBLY - REAR MOUNT -	
Step 1: 3 point hitch installation	11
Step 2: Chute installation	12
Step 3: Snowblower installation	14
DISMOUNTING	15
SAFETY DECALS	16
PARTS -	
3 point hitch	17
Snowblower	18
Gear box	21
Driveline	22
Chute with deflector	23
Manual chute rotation	24
TORQUE SPECIFICATION TABLES -	
Inch Hardware	25
Metric Hardware	26

INTRODUCTION

TO THE PURCHASER

This new snowblower was carefully designed to give years of dependable service.

This manual has been provided to assist in the safe operation and service of your snowblower.

NOTE: All photographs and illustrations in the manual may not necessarily depict the actual models or equipment, but are intended for reference only and are based on the latest product information available at the time of publication.

Familiarize yourself fully with the safety recommendations and operating procedures before putting the machine to use. Carefully read, understand and follow these recommendations and insist that they be followed by those who work with you.





THIS SAFETY ALERT SYMBOL IDENTIFIES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE IT, BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY AND CAREFULLY READ THE MESSAGE THAT FOLLOWS.

Record your snowblower model and serial number. Your dealer requires this information to give you prompt, efficient service when ordering parts or attachments. Service with genuine **FORD NEW HOLLAND** parts when replacement parts are required.

Right hand and left hand are determined by sitting in the tractor seat facing forward.

MODEL _____ **SERIAL NUMBER** _____ **DATE PURCHASED** _____

THE SERIAL NUMBER PLATE (BELOW) IS LOCATED ON THE REARRIGHT SIDE OF THE IMPELLER HOUSING. IT IS RIVETED ON AND SHOULD NOT BE REMOVED.

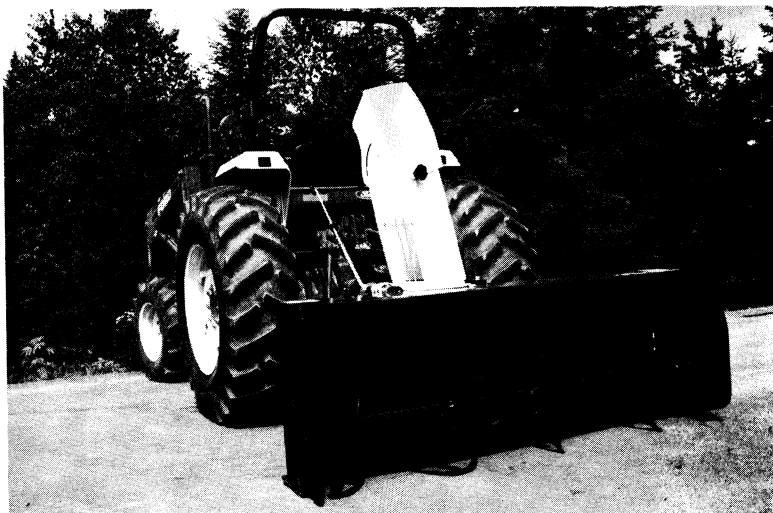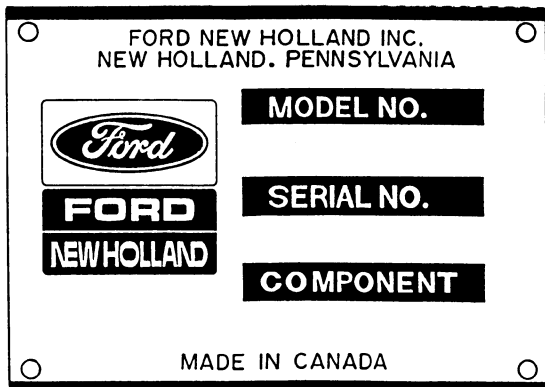

WHENEVER YOU SEE THIS SYMBOL



IT MEANS :

ATTENTION !

BECOME ALERT !

YOUR SAFETY IS INVOLVED !



The signal word "DANGER" signifies that a source of extreme danger to a person on or near a machine exists as a result of the very nature of the machine itself. This danger to persons is such that it would result in a high likelihood of death or permanent injury if the recommended precautions are not taken.



The signal word "WARNING" indicates that a source of danger to a person on or near a machine exists which may result in death or injury if the recommended precautions are not taken.

A CAREFUL OPERATOR IS THE BEST OPERATOR. MOST ACCIDENTS CAN BE AVOIDED BY OBSERVING CERTAIN PRECAUTIONS. READ AND TAKE THE FOLLOWING PRECAUTIONS BEFORE OPERATING THIS SNOWBLOWER TO HELP PREVENT ACCIDENTS. EQUIPMENT SHOULD BE OPERATED ONLY BY THOSE WHO ARE RESPONSIBLE AND INSTRUCTED TO DO SO.

THE SNOWBLOWER

1. Read this manual carefully to acquaint yourself with the snowblower. Working with unfamiliar equipment can lead to accidents. Be thoroughly familiar with the controls and proper use of the equipment. Know how to stop the unit and disengage the controls quickly.
2. Keep all shields in place and properly tighten all mounting hardware.
3. Periodically inspect all moving parts for wear and replace with authorized service parts if an excessive amount of wear is present.
4. Replace all missing, illegible, or damaged safety and warning decals. See list of decals at the end of this manual.
5. Do not modify or alter this equipment or any of its components, or any equipment function without first consulting a Ford New Holland dealer.
6. Keep safety decals clean of dirt and grime.

PREPARATION

1. Before starting, remove any ice that has accumulated in the collector and impeller.
2. Be sure the PTO is in OFF position before starting the engine.
3. Adjust collector housing height to clear gravel or crushed rock surface.
4. Before the snow season thoroughly inspect the area where the equipment is to be used and remove all door mats, sleds, boards, wires and other foreign objects.

SAFETY PRECAUTIONS

5. Clothing worn by the operator should be fairly tight and belted. Loose clothing should not be permitted because of the danger of getting into moving parts.
6. Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable noises.
13. Exercise extreme caution when operating on or crossing gravel drives, walks or roads. Stay alert for the hidden hazards of traffic.
14. Do not put hands or feet near rotating parts. Keep clear of discharge opening at all times.
15. Do not use hands or feet to unplug spout.
16. Keep a careful watch for debris that could enter the blower while operating.
17. Never operate the snowblower without guards, shields and other safety protective devices in place.
18. Never operate machine at high transport speeds on a slippery surface.

OPERATING THE SNOWBLOWER

1. Never allow anyone to ride on the snowblower.
2. Clear the area of people and debris before commencing blowing operation.
3. Never allow children to operate equipment. Never allow adults to operate equipment without proper instruction.
4. Always keep the discharge chute of the blower directed away from people and objects which could be struck by debris thrown from the snowblower.
5. Never allow anyone in front of unit.
6. Never leave snowblower in raised position.
7. Never operate the snowblower without good visibility and lighting.
8. Never clean or adjust PTO-driven equipment with the tractor engine running.
9. When operating PTO-driven equipment, always shut off the engine and wait for the PTO to stop turning before getting off the tractor, before unplugging the collector/impeller housing or discharge guide and before making any repairs, adjustments or inspections.
10. Take all possible precautions when leaving the vehicle unattended. Disengage the PTO, lower the snowblower, shift into neutral, set parking brake, stop the engine and remove the key.
11. Disengage power to collector/impeller when transporting or when not in use.
12. The operator should never get off the tractor while it is in motion.
19. Use care when backing up.
20. After striking a foreign object, stop the engine, wait for the PTO to stop turning, thoroughly inspect the snowblower for damage and repair the damage before restarting and operating the snowblower.
21. If the snowblower should start to vibrate abnormally, stop the engine immediately and check for the cause. Vibration is generally a warning of trouble.
22. Do not clear snow across the face of slopes. Exercise extreme caution when changing direction on slopes. Do not attempt to clear steep slopes.

THE FOLLOWING PRECAUTIONS ARE SUGGESTED BEFORE OPERATING THIS SNOWBLOWER TO HELP PREVENT ACCIDENTS.

THE TRACTOR

1. Read the Operator's Manual carefully before using tractor. Lack of operating knowledge can lead to accidents.
2. Use an approved Rollbar and Seat Belt for safe operation. Overturning a tractor without a rollbar can result in death or injury. If your tractor is not equipped with a rollbar and seat belt, see your Ford New Holland dealer.

SAFETY PRECAUTIONS

3. Always use the seat belt when the rollbar is installed. Do not use the seat belt if the rollbar is removed from the tractor.
4. Use the handholds and step plates when getting on and off the tractor to prevent falls. Keep steps and platform cleared of mud and debris.
5. Do not permit anyone but the operator to ride on the tractor. There is no safe place for extra riders.
12. Always drive the tractor at speeds compatible with safety, especially when operating over rough ground, crossing ditches, or when turning.
13. Handle fuel with care as it is highly flammable.
 - a) Use approved fuel container.
 - b) Never add fuel to a running engine or a hot engine.
 - c) Fill fuel tank outdoors with extreme care. Never fill fuel tank indoors.
 - d) Replace fuel cap securely and wipe up spilled fuel.

OPERATING THE TRACTOR

1. Never start the engine while standing beside the tractor. Always sit in the tractor seat while starting the engine or operating controls.
2. Never run the tractor engine in a closed building without adequate ventilation as the exhaust fumes are very dangerous.
3. Always set the hydraulic selector lever in Position Control when attaching equipment, transporting equipment and when no equipment is attached.
4. Never allow an open flame near the fuel tank or battery.
5. Use an SMV (slow moving vehicle) emblem and the flasher warning lamps when traveling on public roads, day or night, unless prohibited by law in your state.
6. Make sure the PTO shield is installed when using PTO-driven equipment and always replace the PTO shield if damaged.
7. Always bring the tractor to a complete stop and shut off the engine before getting off the tractor.
8. Never park the tractor on a steep incline.
9. Use care when operating on steep grades to maintain proper stability.
10. Keep the tractor in gear when going downhill.
11. Use of tire chains and wheel weights for better traction and stability is recommended. See Tractor Manual for recommended weighing.

MAINTENANCE AND STORAGE

1. Provide adequate blocking before working under the snowblower when in raised position.
2. Escaping hydraulic/diesel fluid under pressure can penetrate the skin causing serious injury.
 - DO NOT use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks.
 - Stop engine and relieve pressure before connecting or disconnecting hydraulic or diesel lines.
 - Tighten all connections before starting engine or pressurizing lines.
 - If any fluid is injected into the skin, obtain medical attention immediately or gangrene may result.
3. Make certain collector/impeller and all moving parts have stopped before cleaning, repairing or inspecting.
4. Do not run engine indoors.
5. Do not attempt to repair or tighten hydraulic hoses when under pressure, when the tractor engine is running, or when the snowblower is raised.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com