


# FORD

## Operator's Manual

---

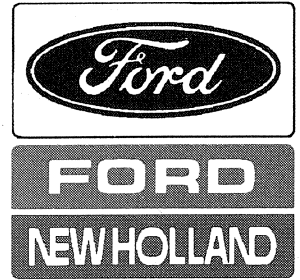

High Clearance Tractor  
7530



42753010  
Reprinted

---

## TO THE OWNER:

The warranty coverage that is extended to your Ford tractor is explained in the Warranty and Limitation of Liability, Ford Tractor form. Your dealer will provide you with a copy of the warranty and retain a copy which you have signed. After you read the warranty, ask your dealer to explain any points that you may not understand.

Do not modify or alter or permit anyone else to modify or alter this tractor or any of its components or any tractor function without first consulting an authorized Ford New Holland Dealer. If you have any questions regarding tractor modifications contact Ford New Holland, Inc., 500 Diller Ave., New Holland, PA. 17557.

A Roll Over Protective Structure (ROPS) and seat belt were standard equipment for the tractor at the time of factory assembly. If the ROPS was deleted by the original purchaser or has been removed, it is recommended that you equip your tractor with a Roll Over Protective Structure (ROPS) and seat belt. ROPS is effective in reducing injuries during tractor overturn accidents. Overturning a tractor without a ROPS can result in serious injury or death. ROPS and seat belts are available for your Ford tractor. If your tractor is not equipped with a ROPS and seat belt see your Ford New Holland Dealer.

Your safety and the safety of those around you depends upon the care and good judgment you use while operating this equipment. Read the safety precautions carefully.

For a complete list of the delivery service checks performed by your dealer, refer to DELIVERY REPORT in this manual. The first copy is your record of the service performed and the second copy, which is to be removed from the manual, is your dealer's record. **MAKE SURE THAT YOU AND THE DEALER SIGN BOTH COPIES.**

After you have operated the tractor for 50 hours, take your tractor and this Manual to your selling dealer. He will perform the factory recommended 50-hour service. You will be responsible for the cost of lubricants, fluids, filters and other items replaced as part of normal maintenance. Prior to taking the tractor to your selling dealer for service, it is recommended that you contact them to determine any other charges for which you may be responsible.

All data given in this book is subject to production variations. Dimensions and weights are approximate only and the illustrations do not necessarily show tractors in standard condition. For exact information about any particular tractor please consult your Ford New Holland dealer.



**CAUTION: THIS SYMBOL IS USED THROUGHOUT THIS BOOK WHENEVER PERSONAL SAFETY IS INVOLVED. TAKE TIME TO READ AND FOLLOW THE INSTRUCTIONS. BE CAREFUL!**

**CAUTION: PICTURES IN THIS MANUAL MAY SHOW PROTECTIVE SHIELDING OPEN OR REMOVED TO BETTER ILLUSTRATE A PARTICULAR FEATURE OR ADJUSTMENT.**

**BE CERTAIN, HOWEVER, TO CLOSE OR REPLACE ALL SHIELDING BEFORE OPERATING THE MACHINE.**

## IMPROVEMENTS

Ford New Holland, Inc. is continually striving to improve its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

## WARRANTY AND LIMITATION OF LIABILITY - AGRICULTURAL PRODUCTS

### COVERAGE PROVIDED

Ford New Holland, Inc. or Ford New Holland Canada Ltd., hereinafter called "Company" warrants to the retail purchaser of each new Product (as listed below) that the Selling Dealer will repair or replace any part thereof found to be defective in materials or workmanship within the following periods. This warranty is for the benefit of the original or subsequent purchaser when purchased from an authorized Ford New Holland dealer.

### BASIC WARRANTY

Product	Warranty Period
*Tractor, Articulated 4-Wheel Drive Models (except Bidirectional™) .....	24 Mos./2000 Hrs.
Tractor, 8530 thru 8830 Models .....	36 Mos./3000 Hrs.
Tractor, All TW Models .....	36 Mos./2500 Hrs.
Tractor, 1000 thru 8000 (except as noted) and Bidirectional Models .....	12 Months
*Harvesting Equipment, Attachments and Implements .....	12 Months
Replacement Parts .....	90 days or to end of Basic Warranty
**Extended Power Train Warranty for 1000 through 8000, and Bidirectional Models .....	24 Mos./2000 Hrs.
**Extended Engine Warranty for Self-Propelled Harvesting Products .....	24 Mos./2000 Hrs.

\*Cummins and Caterpillar engines are warranted by their respective manufacturer.

\*\*The components covered by extended warranty consists of the following:

ENGINE - The rocker arm cover, cylinder head, engine block, crankcase pan and timing gear cover of the engine, and the parts fully enclosed within these units.

TRANSMISSION AND REAR AXLE (Tractors Only) - The clutch housing, transmission case, dual power housing, differential housing, final drive housings, transfer case, front wheel drive housing, and parts fully enclosed within these housings, including the drive axles, but excluding the hydraulic lift cover and its components.

### LIMITATIONS, INCLUDING DISCLAIMER OF IMPLIED WARRANTIES AND CONSEQUENTIAL DAMAGES

This warranty gives you specific legal rights and you may also have other rights which vary, depending on state or provincial laws. Ford New Holland, Inc. or Ford New Holland Canada Ltd. does not authorize any person or dealer to create for it any other obligation or liability in connection with these products. **TO THE EXTENT ALLOWED BY LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS APPLICABLE TO THIS PRODUCT IS LIMITED TO THE STATED DURATION OF THIS WRITTEN WARRANTY. NEITHER COMPANY NOR THE SELLING DEALER SHALL BE LIABLE FOR LOSS OF THE USE OF THE PRODUCT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS OR CONSEQUENTIAL DAMAGES.**

Some states and provinces do not allow limitations on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

The remedy of repair or replacement of a defective part during the warranty period herein specified shall be the purchaser's exclusive remedy.

### RIGHT TO MAKE DESIGN CHANGES

Company reserves the right to make changes in the design and other changes in its products at any time and from time to time without notice and without incurring any obligation with respect to any product previously ordered from it, sold or shipped by it.

### EXTENDED SERVICE PLAN (ESP)

When offered by the Company, the option to purchase an Extended Service Plan has been explained and:

- I accept and have signed the completed registration form
- I decline the Extended Service Plan
- I will consider later (within 180 days)

### PROTECTIVE EQUIPMENT

Rollover protective structure (ROPS) and seat belts are provided as standard equipment on all Ford New Holland agricultural tractors and industrial tractors and we strongly recommend their use. Customers who elect to remove or not use this protection do so at their own risk.

- I acknowledge the existence of OSHA regulations pertaining to ROPS. \_\_\_\_\_
- A PTO master shield has been furnished with delivery of the machine. \_\_\_\_\_
- The correct Operator's Manual has been furnished. \_\_\_\_\_
- Safety precautions were explained to me by the Selling Dealer. \_\_\_\_\_

### ACKNOWLEDGEMENT

The blank spaces under "Protective Equipment" have been filled in and are correct, and I acknowledge that I have read and I accept this Warranty and Limitation of Liability.

Purchaser \_\_\_\_\_  
Signature

Model \_\_\_\_\_

Date \_\_\_\_\_

Serial No. \_\_\_\_\_

---

# FORD NEW HOLLAND WARRANTY DETAIL

The warranty period will begin on date of original retail sale or date of original use, whichever is earlier.

- The obligation of Company to the purchaser under this warranty is limited to the repair or replacement of defective parts by an authorized Ford New Holland dealer and will be done free of charge for both parts and labor using genuine Ford New Holland replacement parts. Repair or replacement in accordance with this warranty shall constitute fulfillment of all liabilities of Company and the Selling Dealer in respect to such Products.
- Repairs or replacements will be performed by the Selling Dealer, following delivery of the Product by the purchaser to the Dealer's place of business. When the purchaser has moved a long distance from the Selling Dealer, or the Selling Dealer is no longer in business, any Ford New Holland dealer authorized to sell and service the described Products may perform the repair at its dealership.
- The Selling Dealer shall review these warranty provisions with the purchaser prior to retail sale, secure his acknowledgement of delivery of this warranty and record the date of original retail sale or date of original use.

## WHAT IS NOT COVERED BY THE WARRANTY?

This warranty shall NOT apply under the following conditions:

- (i) With respect to vendor warranty items such as Cummins and Caterpillar engines, or tires, tubes, and attachments which shall be warranted by their manufacturer, or local representative thereof.
- (ii) If the unit has been subject to misapplication, abuse, misuse, negligence of proper maintenance or other negligence, fire or other accident.
- (iii) If parts or attachments other than those made or marketed by Ford New Holland, Inc. or Ford New Holland Canada Ltd., have been used in connection with the unit, and in the sole judgment of Company such use affects its performance, stability or reliability.
- (iv) If the unit has been altered or repaired outside of a Ford New Holland dealership in a manner which, in the sole judgment of Company, affects its performance, stability or reliability.
- (v) Batteries are covered by a separate pro rata adjustment warranty. The pro-rata plan covers the battery fully for the basic product warranty period as indicated, with any remaining warranty pro-rated according to the months of service.
- (vi) The customer shall be responsible for payment of dealer travel time to the machine or to deliver the machine to the dealer's service shop for repair. Ford New Holland warranty does not cover travel time.
- (vii) With the exception of special Owner Protection Programs, the Company shall have no liability for used equipment sold beyond the specified coverage period.
- (viii) No warranty shall apply to damage resulting from accident or damage caused by environment (such as exposure to corrosive material). The Company shall not be responsible for rental equipment used to replace the equipment being repaired.
- (ix) This warranty shall NOT apply to normal maintenance services (such as tune-ups, fuel injection system cleaning or wheel, brake and clutch adjustments), to normal replacement of service items (such as filters and brake or clutch linings), or to normal deterioration due to use or exposure (such as belts and exterior finish). Ford New Holland shall not be responsible for normal replacement parts such as cutting knives, chains, belts, clutches, filters, oil, or other parts which are worn out, unless they are determined to be defective in material or workmanship.
- (x) This warranty shall NOT apply to any Ford New Holland Product which is retailed or distributed by anyone other than Ford New Holland, Inc. or Ford New Holland Canada Ltd., through its authorized dealer. This warranty shall NOT apply to any Product which is normally operated outside of the United States, and/or Canada.

---

# CONTENTS

<b>SAFETY</b> .....	<b>0-5</b>
<b>THE TRACTOR</b> .....	<b>0-6</b>
<b>SERVICING THE TRACTOR</b> .....	<b>0-7</b>
<b>OPERATING THE TRACTOR</b> .....	<b>0-8</b>
<b>DRIVING THE TRACTOR</b> .....	<b>0-9</b>
<b>OPERATING THE PTO</b> .....	<b>0-10</b>
<b>DIESEL FUEL</b> .....	<b>0-11</b>
<b>SAFETY FRAME (ROPS)</b> .....	<b>0-12</b>
<b>SAFETY DECALS</b> .....	<b>0-13</b>
<b>INTRODUCTION</b> .....	<b>0-17</b>
<b>ROLL OVER PROTECTIVE STRUCTURE</b> .....	<b>0-19</b>
<b>PROTECTIVE SHIELDING</b> .....	<b>0-20</b>
<b>UNIVERSAL SYMBOLS</b> .....	<b>0-23</b>
<b>SECTION 1 – CONTROLS, INSTRUMENTS AND OPERATION</b> .....	<b>1-1</b>
<b>OPERATOR'S SEAT AND SEAT BELT</b> .....	<b>1-1</b>
<b>INSTRUMENT PANEL – GAUGES, WARNING AND INDICATOR LIGHTS</b> .....	<b>1-3</b>
<b>INSTRUMENT PANEL – CONTROLS AND SWITCHES</b> .....	<b>1-6</b>
<b>HAND AND FOOT CONTROLS</b> .....	<b>1-9</b>
<b>TRANSMISSION</b> .....	<b>1-12</b>
<b>FOUR WHEEL DRIVE</b> .....	<b>1-13</b>
<b>POWER TAKE-OFF</b> .....	<b>1-14</b>
<b>HYDRAULIC SYSTEM</b> .....	<b>1-20</b>
<b>THREE-POINT LINKAGE</b> .....	<b>1-24</b>
<b>ATTACHING AND DETACHING TRAILED EQUIPMENT</b> .....	<b>1-30</b>
<b>REMOTE CONTROL VALVES</b> .....	<b>1-32</b>
<b>TRACK WIDTH SETTINGS</b> .....	<b>1-35</b>
<b>TRACTOR WEIGHTING</b> .....	<b>1-39</b>
<b>STARTING THE ENGINE</b> .....	<b>1-41</b>
<b>RUNNING-IN PROCEDURE</b> .....	<b>1-43</b>
<b>DRIVING THE TRACTOR</b> .....	<b>1-44</b>
<b>SECTION 2 – LUBRICATION AND MAINTENANCE</b> .....	<b>2-1</b>
<b>MAINTENANCE CHART</b> .....	<b>2-2</b>
<b>WHEN WARNING LIGHT GLOWS</b> .....	<b>2-6</b>
<b>ROUTINE SERVICING</b> .....	<b>2-7</b>
<b>GENERAL MAINTENANCE – COOLING SYSTEM</b> .....	<b>2-32</b>
<b>GENERAL MAINTENANCE – FUEL SYSTEM</b> .....	<b>2-34</b>
<b>GENERAL MAINTENANCE – BLEEDING THE BRAKES</b> .....	<b>2-36</b>
<b>GENERAL MAINTENANCE – ELECTRICAL SYSTEM</b> .....	<b>2-37</b>
<b>GENERAL MAINTENANCE – STORAGE</b> .....	<b>2-39</b>
<b>SECTION 3 – SPECIFICATIONS</b> .....	<b>3-1</b>
<b>INDEX</b> .....	<b>3-7</b>
<b>DELIVERY REPORT</b> .....	<b>3-9</b>
<b>FIRST 50-HOUR SERVICE</b> .....	<b>3-13</b>

---

# OWNER ASSISTANCE

We at Ford New Holland and your Ford New Holland dealer want you to be completely satisfied with your investment. Normally any problems with your equipment will be handled by your dealer's Service Department. Sometimes, however, misunderstanding can occur. If your problem has not been handled to your satisfaction, we suggest the following.

1. Contact the owner or General Manager of the dealership, explain the problem, and request assistance. When additional assistance is needed, your dealer has direct access to our branch office.
2. If you cannot obtain satisfaction by doing this, contact the Ford New Holland branch office in your area and provide them with:
  - Your name, address, and telephone number
  - Machine model and serial number
  - Dealership name and address
  - Machine purchase date and amount of use
  - Nature of problem

## **Atlanta**

2000 Mountain Ind. Blvd.  
Tucker, GA 30084  
Telephone: (404) 723-3615

## **Dallas**

P.O. Box 10227  
Dallas, TX 75207  
Telephone: (214) 939-4919

## **Minneapolis**

P.O. Box 1342  
Minneapolis, MN 55440  
Telephone: (612) 887-4232

## **New Holland**

500 Diller Avenue  
New Holland, PA 17557  
Telephone: (717) 285-8302

## **Calgary**

Box 1616, Main P.O.  
Calgary, AB  
CANADA T2P 2M7  
Telephone: (403) 569-3208

3. If you need further assistance contact:

*Service Department  
Mail Station 500  
Ford New Holland, Inc.  
New Holland, PA 17557*

When contacting Ford New Holland's branch office or Service Department, be aware that your problem will likely be resolved in the dealership using the dealer's facilities, equipment, and personnel. So it is important that your initial contact be with the dealer.

A Service Publications Catalog & Order Form is available which lists the operator's and service manuals for many prior model and most current model Ford - New Holland - Versatile tractors, equipment, and consumer products. To obtain a copy of this catalog, please call 1-800-635-4913.

---

# PRECAUTIONARY STATEMENTS

## PERSONAL SAFETY

Throughout this manual and on machine decals, you will find precautionary statements ("CAUTION", "WARNING", and "DANGER") followed by specific instructions. These precautions are intended for the personal safety of you and those working with you. Please take the time to read them.



**CAUTION: THE WORD "CAUTION" IS USED WHERE A SAFE BEHAVIORAL PRACTICE ACCORDING TO OPERATING AND MAINTENANCE INSTRUCTIONS AND COMMON SAFETY PRACTICES WILL PROTECT THE OPERATOR AND OTHERS FROM ACCIDENT INVOLVEMENT.**



**WARNING: THE WORD "WARNING" DENOTES A POTENTIAL OR HIDDEN HAZARD WHICH HAS A POTENTIAL FOR SERIOUS INJURY. IT IS USED TO WARN OPERATORS AND OTHERS TO EXERCISE EVERY APPROPRIATE MEANS TO AVOID A SURPRISE INVOLVEMENT WITH MACHINERY.**



**DANGER: THE WORD "DANGER" DENOTES A FORBIDDEN PRACTICE IN CONNECTION WITH A SERIOUS HAZARD.**

**FAILURE TO FOLLOW THE "CAUTION", "WARNING", AND "DANGER" INSTRUCTIONS MAY RESULT IN SERIOUS BODILY INJURY OR DEATH.**

## MACHINE SAFETY

Additional precautionary statements ("ATTENTION" and "IMPORTANT") are followed by specific instructions. These statements are intended for machine safety.

*ATTENTION: The word "ATTENTION" is used to warn the operator of potential machine damage if a certain procedure is not followed.*

*IMPORTANT: The word "IMPORTANT" is used to inform the reader of something he needs to know to prevent minor machine damage if a certain procedure is not followed.*

---

## **OPERATING THE TRACTOR**

- 1. APPLY THE PARKING BRAKE, PLACE THE P.T.O. SELECTOR LEVER IN THE "NEUTRAL" POSITION, THE LIFT CONTROL LEVER IN THE DOWN POSITION, THE REMOTE CONTROL VALVE LEVERS IN THE NEUTRAL POSITION, AND THE TRANSMISSION IN NEUTRAL BEFORE STARTING THE TRACTOR.**
- 2. DO NOT START THE ENGINE OR OPERATE CONTROLS WHILE STANDING BESIDE THE TRACTOR. ALWAYS SIT IN THE TRACTOR SEAT WHEN STARTING THE ENGINE OR OPERATING THE CONTROLS.**
- 3. DO NOT BYPASS THE SAFETY START SWITCHES. CONSULT YOUR FORD NEW HOLLAND DEALER IF YOUR SAFETY START CONTROLS MALFUNCTION. USE JUMPER CABLES ONLY IN THE RECOMMENDED MANNER. IMPROPER USE CAN RESULT IN A TRACTOR RUNAWAY.**
- 4. AVOID ACCIDENTAL CONTACT WITH THE GEAR SHIFT LEVERS WHILE THE ENGINE IS RUNNING. UNEXPECTED TRACTOR MOVEMENT CAN RESULT FROM SUCH CONTACT.**
- 5. DO NOT GET OFF THE TRACTOR WHILE IT IS IN MOTION.**
- 6. SHUT OFF THE ENGINE AND APPLY THE PARKING BRAKE BEFORE GETTING OFF THE TRACTOR.**
- 7. DO NOT PARK THE TRACTOR ON A STEEP INCLINE.**
- 8. DO NOT OPERATE THE TRACTOR ENGINE IN AN ENCLOSED BUILDING WITHOUT ADEQUATE VENTILATION. EXHAUST FUMES CAN CAUSE DEATH.**
- 9. IF THE POWER STEERING OR ENGINE CEASES OPERATING, STOP THE TRACTOR IMMEDIATELY.**
- 10. PULL ONLY FROM THE SWINGING DRAWBAR. USE ONLY A DRAWBAR PIN THAT LOCKS IN PLACE. PULLING FROM THE TRACTOR REAR AXLE OR ANY POINT ABOVE THE AXLE MAY CAUSE THE TRACTOR TO UPSET.**
- 11. IF THE FRONT END OF THE TRACTOR TENDS TO RISE WHEN HEAVY IMPLEMENTS ARE ATTACHED TO THE THREE-POINT HITCH, INSTALL FRONT END WEIGHTS. DO NOT OPERATE THE TRACTOR WITH A LIGHT FRONT END.**
- 12. ALWAYS SET THE HYDRAULIC SELECTOR LEVER IN POSITION CONTROL WHEN ATTACHING EQUIPMENT AND WHEN TRANSPORTING EQUIPMENT. BE SURE HYDRAULIC COUPLERS ARE PROPERLY MOUNTED AND WILL DISCONNECT SAFELY IN CASE OF ACCIDENTAL DETACHMENT OF IMPLEMENT.**
- 13. DO NOT LEAVE EQUIPMENT IN THE RAISED POSITION.**
- 14. DO NOT OPERATE THE TRACTOR UNLESS ALL SHIELDS ARE INSTALLED.**



---

## **DRIVING THE TRACTOR**

- 1. WATCH WHERE YOU ARE GOING ESPECIALLY AT ROW ENDS, ON ROADS, AROUND TREES AND LOW HANGING OBSTACLES.**
- 2. TO AVOID UPSETS DRIVE THE TRACTOR WITH CARE AND AT SPEEDS COMPATIBLE WITH SAFETY, ESPECIALLY WHEN OPERATING OVER ROUGH GROUND, WHEN CROSSING DITCHES OR SLOPES, AND WHEN TURNING CORNERS.**
- 3. TO PROVIDE TWO WHEEL BRAKING, LOCK THE TRACTOR BRAKE PEDALS WHEN TRANSPORTING ON ROADS.**
- 4. KEEP THE TRACTOR IN THE SAME GEAR WHEN GOING DOWNHILL AS USED WHEN GOING UPHILL. DO NOT COAST OR FREE WHEEL DOWN HILLS.**
- 5. ANY TOWED VEHICLE WHOSE TOTAL WEIGHT EXCEEDS THAT OF THE TOWING TRACTOR MUST BE EQUIPPED WITH BRAKES FOR SAFE OPERATION.**
- 6. WHEN THE TRACTOR IS STUCK OR TIRES ARE FROZEN TO THE GROUND, REVERSE THE TRACTOR TO PREVENT OVERTURNING.**
- 7. ALWAYS CHECK OVERHEAD CLEARANCE, ESPECIALLY WHEN TRANSPORTING THE TRACTOR.**
- 8. DIM THE TRACTOR LIGHTS WHEN MEETING A VEHICLE AT NIGHT. MAKE SURE THE LIGHTS ARE ADJUSTED TO PREVENT BLINDING AN ONCOMING VEHICLE OPERATOR.**
- 9. USE THE FLASHER/TURN SIGNAL LIGHTS AND SLOW MOVING VEHICLE (SMV) SIGN WHEN TRAVELING ON PUBLIC ROADS, BOTH DAY AND NIGHT, UNLESS PROHIBITED BY LAW.**

---

## **OPERATING THE P.T.O.**

- 1. WHEN OPERATING P.T.O. DRIVEN EQUIPMENT, SHUT OFF THE ENGINE AND WAIT UNTIL THE P.T.O. STOPS BEFORE GETTING OFF THE TRACTOR AND DISCONNECTING THE EQUIPMENT.**
- 2. DO NOT WEAR LOOSE CLOTHING WHEN OPERATING THE POWER TAKE-OFF OR WHEN NEAR ROTATING EQUIPMENT.**
- 3. WHEN OPERATING STATIONARY P.T.O. DRIVEN EQUIPMENT, ALWAYS APPLY THE TRACTOR PARKING BRAKE AND BLOCK THE REAR WHEELS FRONT AND BACK.**
- 4. TO AVOID INJURY, DO NOT CLEAN, ADJUST, UNCLOG OR SERVICE P.T.O. DRIVEN EQUIPMENT WHEN THE TRACTOR ENGINE IS RUNNING.**
- 5. MAKE SURE THE TRACTOR MASTER P.T.O. GUARD IS IN POSITION AT ALL TIMES AND ALWAYS REPLACE THE P.T.O. CAP WHEN THE P.T.O. IS NOT IN USE.**
- 6. MAKE SURE THAT THE P.T.O. SELECTOR HANDLE IS IN THE NEUTRAL POSITION AND THE P.T.O. CLUTCH CONTROL LEVER IS IN THE ENGAGED POSITION WHEN THE P.T.O. IS NOT CONNECTED, OR WHEN THE P.T.O. IS CONNECTED BUT WILL BE DISENGAGED FOR EXTENDED PERIODS (2 MINUTES OR LONGER).**



**WARNING: TO AVOID INJURY BE AWARE THAT THE P.T.O., DRAWBAR AND THE 3-POINT HITCH ON THE HIGH CLEARANCE TRACTOR DO NOT CONFORM TO A.S.A.E. STANDARDS. EQUIPMENT DESIGNED SPECIFICALLY FOR HIGH CLEARANCE TRACTORS MUST BE USED.**

---

## **DIESEL FUEL**

- 1. UNDER NO CIRCUMSTANCES SHOULD GASOLINE, ALCOHOL OR BLENDED FUELS BE ADDED TO DIESEL FUEL. THESE COMBINATIONS CAN CREATE AN INCREASED FIRE OR EXPLOSIVE HAZARD. IN A CLOSED CONTAINER SUCH AS A FUEL TANK SUCH BLENDS ARE MORE EXPLOSIVE THAN PURE GASOLINE. DO NOT USE THESE BLENDS.**
- 2. NEVER REMOVE THE FUEL CAP OR REFUEL WITH THE ENGINE RUNNING OR HOT.**
- 3. DO NOT SMOKE WHILE REFUELING OR WHEN STANDING NEAR FUEL.**
- 4. MAINTAIN CONTROL OF THE FUEL FILLER PIPE NOZZLE WHEN FILLING THE TANK.**
- 5. DO NOT FILL THE FUEL TANK TO CAPACITY. ALLOW ROOM FOR EXPANSION.**
- 6. WIPE UP SPILLED FUEL IMMEDIATELY.**
- 7. ALWAYS TIGHTEN THE FUEL TANK CAP SECURELY.**
- 8. IF THE ORIGINAL FUEL TANK CAP IS LOST, REPLACE IT WITH A FORD NEW HOLLAND APPROVED CAP. A NON-APPROVED, PROPRIETARY CAP MAY NOT BE SAFE.**
- 9. KEEP EQUIPMENT CLEAN AND PROPERLY MAINTAINED.**
- 10. DO NOT DRIVE EQUIPMENT NEAR OPEN FIRES.**
- 11. NEVER USE FUEL FOR CLEANING PURPOSES.**
- 12. ARRANGE FUEL PURCHASES SO THAT SUMMER GRADE FUELS ARE NOT HELD OVER AND USED IN THE WINTER.**

---

## **SAFETY FRAME (ROPS)**

**YOUR FORD TRACTOR IS EQUIPPED WITH A SAFETY FRAME. IT MUST BE MAINTAINED IN A SERVICEABLE CONDITION. BE CAREFUL WHEN DRIVING THROUGH DOORWAYS OR WORKING IN CONFINED SPACES WITH LOW HEADROOM.**


**UNDER NO CIRCUMSTANCES:**

- 1. MODIFY, DRILL OR ALTER THE SAFETY FRAME IN ANY WAY, AS DOING SO COULD RENDER YOU LIABLE TO LEGAL PROSECUTION.**
- 2. ATTEMPT TO STRAIGHTEN OR WELD ANY PART OF THE MAIN FRAME OR RETAINING BRACKETS WHICH HAVE SUFFERED DAMAGE. BY DOING SO YOU MAY WEAKEN THE STRUCTURE AND ENDANGER YOUR SAFETY.**
- 3. SECURE ANY PARTS ON THE MAIN FRAME OR ATTACH YOUR SAFETY FRAME WITH OTHER THAN THE SPECIAL HIGH TENSILE BOLTS AND NUTS SPECIFIED.**
- 4. ATTACH CHAINS OR ROPES TO THE MAIN FRAME FOR PULLING PURPOSES.**
- 5. TAKE UNNECESSARY RISKS EVEN THOUGH YOUR SAFETY FRAME AFFORDS YOU THE MAXIMUM PROTECTIONS POSSIBLE.**


## SAFETY DECALS

The following decals have been placed on your machine in the areas indicated. They are intended for your safety and for those working with you. Please take this manual and walk around your machine to note the content and location of these warning signs. Review these warning signs and the operating instructions detailed in this manual with your machine operators.


Keep the decals legible. If they are not, obtain replacements from your Ford New Holland dealer.

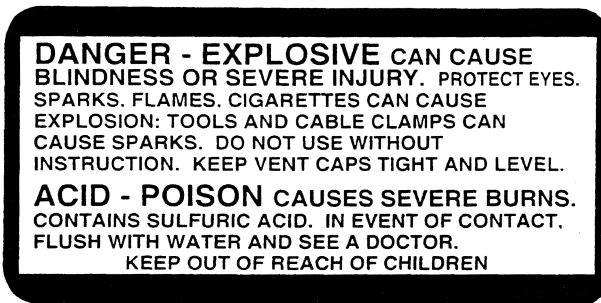

Location: Top of battery

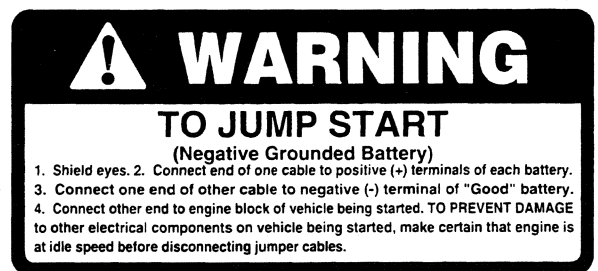


Location: Top of battery

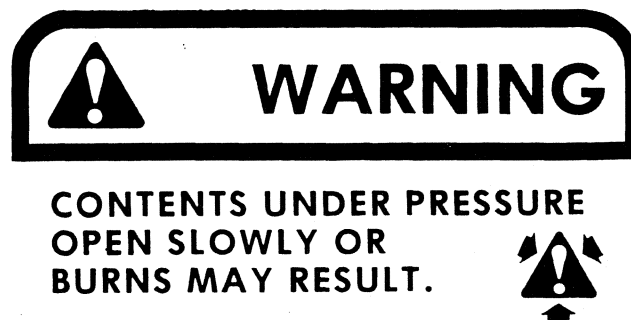


Location: Underside of radiator cap access door



Location: Both sides of radiator fan shroud

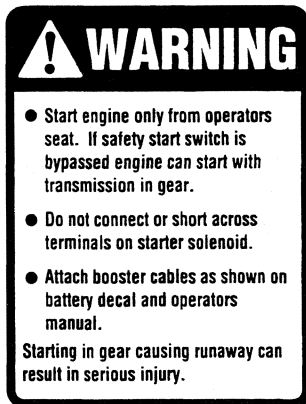

Location: Drip cover over starting motor

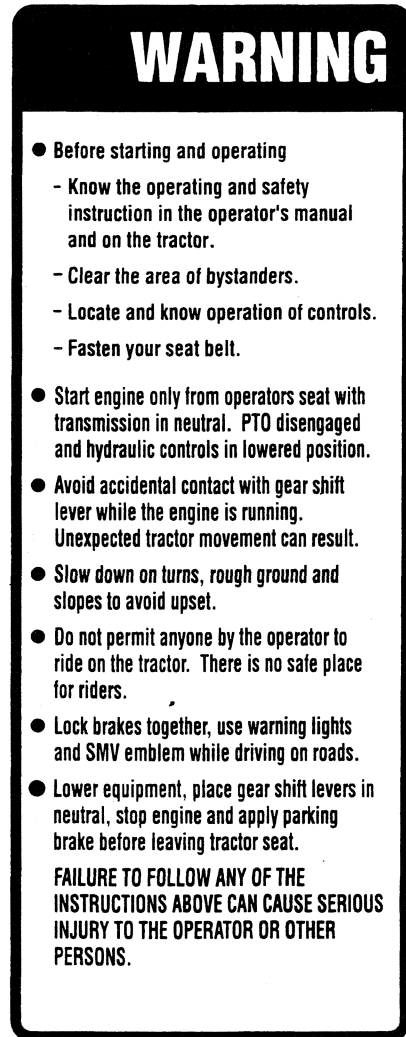

Location: Front of left-hand fender



Location: Park brake lever

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)