



FORD

Operator's Manual

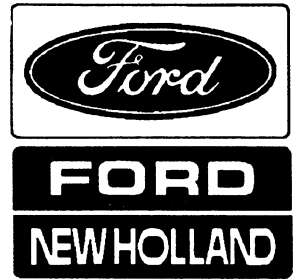

8210 with
Electro-Link™
Hydraulic Control

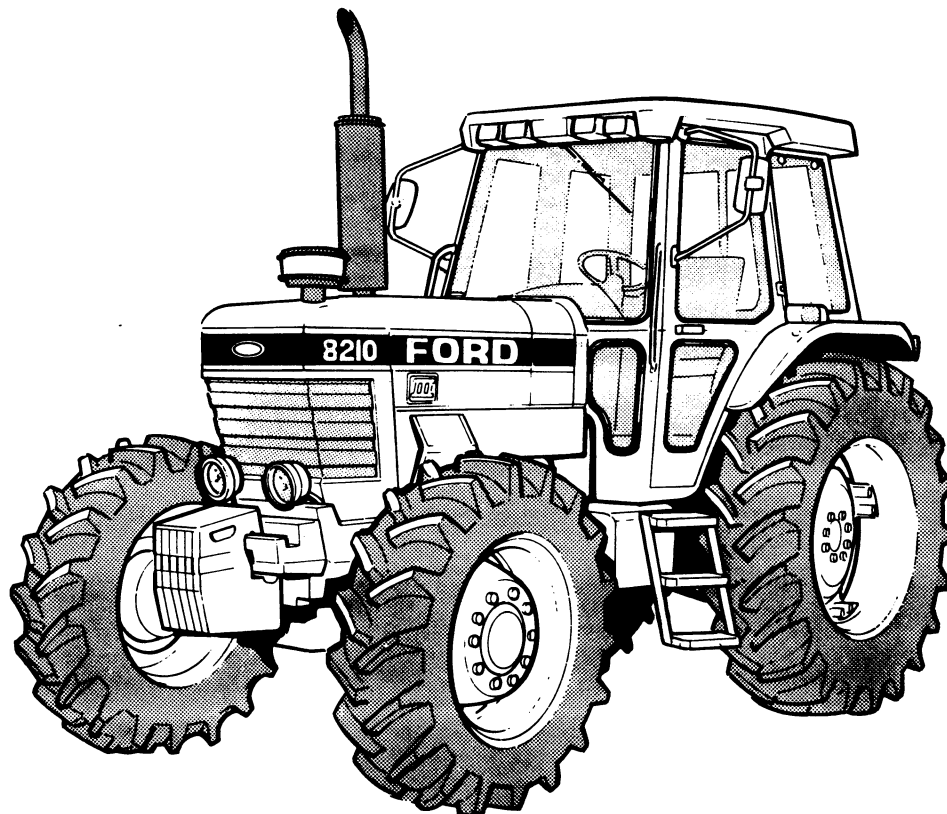



DEAR CUSTOMER – PLEASE READ CAREFULLY

The warranty coverage that is extended to your Ford Tractor is explained in the Warranty and Limitation of Liability, Ford Tractor form. Your dealer will provide you with a copy of the warranty and retain a copy which you have signed. After you read the warranty, ask your dealer to explain any points that you may not understand.

Do not modify or alter or permit anyone else to modify or alter this tractor or any of its components or any tractor function without first consulting a Ford New Holland Dealer. If you have any questions regarding tractor modifications contact Ford New Holland, Inc., at one of the addresses shown overleaf.

A Roll Over Protective Structure (ROPS) and seat belt were standard equipment for the tractor at time of factory assembly. If the ROPS was deleted by the original purchaser or has been removed, it is recommended that you equip your tractor with a Roll Over Protective Structure (ROPS) and seat belt. ROPS safety cabs are effective in reducing injuries during tractor overturn accidents. Overturning a tractor without a ROPS or safety cab can result in serious injury or death.

Roll Over Protective Structure (ROPS) safety cabs and seat belts are available for your Ford tractor. If your tractor is not equipped with a ROPS or safety cab and seat belt see your Ford New Holland Dealer.

Your safety and the safety of those around you depends upon the care and good judgment you use while operating this equipment. Read the safety precautions carefully.

For a complete list of the pre-delivery service checks performed by your dealer, refer to PRE-DELIVERY SERVICE on the upper portion of the following two pages. The first copy is your record of the service performed and the second copy, which is to be removed from the manual, is your dealer's record. **MAKE SURE THAT YOU AND THE DEALER SIGN BOTH COPIES.**

After you have operated your tractor for fifty hours, take the manual and your tractor to your dealer. He will then perform the factory recommended 50-HOUR SERVICE as listed on the lower portion of the following two pages. **MAKE SURE THAT YOU AND THE DEALER SIGN BOTH COPIES.**

PARTS AND SERVICE CATALOGUES AVAILABLE!

Ford New Holland is pleased to announce to owners of Ford tractors and equipment the availability of numerous parts and service catalogues.

To obtain these catalogues merely fill out the order form available from your local authorised Ford New Holland Dealer.

OWNER ASSISTANCE

We at Ford New Holland and your Ford New Holland dealer want you to be completely satisfied with your investment. Normally any problems with your equipment will be handled by your dealer's Service Department. Sometimes, however, misunderstanding can occur. If your problem has not been handled to your satisfaction, we suggest the following.

1. Contact the owner or General Manager of the dealership, explain the problem, and request assistance. When additional assistance is needed, your dealer has direct access to our branch office.
2. If you cannot obtain satisfaction by doing this, contact the Ford New Holland branch office in your area and provide them with:
 - Your name, address, and telephone number
 - Machine model and serial number
 - Dealership name and address
 - Machine purchase date and amount of use
 - Nature of problem

Atlanta

2000 Mountain Ind. Blvd.
Tucker, GA 30084
Telephone: (404) 723-3615

New Holland

500 Diller Avenue
New Holland, PA 17557
Telephone: (717) 355-3951

Calgary

Box 1616, Main P.O.
Calgary, AB
CANADA T2P 2M7
Telephone: (403) 569-3208

Dallas

P.O. Box 10227
Dallas, TX 75207
Telephone: (214) 939-4919

San Francisco

P.O. Box 6100
Fairfield, CA 94533
Telephone: (707) 423-9200

Toronto

P.O. Box 3610
Guelph, ON
CANADA N1H 6P1
Telephone: (519) 767-4824

Kansas City

P.O. Box 14550
Lenexa, KS 66219
Telephone: (913) 894-3387

Troy

1315 Coolidge Avenue
Troy, MI 48084
Telephone: (313) 637-9382

Minneapolis

P.O. Box 1342
Minneapolis, MN 55440
Telephone: (612) 887-4232

3. If you need further assistance contact:

*Consumer Services Department
Mail Station 500
Ford New Holland, Inc.
New Holland, PA 17557
Telephone: (717) 355-1545*

When contacting Ford New Holland's branch office or Consumer Services Department, be aware that your problem will likely be resolved in the dealership using the dealer's facilities, equipment, and personnel. So it is important that your initial contact be with the dealer.



**FORD NEW HOLLAND INC. AND
FORD NEW HOLLAND CANADA LTD.**

WARRANTY AND LIMITATION OF LIABILITY — COMMERCIAL PRODUCTS

COVERAGE PROVIDED

Ford New Holland Inc. or Ford New Holland Canada Ltd., hereinafter called the “Company” warrants to the retail purchaser of each new Ford brand Commercial Product (as listed below) that the Selling Dealer will repair or replace any part thereof found to be defective in materials or workmanship within the following periods:

BASIC WARRANTY

Commercial Product	Warranty Period
TW Series Agricultural Tractors	36 Months/2500 Hrs.
Other Agricultural, Industrial and Utility Tractors	12 Months
Equipment, Attachments and Implements for Agricultural, Industrial and Utility Tractors	12 Months
Compact Loaders.....	12 months

Extended Power Train Warranty for Series 1000 through 8000

Selected agricultural tractor power train components on all components on all Series 1000 through 8000 agricultural tractors are covered for a period of 24 months provided that the tractor has not been used more than a total of 1,500 hours. The power train components covered by this warranty consist of the following:

ENGINE — The rocker arm cover, cylinder head, engine block, crankcase pan and timing gear cover of the engine, and the parts fully enclosed within these units.

TRANSMISSION AND REAR AXLE — The clutch housing, transmission case, dual power housing, differential housing, final drive housings, transfer case, front wheel drive housing and parts fully enclosed within these housings, including the drive axles, but excluding the hydraulic lift cover and its components.

The warranty period will begin on date of original retail sale or date of original use, whichever is earlier.

- The obligation of the Company to the purchaser under this warranty is limited to the repair or replacement of defective parts, which will be made free of charge for both parts and labor using Ford New Holland service parts. Repair or replacement in accordance with this warranty shall constitute fulfilment of all liabilities of the Company and the Selling Dealer in respect to such Commercial Products.
- Repairs or replacements will be performed by the Selling Dealer, following delivery of the Commercial Product by the purchaser to the Selling Dealer’s place of business.
- If the purchaser has moved a long distance from the Selling Dealer, any Ford New Holland dealer authorized to sell and service Ford brand Commercial Products may perform the repair at its dealership.
- The Selling Dealer shall review these warranty provisions with the purchaser prior to retail sale, secure his acknowledgement of delivery of this warranty and record the date of original retail sale or date of original use.

WHAT IS NOT COVERED BY THE WARRANTY

1. This warranty shall **NOT** apply under the following conditions:
 - (i) With respect to vendor warranty items such as tires, tubes, engines and attachments.
 - (ii) If the unit has been subject to misapplication, abuse, misuse, negligence of proper maintenance or other negligence, fire or other accident.
 - (iii) If parts other than those made or marketed by Ford New Holland Inc. or Ford New Holland Canada Ltd., have been used in connection with the unit and in the sole judgment of the Company such use affects its performance, stability or reliability.

- (iv) If the unit has been altered or repaired outside of a Ford New Holland dealership in a manner which, in the sole judgment of the Company, affects its performance, stability or reliability.
- (v) With respect to batteries which are covered by a separate pro rata adjustment warranty.
- 2. This warranty shall **NOT** apply to normal maintenance services (such as tune-ups, fuel injection system cleaning and wheel, brake and clutch adjustments), to normal replacement of service items (such as filters and brake or clutch linings), or to normal deterioration due to use or exposure (such as belts and exterior finish).
- 3. This warranty shall **NOT** apply to any Commercial Product which is distributed by anyone other than Ford New Holland Inc. or Ford New Holland Canada Ltd., through its authorized dealer. This warranty shall **NOT** apply to any Commercial Product which is normally operated outside of the United States and/or Canada.

LIMITATIONS, INCLUDING DISCLAIMER OF IMPLIED WARRANTIES AND CONSEQUENTIAL DAMAGES

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Ford New Holland Inc. or Ford New Holland Canada Ltd., does not authorize any person to create for it any other obligation or liability in connection with these commercial products. TO THE EXTENT ALLOWED BY LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS APPLICABLE TO THIS COMMERCIAL PRODUCT IS LIMITED TO THE STATED DURATION OF THIS WRITTEN WARRANTY. NEITHER COMPANY NOR THE SELLING DEALER SHALL BE LIABLE FOR LOSS OF THE USE OF THE COMMERCIAL PRODUCT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

The remedy of repair or replacement of a defective part during the warranty period herein specified shall be the purchaser's exclusive remedy.

RIGHT TO MAKE DESIGN CHANGES

The Company reserves the right to make changes in the design and other changes in its products at any time and from time to time without notice and without incurring any obligation with respect to any product previously ordered from it, sold or shipped by it.

EXTENDED SERVICE PLAN (ESP)

The optional extended service plan has been explained to me and I:

- accept and have signed the completed registration form
- decline the extended service plan

PROTECTIVE EQUIPMENT

Rollover protective structure (ROPS) and seat belts are provided as standard equipment on all Ford brand agricultural (except orchard and vineyard) and industrial tractors and we strongly recommend their use. Customers who elect to remove or not use this equipment do so at their own risk.

- I acknowledge the existence of OSHA regulations pertaining to ROPS. ____
- A PTO master shield has been furnished with delivery of the machine. ____
- The correct Operator's Manual has been furnished. ____
- Safety precautions were explained to me by the selling dealer. ____

PRE-DELIVERY SERVICE – CHECK AND ADJUST AS REQUIRED

INOPERATIVE SERVICE CHECKS:

- 1. Tyre pressure
- 2. Air cleaner and hose connections
- 3. Radiator coolant level and specific gravity (1.071–1.083 at 60°F)
- 4. All belt tensions
- 5. Battery cleanliness, vent openings, electrolyte level, and specific gravity not less than 1.240
- 6. Check all electrical cables and wire routings are away from sharp edges, moving parts and exhaust heat ..
- 7. Engine oil level
- 8. Hydraulic system (rear axle and transmission) oil level
- 9. Upper link, drawbar and pin in position
- 10. Power steering reservoir oil level.....
- 11. Brake pedal free travel equalization and pedal lock.....
- 12. Clutch pedal free travel
- 13. Front wheel toe-in
- 14. Front and rear wheel-to-rim clamp bolts and lock nuts for tightness.....
- 15. Front and rear hub nuts and bolts for tightness.....
- 16. Fuel level
- 17. Sheet metal and paint condition
- 18. Lift rod levelling crank and sleeves for proper operation
- 19. Drain diesel fuel filter and water separator

- 20. Trailer brake reservoir oil level.....
- 21. Front axle differential oil level.....
- 22. Front axle hub oil level.....
- 23. Check front weight clamp bolts for tightness
- 24. Check seat mounting and adjustment.....
- 25. Front axle support bolts for tightness
- 26. Front axle spindle nuts for proper tightness
- 27. Cab door and lock operation and seal condition.....
- 28. Cab interior upholstery, trim and moldings.....
- 29. Cab window operation, window props and latches, seal condition.....
- 30. Cab sun visor operation
- 31. Cab filter installation

- 6. Hydraulic System:**
- Selection control for Draft and Position Control operation
 - Drop rate control operation.....
 - Remote control valve including flow control operation
 - External hyd. control system
7. Windshield wiper/washer 2 speed operation
8. Heater temperature control
9. Pressurizer fan 3 speed operation
10. Air conditioner operation

PERFORMANCE SERVICE CHECKS:

- 1. Engine operation including throttle and governor operation
- 2. Transmission, including clutch
- 3. Steering control.....
- 4. Differential lock engagement and disengagement
- 5. Brake action.....
- 6. All optional equipment and accessories

SAFETY ITEMS CHECKS:

- 1. ROPS installed
- 2. Seat belt installed (with ROPS only).....
- 3. P.T.O. master shield installed
- 4. SMV emblem installed
- 5. Safety decals installed
- 6. Flashing lights/tail lights
- 7. Safety start switch operation.....
- 8. Park brake operation
- 9. Operator's Manual.....

OPERATIVE SERVICE CHECKS:

- All operative checks are to be performed with the tractor at normal operating temperature.
- 1. Lights and instruments for proper operation
 - 2. Fluid and oil leaks
 - 3. Diesel maximum no-load speed and idle speed adjustments and fuel shut-off
 - 4. Throttle linkage adjustment
 - 5. P.T.O. engagement and disengagement

INSPECTION PERFORMED – WARRANTY EXPLAINED TRACTOR MODEL NO. TRACTOR SERIAL NO.

owner's signature _____ date _____ dealer's signature _____ date _____

DEALER COPY

50-HOUR SERVICE – CHECK AND ADJUST AS REQUIRED

INOPERATIVE SERVICE CHECKS:

- 1. Tyre pressure
- 2. Air cleaner, pre cleaner and hose connections.....
- 3. Drain diesel fuel filter and water separator and bleed system.....
- 4. Radiator coolant level
- 5. All belt tensions
- 6. Battery cleanliness and vent openings, electrolyte level, and specific gravity not less than 1.240
- 7. Check all electrical cables and wire routings are away from sharp edges, moving parts and exhaust heat ..
- 8. Drain and refill engine oil
- 9. Replace engine oil filter.....
- 10. Replace hydraulic oil filters
- 11. Clutch pedal free travel
- 12. Brake pedal free travel, equalization and pedal lock.....
- 13. Hydraulic system (rear axle and transmission) oil level
- 14. Power steering reservoir oil level.....
- 15. Front and rear wheel-to-rim clamp bolts and lock nuts for tightness.....
- 16. Check front and rear wheel nuts for tightness

- 17. Adjust valve clearances
- 18. Lubrication fittings and pivots
- 19. Check trailer brake oil reservoir.....
- 20. Change front axle differential oil
- 21. Change front axle hub oil
- 22. Front axle spindle nuts for proper tightness
- 23. Check front weight clamp bolts for tightness
- 24. Cab door and lock operation and seal condition.....
- 25. Cab interior upholstery, trim and moldings.....
- 26. Cab window operation, window props and latches, seal condition.....
- 27. Cab sun visor operation
- 28. Cab filter installation

- 5. Hydraulic System:**
- Lift control adjustment
 - Selection lever for Draft and Position Control operation
 - Drop rate control operation.....
 - Remote control valve including flow control operation
 - External hyd. control system
6. Windshield wiper/washer 2 speed operation
7. Heater temperature control
8. Pressurizer fan 3 speed operation
9. Air conditioner operation

PERFORMANCE SERVICE CHECKS:

- 1. Engine operation including throttle and governor operation
- 2. Transmission, including clutch
- 3. Steering control.....
- 4. Differential lock engagement and disengagement
- 5. Brake action.....
- 6. All optional equipment and accessories

SAFETY ITEMS CHECKS:

- 1. ROPS bolt torque.....
- 2. Seat belt condition and bolt torque.....
- 3. Safety start switch.....

OPERATIVE SERVICE CHECKS:

- All operative checks are to be performed with the tractor at normal operating temperature.
- 1. Lights and instruments for proper operation
 - 2. Fluid and oil leaks
 - 3. Engine maximum no-load speed and idle speed adjustments and fuel shut-off
 - 4. Throttle linkage adjustment

INSPECTION PERFORMED – WARRANTY EXPLAINED TRACTOR MODEL NO. TRACTOR SERIAL NO.

owner's signature _____ date _____ dealer's signature _____ date _____

DEALER COPY

PRE-DELIVERY SERVICE – CHECK AND ADJUST AS REQUIRED

INOPERATIVE SERVICE CHECKS:

1. Tyre pressure
2. Air cleaner and hose connections
3. Radiator coolant level and specific gravity (1.071–1.083 at 60°F)
4. All belt tensions
5. Battery cleanliness, vent openings, electrolyte level, and specific gravity not less than 1.240
6. Check all electrical cables and wire routings are away from sharp edges, moving parts and exhaust heat ..
7. Engine oil level
8. Hydraulic system (rear axle and transmission) oil level
9. Upper link, drawbar and pin in position
10. Power steering reservoir oil level
11. Brake pedal free travel equalization and pedal lock
12. Clutch pedal free travel
13. Front wheel toe-in
14. Front and rear wheel-to-rim clamp bolts and lock nuts for tightness
15. Front and rear hub nuts and bolts for tightness
16. Fuel level
17. Sheet metal and paint condition
18. Lift rod levelling crank and sleeves for proper operation
19. Drain diesel fuel filter and water separator

20. Trailer brake reservoir oil level
21. Front axle differential oil level
22. Front axle hub oil level
23. Check front weight clamp bolts for tightness
24. Check seat mounting and adjustment
25. Front axle support bolts for tightness ...
26. Front axle spindle nuts for proper tightness
27. Cab door and lock operation and seal condition
28. Cab interior upholstery, trim and moldings
29. Cab window operation, window props and latches, seal condition
30. Cab sun visor operation
31. Cab filter installation

OPERATIVE SERVICE CHECKS:

- All operative checks are to be performed with the tractor at normal operating temperature.
1. Lights and instruments for proper operation
 2. Fluid and oil leaks
 3. Diesel maximum no-load speed and idle speed adjustments and fuel shut-off
 4. Throttle linkage adjustment
 5. P.T.O. engagement and disengagement

6. Hydraulic System:

- Selection control for Draft and Position Control operation
- Drop rate control operation
- Remote control valve including flow control operation
- External hyd. control system
- 7. Windshield wiper/washer 2 speed operation
- 8. Heater temperature control
- 9. Pressurizer fan 3 speed operation
- 10. Air conditioner operation

PERFORMANCE SERVICE CHECKS:

1. Engine operation including throttle and governor operation
2. Transmission, including clutch
3. Steering control
4. Differential lock engagement and disengagement
5. Brake action
6. All optional equipment and accessories

SAFETY ITEMS CHECKS:

1. ROPS installed
2. Seat belt installed (with ROPS only)
3. P.T.O. master shield installed
4. SMV emblem installed
5. Safety decals installed
6. Flashing lights/tail lights
7. Safety start switch operation
8. Park brake operation
9. Operator's Manual

INSPECTION PERFORMED – WARRANTY EXPLAINED TRACTOR MODEL NO. TRACTOR SERIAL NO.

owner's signature

date

dealer's signature

date

50-HOUR SERVICE – CHECK AND ADJUST AS REQUIRED

INOPERATIVE SERVICE CHECKS:

1. Tyre pressure
2. Air cleaner, pre cleaner and hose connections
3. Drain diesel fuel filter and water separator and bleed system
4. Radiator coolant level
5. All belt tensions
6. Battery cleanliness and vent openings, electrolyte level, and specific gravity not less than 1.240
7. Check all electrical cables and wire routings are away from sharp edges, moving parts and exhaust heat ..
8. Drain and refill engine oil
9. Replace engine oil filter
10. Replace hydraulic oil filters
11. Clutch pedal free travel
12. Brake pedal free travel, equalization and pedal lock
13. Hydraulic system (rear axle and transmission) oil level
14. Power steering reservoir oil level
15. Front and rear wheel-to-rim clamp bolts and lock nuts for tightness
16. Check front and rear wheel nuts for tightness

17. Adjust valve clearances
18. Lubrication fittings and pivots
19. Check trailer brake oil reservoir
20. Change front axle differential oil
21. Change front axle hub oil
22. Front axle spindle nuts for proper tightness
23. Check front weight clamp bolts for tightness
24. Cab door and lock operation and seal condition
25. Cab interior upholstery, trim and moldings
26. Cab window operation, window props and latches, seal condition
27. Cab sun visor operation
28. Cab filter installation

OPERATIVE SERVICE CHECKS:

- All operative checks are to be performed with the tractor at normal operating temperature.
1. Lights and instruments for proper operation
 2. Fluid and oil leaks
 3. Engine maximum no-load speed and idle speed adjustments and fuel shut-off
 4. Throttle linkage adjustment

5. Hydraulic System:

- Lift control adjustment
- Selection lever for Draft and Position Control operation
- Drop rate control operation
- Remote control valve including flow control operation
- External hyd. control system
- 6. Windshield wiper/washer 2 speed operation
- 7. Heater temperature control
- 8. Pressurizer fan 3 speed operation
- 9. Air conditioner operation

PERFORMANCE SERVICE CHECKS:

1. Engine operation including throttle and governor operation
2. Transmission, including clutch
3. Steering control
4. Differential lock engagement and disengagement
5. Brake action
6. All optional equipment and accessories

SAFETY ITEMS CHECKS:

1. ROPS bolt torque
2. Seat belt condition and bolt torque
3. Safety start switch

INSPECTION PERFORMED – WARRANTY EXPLAINED TRACTOR MODEL NO. TRACTOR SERIAL NO.

owner's signature

date

dealer's signature

date


FOREWORD

This Manual has been prepared to assist you in the correct procedure for running-in, operation and maintenance of your new Ford tractor.

Your tractor has been designed and built to give maximum performance, economy and ease of operation under a wide variety of operating conditions. Prior to delivery, the tractor was carefully inspected, both at the factory and by your Ford tractor dealer to ensure that it reaches you in optimum condition. To maintain this condition and ensure trouble-free operation, it is important that the routine services, as specified in this Manual, are carried out at the recommended intervals.

Read this Manual carefully and keep it in a convenient place for future reference. If at any time you require advice concerning your tractor, do not hesitate to contact your authorised Ford tractor dealer. He has factory trained personnel, genuine Ford parts and the necessary equipment to carry out your service requirements.

A vehicle identification plate is located under the radiator cap access panel or low down on the right-hand side of the instrument console. If your tractor is equipped with four wheel drive transmission, then a similar plate is affixed to the rear of the front axle casing. For convenience, the numbers shown on the plates should be recorded in the panels below and quoted to your Ford tractor dealer should the tractor require service.

FORD NEW HOLLAND INC. NEW HOLLAND, PENNSYLVANIA	
TRACTOR NUMBER []	
MODEL []	FORD
UNIT []	NEW HOLLAND
ENGINE []	
TRANSMISSION []	REAR AXLE []
HYDRAULIC PUMP []	HYDRAULIC LIFT []

Vehicle Identification Plate

AXLE TYPE []	SERIAL NUMBER []	
REF. NUMBER []	TOTAL RATIO []	
INPUT ROT. []	DIFF. TYPE []	
OIL SPECIFIC []	LIT. []	LOCATION []
[]	[]	DIFF. []
[]	[]	EPIC. []
[]		

Front Axle Identification Plate

Ford New Holland policy is one of continuous improvement, and the right to change prices, specification or equipment at any time without notice is reserved.

All data given in this book is subject to production variations. Dimensions and weights are approximate only and the illustrations do not necessarily show tractors in standard condition. For exact information about any particular tractor please consult your Ford tractor dealer.

SAFETY PRECAUTIONS

A careful operator is the best operator. Most accidents can be avoided by observing certain precautions. To help prevent accidents read and take the following precautions before operating the tractor. Equipment should be operated only by those who are responsible and instructed to do so.

THE TRACTOR

1. Read the Operator's Manual carefully before using the tractor. Lack of operating knowledge can lead to accidents.
2. If your tractor is equipped with a ROPS or safety cab, use an approved Seat Belt for safe operation. Overturning a tractor can result in death or injury. If your tractor is not equipped with a seat belt, see your Ford tractor dealer.
3. If a front end loader is to be installed, always use a FOPS canopy to avoid injury from falling objects.
4. Use the handholds and step plates when getting on and off the tractor to prevent falls. Keep steps and platform clear of mud and debris.
5. Do not permit anyone but the operator to ride on the tractor unless a passenger seat is fitted. There is no safe place for extra riders otherwise.
6. Replace all missing, illegible, or damaged safety decals.
7. Keep safety decals clean of dirt and grime.
9. The fuel oil in the injection system is under high pressure and can penetrate the skin. Unqualified persons should not remove or attempt to adjust a pump, injector, nozzle or any other part of the fuel injection system. Failure to follow these instructions can result in serious injury.

SERVICING THE TRACTOR

1. The cooling system operates under pressure which is controlled by the radiator cap. It is dangerous to remove the cap while the system is hot. Always turn the cap slowly to the first stop and allow the pressure to escape before removing the cap entirely.
2. Do not smoke while refuelling the tractor. Keep any type of open flame away. Wait for the engine to cool before refuelling.
3. Keep the tractor and equipment, particularly brakes and steering, maintained in a reliable and satisfactory condition to ensure your safety and comply with legal requirements.
4. To prevent fires or explosions keep open flames away from battery or cold weather starting aids. To prevent sparks which could cause explosion, use jumper cables according to instructions.
5. Stop the engine before performing any service on the tractor.
6. Escaping hydraulic/diesel fluid under pressure can penetrate the skin causing serious injury.
 - **DO NOT** use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks.
 - Stop the engine and relieve pressure before connecting or disconnecting lines.
 - Tighten all connections before starting the engine or pressurizing lines.
 - If fluid is injected into the skin obtain medical attention immediately or gangrene may result.
7. Do not attempt to service the air conditioning system. It is possible to be severely frostbitten or injured by escaping refrigerant. See your dealer for service.
8. Do not modify or alter or permit anyone else to modify or alter this tractor or any of its components or any tractor function without first consulting your Ford tractor dealer.

10. Continuous long term contact with used engine oil may cause skin cancer. Avoid prolonged contact with used engine oil. Wash skin promptly with soap and water.
11. Some components on your tractor, such as gaskets and friction surfaces (brake linings, clutch linings, etc), may contain asbestos. Breathing asbestos dust is dangerous to your health. You are therefore advised to have any maintenance or repair operations on such components carried out by an authorised Ford tractor dealer. If, however, service operations are to be undertaken on parts that contain asbestos, the essential precautions listed below must be observed:
 - Work out of doors or in a well ventilated area.
 - Dust found on the tractor or produced during work on the tractor should be removed by extraction not by blowing.
 - Dust waste should be dampened, placed in a sealed container and marked to ensure safe disposal.
 - If any cutting, drilling, etc., is attempted on materials containing asbestos, the item should be dampened and only hand tools or low speed power tools used.
12. Tractor wheels are very heavy. Handle with care and ensure, when stored, that they cannot topple and cause injury.

OPERATING THE TRACTOR

1. Apply the parking brake, place the P.T.O. lever in the "OFF" position, the lift control lever in the down position, the remote control valve levers in the neutral position and the transmission in neutral before starting the tractor.
2. Do not start the engine or operate any controls, other than the hydraulic lift external controls, unless you are properly seated on the tractor.
3. Do not bypass the safety start switch. Consult your Ford tractor dealer if your safety start controls malfunction. Use jumper cables only in the recommended manner. Improper use can result in a tractor runaway.
4. Avoid accidental contact with the gear shift lever while the engine is running. Unexpected tractor movement can result from such contact.
5. Do not get off the tractor while it is in motion.
6. Always apply the parking brake before getting off the tractor. Additionally, unless operating the hydraulic lift external controls, stop the engine before getting off the tractor.
7. Do not park the tractor on a steep incline.
8. Do not operate the tractor engine in an enclosed building without adequate ventilation. Exhaust fumes can cause death.
9. If the power steering or engine ceases operating, stop the tractor immediately.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com