

ORIGINAL INSTRUCTIONS - according to Directive 2006/42/EC, Annex I 1.7.4.1


OPERATOR'S MANUAL

T4.55

T4.65

T4.75

PowerStar Series

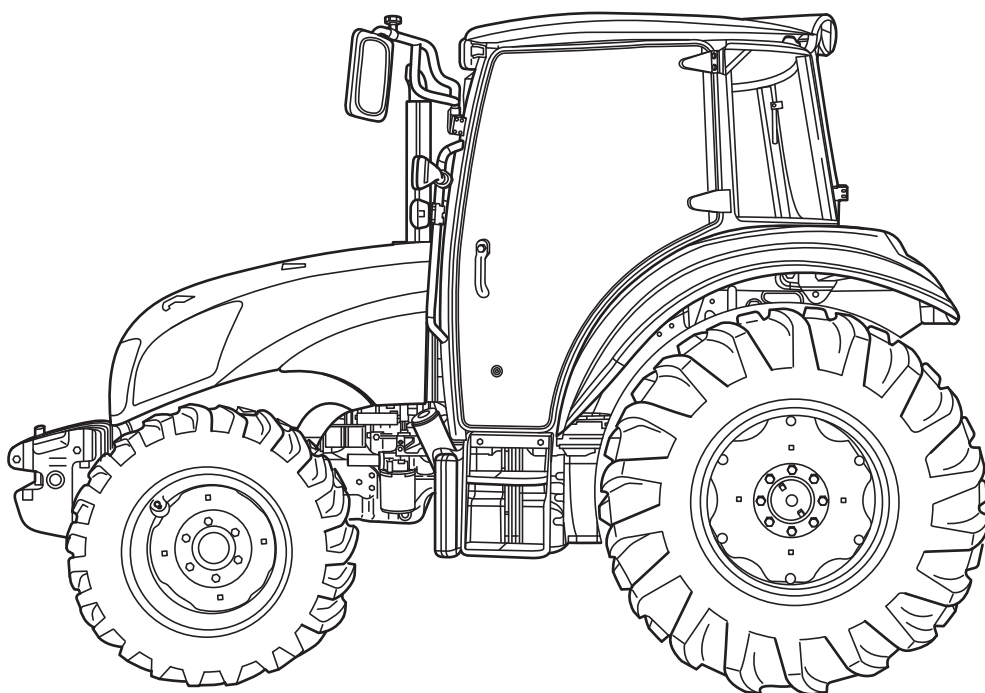

Part Number 47374315

English
June 2012



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
EC Declaration of Conformity	1-2
Commission Directive 2010/52/EU	1-4
Airborne noise emission	1-11
Vibration levels	1-12
Electro-magnetic interference (EMC).....	1-13
Metric and Imperial units abbreviations	1-14
Introduction	1-16
Tractor intended use.....	1-17
Ecology and the environment	1-19
Identification plates	1-20
Approval data plate.....	1-22
Component Identification	1-23

2 SAFETY INFORMATION

Safety rules	2-1
Safety information	2-2
Air conditioning safety regulations.....	2-6
Roll over protective structure (ROPS).....	2-7
Cab guard	2-8
Machine stability	2-10
Personal protective equipment (PPE).....	2-12
Tractor jacking points.....	2-13
Hazardous chemicals.....	2-14
Burn prevention.....	2-15
Fire or explosion prevention	2-16
Getting in and out of the machine	2-17
Safety signs	2-18

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

General Information	3-1
Cab	3-2
Heating, ventilation or air-conditioning control	3-6

OPERATOR'S SEAT

Operator seat.....	3-8
Seat belt.....	3-11

INSTRUCTOR'S SEAT

Instructor's seat.....	3-12
------------------------	------

FORWARD CONTROLS

Instrument cluster	3-12
--------------------------	------

Front controls	3-16
----------------------	------

LEFT-HAND SIDE CONTROLS

Console Left-hand console - Localisation overview	3-19
---	------

RIGHT-HAND SIDE CONTROLS

Console Right-hand console - Localisation overview	3-20
--	------

EXTERIOR CONTROLS

Battery disconnect switch	3-22
Power sockets	3-22

Display setup

Speed calibration	3-23
-------------------------	------

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Basic operating safety rules	4-1
------------------------------------	-----

STARTING THE UNIT

Starting the Engine	4-3
---------------------------	-----

STOPPING THE UNIT

Stopping the engine	4-4
---------------------------	-----

MOVING THE UNIT

Machine movement start-up	4-4
Transmission operation	4-6
12 x 12 transmission speed table	4-8
Speed table for 12 x 12 gearbox with additional reducer (20 x 20)	4-10

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Transporting the machine	5-1
--------------------------------	-----

RECOVERY TRANSPORT

Towing the tractor	5-2
--------------------------	-----

6 WORKING OPERATIONS

Four-Wheel Drive (4WD) system	
Four-wheel drive with mechanical engagement.....	6-1
Four-wheel drive with electro-hydraulic control.....	6-2
MECHANICAL DIFFERENTIAL LOCK	
Mechanical differential lock.....	6-3
REAR POWER TAKE-OFF	
Safety precautions.....	6-4
General.....	6-5
Non-synchronised power take-off.....	6-6
Synchronised power take-off.....	6-7
REMOTE CONTROL VALVES	
Safety precautions.....	6-9
Operation.....	6-10
Quick-release coupler problems.....	6-12
MECHANICALLY CONTROLLED HYDRAULIC LIFT	
Header/Attachment height system - Adjust.....	6-14
Header/Attachment height system - Operating.....	6-15
THREE-POINT LINKAGE	
Rear three-point hitch - Operating.....	6-16
Additional equipment attachment points.....	6-19
TOWBAR	
Safety rules.....	6-20
Swinging drawbar.....	6-21
REAR TOW HITCH	
Safety rules.....	6-22
Towing hitch.....	6-23
MAXIMUM PERMITTED LOADS	
Front and rear axle.....	6-27
Towbar.....	6-29
Towing hitch.....	6-29
WHEELS AND TIRES	
Wheels and tires.....	6-30
Tyre dimensions.....	6-34
WHEEL TRACK ADJUSTMENT	

Adjustment of the front tracks	6-36
Adjustment of the front mudguards	6-38
Adjustment of the steering angles	6-40
Front tracks diagram	6-41
Rear tracks diagram	6-43

BALLAST

Safety rules	6-44
Metal ballast	6-45
Liquid Ballast	6-46

7 MAINTENANCE

GENERAL INFORMATION

General safety before you service	7-1
Introduction	7-3
Various controls	7-4
Break-in period	7-5
Fuel supply	7-6
Biodiesel fuel - Biodiesel Fuels	7-7
Body maintenance	7-8
Fluids and lubricants	7-10
Opening the hood	7-12

AS REQUIRED

Radiator expansion tank	7-13
Windshield washer reservoir	7-13
Light adjustments	7-13
Park brake	7-14
Distributor oil recovery pan	7-14
Clutch pedal adjustment	7-14
Radiator - Cleaning	7-15
Transmission oil heat exchanger Models with POWER SHUTTLE	7-15
Air conditioning condenser	7-15
Brake pedals	7-16
Tire pressure	7-16
Wheel bolt torque	7-17

At warning message display

Engine air filters	7-18
Fuel filter water drain	7-19
Brake fluid level	7-19

EVERY 10 HOURS OR EACH DAY

Engine oil level	7-20
------------------------	------

EVERY 50 HOURS

Lifting device and tool attachment device	7-21
Front axle trunnion	7-21
Front axle trunnion and 2WD steering cylinder.....	7-21
2WD steering spindle.....	7-22

EVERY 100 HOURS

Transmission oil heat exchanger	7-23
Air conditioning condenser	7-23
Cab air filters	7-23
Cab air recirculation filter	7-24

EVERY 300 HOURS

Transmission oil filter and services	7-25
Alternator belt.....	7-25
Battery electrolyte level.....	7-26
Dry air filter - External cartridge	7-26
Lifting device and transmission oil level	7-26
Front axle housing	7-27
4WD front axle final drive.....	7-27
4WD front axle steering knuckles	7-27
2WD front wheels.....	7-28

EVERY 500 HOURS

Engine Oil & Filter	7-29
Fuel filter.....	7-30
Fuel pre-filter	7-31

EVERY 1200 HOURS OR ANNUALLY

Cab air filters	7-32
Replacing engine air filters	7-32
Fuel tank.....	7-32

EVERY 1200 HOURS OR EVERY 2 YEARS

Replacing lifting device and transmission oil	7-33
Front axle housing	7-33
4WD front axle final drive.....	7-34
Engine valves.....	7-34
Washing cooling system.....	7-35

EVERY 1800 HOURS

Injectors	7-38
-----------------	------

ELECTRICAL SYSTEM

Battery service.....	7-39
Battery disconnect switch	7-41
Fuses and Relays	7-42
Fuse and relay locations	7-43
Light adjustments.....	7-46

Hood lamp replacement	7-46
Hood lamp replacement	7-46
Work light Side - Replace	7-47

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

TROUBLESHOOTING ENGINE	8-1
Electrical system - Troubleshooting ELECTRICAL SYSTEM	8-3
Hydraulic systems - Troubleshooting HYDRAULIC SYSTEM	8-4
Rear three-point hitch - Troubleshooting	8-5
Hydraulic service brakes - Troubleshooting	8-6
Cab climate control - Troubleshooting	8-7

9 SPECIFICATIONS

Dimensions and weights	9-1
Technical data	9-4

10 ACCESSORIES

Radio	10-1
Hitching tools for quick coupling	10-9
Joystick for control valves	10-11
Hydraulic valve for trailer brakes	10-12

1 - GENERAL INFORMATION

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

Your NEW HOLLAND AGRICULTURE dealer will instruct you in the general operation of your new equipment. Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your machine.

Your NEW HOLLAND AGRICULTURE dealer carries a complete line of genuine NEW HOLLAND AGRICULTURE service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model:
Product Identification Number (PIN):



This is the safety alert symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

▲ WARNING

**Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.
Replace all shields before operating the machine.
Failure to comply could result in death or serious injury.**

W0012A

Engine tampering statement:

ATTENTION: *The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*

EC Declaration of Conformity

Class of 2006/42/EC Annex I	BG Декларация ЕС за съответствие (чл. 11 от Директива 2006/42/ЕО)	CZ Prohlášení o shodě ES podle směrnice 2006/42/ES	DA EU-overensstemmelseserklæring ifølge direktivet 2006/42/EF	DE EG-Konformitätserklärung laut Richtlinie 2006/42/EG	EL Δήλωση Συμμόρφωσης ΕΚ σύμφωνα με την Οδηγία 2006/42/ΕΚ	EN Declaration of conformity according to Directive 2006/42/EC	ES Declaración CE de conformidad con la Directiva 2006/42/CE	ET EU vastutusemääramine vastavalt direktiivile 2006/42/EÜ	FI EU-vastuunotomuklauselu vastavalt direktiiville 2006/42/EY	F Declaration CE de conformité de la Directive 2006/42/CE	FR Déclaration CE de conformité de la Directive 2006/42/CE	DE	IT Dichiarazione CE di conformità secondo la direttiva 2006/42/CE	LT EB atitikimė deklaruacija pagal direktyvą 2006/42/EB	LV EK atbilstības deklarācija saskaņā ar Direktīvu 2006/42/EK	NL CE Conformiteitsverklaring overeenkomstig de Richtlijn 2006/42/EG	NO CE sammenhengende erklæring ifølge direktiv 2006/42/EF	PL Deklaracja zgodności WE zgodnie z dyrektywą 2006/42/WE		
1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	1.A.1	
1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2	1.A.2
1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3	1.A.3
1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4	1.A.4
1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7	1.A.7
1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9	1.A.9
1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10	1.A.10
1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11	1.A.11
1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12	1.A.12
1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13	1.A.13
1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14	1.A.14
1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15	1.A.15
1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16	1.A.16
1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17	1.A.17
1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18	1.A.18
1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19	1.A.19
1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20	1.A.20



NEW HOLLAND
CHN Europe Holding S.A.
Boulevard Royal, 24
L-2484 LUXEMBOURG
(Luxembourg)

1) _____

2) _____

3) _____

4) _____

5) _____

6) _____

7) _____

8) _____

9) _____

10) _____

11) _____

12) _____

13) _____

14) _____

15) _____

16) _____

17) _____

18) _____

19) _____

20) _____

21) _____

22) _____

23) _____

24) _____

25) _____

26) _____

27) _____

28) _____

29) _____

30) _____

Here above is provided copy of the "EC" Declaration of Conformity (EC Declaration of Conformity acc to 2006/42/EC). The EC Declaration of Conformity is the manufacturer's declaration about equipment compliance to relevant EU provisions. Please keep the original document in a safe place. Local authorities may require you to show this document in order to assure compliance of your equipment. Translation of this declaration in your own country language is provided on the original document

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, [1]
1.A.2	Represented by Giuseppe Gavioli, CNH Europe Holding S.A. 24, Boulevard Royal L – 2449 Luxemburg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6] .
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: [7]
1.A.10	Name and signature of the authorised person: [8]

- FOPS level on your tractor cab is certified according to OECD Code 10.
- The CAB is Category 2 approved in accordance with EN 15695-1.

Commission Directive 2010/52/EU

Aspects concerning safety of directive 2010/52/EU

Section 4.1

A Ergonomic position of the driver seat.

Adjust the driver seat correctly in the most comfortable, ergonomic position before using the machine. This reduces the risks and effects of the vibrations transmitted to the whole body. Please refer to **3-8** for specific adjustment instructions. See **1-12** for further information on the effects and risks of vibration transmitted to the whole body.

B Heating, ventilation and air-conditioning.

Carefully read and comprehend the instructions for using and operating the air-conditioning, heating and ventilation system, given on **3-6**. Only correct use of the ventilation system can guarantee the level of protection against dangerous substances offered by the cab. The necessary filtration of the outside air can be accomplished only by using the air-conditioner and setting the fan on the highest speed with the doors, windows and canopy closed.

C Starting and shutting down the engine.

To be able to use the machine safely, it is recommended to read and fully understand all the information on engine start-up and shutdown and likewise safety for use and operation. Please refer to **4-3** and **4-4**.

D Emergency exit.

The tractor's rear window can be used as an emergency exit, as indicated by a special safety sign. See **Safety - Personal safety**.

E Getting on and off the tractor.

▲ WARNING

Fall hazard!

Jumping on or off the machine could cause an injury. Always face the machine, use the handrails and steps, and get on or off slowly. Maintain a three-point contact to avoid falling: both hands on the handrails and one foot on the step, or one hand on the handrail and both feet on the steps. Failure to comply could result in death or serious injury.

W0141A

See **2-17**.

F Articulated tractors.

▲ WARNING

Uncontrolled equipment movement!

Moving the articulated tractor steering wheel can swing or move attached equipment. Do not move the steering wheel until everyone is clear of the equipment. Failure to comply could result in death or serious injury.

W0906A

There is no space for people when the tractor steers.

To avoid personal injuries:

- Keep at a distance from the tractor articulation zone when the engine is running.
- Switch off the engine before working in the tractor articulation zone.
- Install the articulation cylinder retaining blocks before lifting the tractor or transporting it with another means, performing maintenance work in the articulation zone or activating static implements driven by the Power Take-Off (PTO). Take care to remove the retaining blocks before driving the tractor.
- Keep the transmission guards in position.

G | Special tools.

No special tools are required for using or servicing the machine. For support and maintenance work and services not covered in this manual, please contact your NEW HOLLAND AGRICULTURE dealer.

H | Support and maintenance.**⚠ DANGER**

Improper operation or service of this machine can result in an accident.
Do not operate this machine or perform any lubrication, maintenance, or repair on it until you have read and understood the operation, lubrication, maintenance, and repair information.
Failure to comply will result in death or serious injury.

D0010A

⚠ DANGER

Improper operation or service of this machine can result in an accident.
Any unauthorized modifications made to this machine can have serious consequences. Consult an authorized dealer on changes, additions, or modifications that may be required for this machine. Do not make any unauthorized modifications.
Failure to comply will result in death or serious injury.

D0030A

⚠ WARNING

Improper operation or service of this machine can result in an accident.
Read and understand the SAFETY INFORMATION Section before you perform any maintenance, service, or repairs. Read and understand the specific service procedures for the components you plan to work with before you start servicing the machine.
Failure to comply could result in death or serious injury.

W0138A

⚠ WARNING

Improper operation or service of this machine can result in an accident.
If you do not understand a maintenance procedure, or doubt your ability to perform a maintenance procedure correctly, see your authorized dealer.
Failure to comply could result in death or serious injury.

W0157A

⚠ WARNING

Personal Protective Equipment (PPE) required.
When assembling, operating, or servicing the machine, wear protective clothing and PPE necessary for the particular procedure. Some PPE that may be necessary includes protective shoes, eye and/or face protection, hard hat, heavy gloves, filter mask, and hearing protection.
Failure to comply could result in death or serious injury.

W0353A

I | Hydraulic hoses.

Although periodical inspection of the hydraulic hoses is required, it is not necessary for the operator to carry out maintenance work. Please refer to the general precautions to be observed for tests and inspections given in this manual (Maintenance chapter).

J | Towing the Tractor.**⚠ WARNING**

Avoid injury!
Incorrect towing procedures can cause accidents. When towing your machine, follow the procedure in this manual.
Failure to comply could result in death or serious injury.

W0476A

Please refer to **5-2**.

K Hoisting points.

The points to use for hoisting the machine are shown on **2-13**.

L Batteries and fuel tank.

Observe all the following precautions. Please refer to **7-39** for the specific maintenance operations on the battery. Please refer to **7-6** for instructions on filling.

⚠ WARNING

Explosive gas!

Batteries emit explosive hydrogen gas and other fumes while charging. Ventilate the charging area. Keep the battery away from sparks, open flames, and other ignition sources. Never charge a frozen battery.

Failure to comply could result in death or serious injury.

W0005A

⚠ WARNING

Battery gas can explode!

To prevent an explosion: 1. Always disconnect the negative (-) battery cable first. 2. Always connect the negative (-) battery cable last. 3. Do not short circuit the battery posts with metal objects. 4. Do not weld, grind, or smoke near a battery.

Failure to comply could result in death or serious injury.

W0011A

⚠ WARNING

Battery acid causes burns. Batteries contain sulfuric acid.

Avoid contact with skin, eyes or clothing. Antidote (external): Flush with water. Antidote (eyes): flush with water for 15 minutes and seek medical attention immediately. Antidote (internal): Drink large quantities of water or milk. Do not induce vomiting. Seek medical attention immediately.

Failure to comply could result in death or serious injury.

W0111A

⚠ WARNING

Fire hazard!

When handling diesel fuel, observe the following precautions:

- 1. Do not smoke.**
- 2. Never fill the tank when the engine is running.**
- 3. Wipe up spilled fuel immediately.**

Failure to comply could result in death or serious injury.

W0099A

⚠ WARNING

Fire hazard!

Do not add gasoline, alcohol, or blended fuels to diesel fuel, except as recommended in this manual. Fuel combinations may increase fire and explosion hazards.

Failure to comply could result in death or serious injury.

W0401A

⚠ WARNING

Fuel vapors are explosive and flammable.

Do not smoke while handling fuel. Keep fuel away from flames or sparks. Shut off engine and remove key before servicing. Always work in a well-ventilated area. Clean up spilled fuel immediately.

Failure to comply could result in death or serious injury.

W0904A

M Danger of overturning.

Do not use the tractor on slopes or in such conditions as to compromise its limits of safety and stability, indicated in **2-10**. Using the tractor beyond these limits may result in a roll over or a tip over. Observe the recommendations in this manual. Pay particular attention when coming down steep slopes with a loaded tractor.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com