

# OPERATOR'S MANUAL

---

**T8.275**

**T8.300**


**T8.330**

**T8.360**

**T8.390**

**Tractor**

*from PIN ZCRC05700 and after*

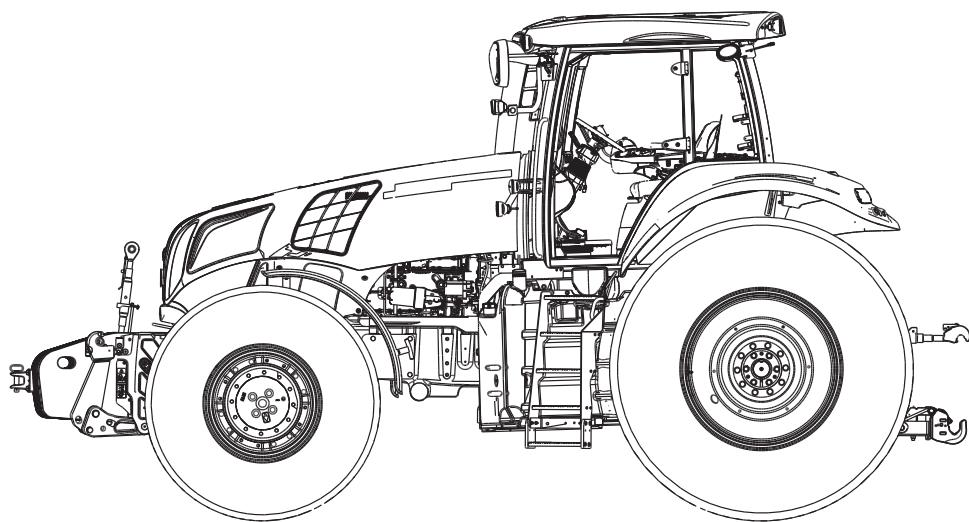

**Part number 47378620**

1st edition English

June 2012

 **NEW HOLLAND**  
AGRICULTURE

# Contents

---

## 1 GENERAL INFORMATION

Your tractor .....	1-1
Declaration of conformity .....	1-2
Tractor intended use .....	1-4
Engine tampering .....	1-4
Electro-Magnetic Compatibility (EMC) .....	1-5
Manual scope .....	1-6
Manual storage .....	1-7
Product identification .....	1-8
Machine orientation .....	1-10
Component location .....	1-11

## 2 SAFETY INFORMATION

Safety rules .....	2-1
Safety rules - General .....	2-2
Safety rules - Air conditioning system .....	2-2
Safety rules - Basic operating .....	2-3
Safety rules - Battery .....	2-3
Safety rules - Driving on public roads .....	2-4
Safety rules - Electrical storm safety .....	2-4
Safety rules - Fire prevention .....	2-4
Safety rules - Front end loader .....	2-5
Safety rules - General maintenance .....	2-5
Safety rules - Hazardous chemicals .....	2-6
Safety rules - Implements, tools and trailers .....	2-7
Safety rules - Instructional seat .....	2-7
Safety rules - Mounting and dismounting .....	2-7
Safety rules - Operator presence system .....	2-8
Safety rules - Power Take-Off (PTO) operation .....	2-8
Safety rules - Roll over and tip over .....	2-8
Safety rules - Utility power lines .....	2-9
Safety rules - Vehicle vibration .....	2-9
Safety rules - Wheels and tires .....	2-10
Roll Over Protective Structure (ROPS) .....	2-11
Cab protection .....	2-12
Noise levels .....	2-13
Vehicle vibration levels .....	2-14
Fire extinguisher .....	2-15
Emergency exit .....	2-15
Wheel wedges .....	2-16
Safety signs .....	2-17
Selective Catalytic Reduction (SCR) decal .....	2-30
Ecology and the environment .....	2-31
Safety aspects .....	2-32

### **3 CONTROLS/INSTRUMENTS**

#### **ACCESS TO OPERATOR'S PLATFORM**

Tractor access .....	3-1
Lower step .....	3-2

#### **OPERATOR'S SEAT**

Overview .....	3-3
Control identification .....	3-4

#### **INSTRUCTOR'S SEAT**

Overview .....	3-7
----------------	-----

#### **FORWARD CONTROLS**

Steering column .....	3-8
Front console .....	3-11
Pedal controls .....	3-13

#### **LEFT-HAND SIDE CONTROLS**

Emergency brake lever .....	3-15
-----------------------------	------

#### **RIGHT-HAND SIDE CONTROLS**

Armrest console .....	3-16
Multi function handle .....	3-17
Hand throttle lever .....	3-20
Control panel .....	3-21
Remote valve controls .....	3-28
Joystick .....	3-29
Rear hitch controls .....	3-31
Armrest compartment .....	3-33
Adjusting the armrest console .....	3-35

#### **REARWARD CONTROLS**

Fender console .....	3-36
Automatic temperature controls .....	3-39
Automatic temperature control system .....	3-42
Ventilation .....	3-43

#### **OVERHEAD CONTROLS**

Interior lamps .....	3-45
----------------------	------

#### **EXTERIOR CONTROLS**

Rear fender controls .....	3-46
Front hitch .....	3-48

#### **INSTRUMENT CLUSTER**

Overview .....	3-49
----------------	------

Gauges .....	3-50
Status and warning icons .....	3-51
Upper display .....	3-54
Lower display .....	3-56
Keypad .....	3-58
Setup menu .....	3-60
Rear tire radius chart .....	3-66
Adjust menu .....	3-67
Performance instrumentation .....	3-74

## **4 OPERATING INSTRUCTIONS**

### **COMMISSIONING THE UNIT**

Before starting the engine .....	4-1
----------------------------------	-----

### **STARTING THE UNIT**

Normal engine starting .....	4-3
Cold starting aids .....	4-7
Cold temperature operation .....	4-9

### **STOPPING THE UNIT**

Stopping the engine .....	4-11
---------------------------	------

### **MOVING THE UNIT**

Powershift transmission .....	4-12
Best practices for prolonged transmission life .....	4-13
Inching pedal and throttle .....	4-14
Transmission controls .....	4-15
Upper display .....	4-18
Driving the vehicle .....	4-20
Setting default gears .....	4-25
Ground Speed Management (GSM) .....	4-27
Mechanical Front Drive (MFD) .....	4-34
Differential lock system .....	4-38
Suspended axle .....	4-41
Ride control .....	4-49
Constant engine speed .....	4-51
Headland management system .....	4-53

## **5 TRANSPORT OPERATIONS**

### **ROAD TRANSPORT**

Tractor warning lamps .....	5-1
Safe transport speed .....	5-3
Implement warning lamps and Slow Moving Vehicle (SMV) symbol .....	5-4
Safety chain .....	5-5

<b>SHIPPING TRANSPORT</b>	
Securing the tractor for shipping .....	5-6
<b>RECOVERY TRANSPORT</b>	
Safety rules .....	5-7
Towing the tractor .....	5-8
<b>6 WORKING OPERATIONS</b>	
<b>GENERAL INFORMATION</b>	
Overview .....	6-1
<b>REAR POWER TAKE-OFF (PTO)</b>	
Safety rules .....	6-2
Connecting the PTO .....	6-6
Connecting the Power Take-Off (PTO) .....	6-7
Interchangeable Power Take-Off (PTO) shaft .....	6-8
Rear Power Take-Off (PTO) operation .....	6-14
Power Take-Off (PTO) fender switch operation .....	6-18
Auto Power Take-Off (PTO) operation .....	6-19
<b>FRONT POWER TAKE-OFF (PTO)</b>	
Overview .....	6-22
Front Power Take-Off (PTO) operation .....	6-23
<b>REAR HITCH</b>	
Identification .....	6-26
Link adjustment .....	6-27
Hitch high clearance adjustment .....	6-31
Hydraulic links .....	6-34
Sway limiter adjustment .....	6-36
Automatic telescoping stabilizers .....	6-37
Lower link block adjustment .....	6-39
Mechanical float adjustment .....	6-41
Hitch operation .....	6-42
Hitch remote switch operation .....	6-47
Position control operation .....	6-49
Load control operation .....	6-51
Slip control operation .....	6-53
Hitch set point .....	6-55
<b>FRONT HITCH</b>	
Overview .....	6-57
Front hitch operation .....	6-57

---

## DRAWBARS AND TOWING ATTACHMENTS

Drawbars and towing hitches - Safety rules .....	6-64
Drawbar capacity/position .....	6-65
Adjusting the drawbar .....	6-67

## TRAILER HITCHES

Clevis and special drawbars .....	6-69
Automatic trailer hitch .....	6-71
Auto pickup hitch operation .....	6-74
Manual trailer hitch .....	6-76

## AUXILIARY POWER CONNECTIONS

Auxiliary power and lighting .....	6-78
Cab power connections .....	6-80

## HYDRAULIC REMOTE CONTROL VALVES

Valve couplers and connections .....	6-82
Motor return circuit .....	6-85
Power beyond circuit .....	6-86
Flow capacity .....	6-87
Hydraulic transport lock .....	6-88
Operating the controls .....	6-89
Remote valve display screens .....	6-93
Remote hydraulic auto mode .....	6-97
Auto depth control .....	6-99
Joystick operation .....	6-101

## BALLASTING THE TRACTOR

Guidelines .....	6-105
Tire load and inflation charts .....	6-109
Weights, cast metal and liquid .....	6-110
Wheel slip and power hop performance .....	6-121

## MECHANICAL FRONT DRIVE (MFD) AXLES

Tire combinations and tread positions .....	6-124
Steering and oscillation stops .....	6-129
Tread and fender settings - standard axles .....	6-132
Tread and fender settings - heavy duty axles .....	6-133
Tread and fender settings - heavy duty class 5 axles .....	6-134
Tread and fender settings - heavy duty class 5 suspended axles .....	6-135
Tread and fender settings - scissors suspended axles .....	6-136

## REAR AXLE

Rear wheel installation .....	6-137
Rear wheel tread settings .....	6-139

## **7 MAINTENANCE**

### **GENERAL INFORMATION**

Safety rules .....	7-1
Opening the hood .....	7-3
Closing the hood .....	7-5
Filling the fuel tank .....	7-6
Battery access and service .....	7-7
Tire and rim service .....	7-9
Tractor jacking points .....	7-11
Capacities .....	7-13
Consumables - Engine oil .....	7-15
Consumables - Diesel fuel .....	7-17
Consumables - Coolant solutions .....	7-18
Electrical component location .....	7-19
Lamps and bulbs .....	7-24
Maintenance chart notes .....	7-25

### **MAINTENANCE CHART**

Maintenance Chart .....	7-26
-------------------------	------

#### **At warning message display**

Air filter service icon/message .....	7-28
Fuel filter water separator .....	7-29
Transmission oil filter switch .....	7-30
Hydraulic oil filter switch .....	7-32

#### **First 10 to 50 hours**

Differential and planetary oil .....	7-34
Wheel bolt torque .....	7-34
Weight bolt torque .....	7-34

#### **Every 10 hours or daily**

Engine oil level .....	7-35
Transmission oil level .....	7-36
Engine coolant level .....	7-36
Engine auxiliary fuel filter .....	7-37
Air reservoir .....	7-37
Rear hitch and front axle .....	7-37

#### **Every 50 hours or weekly**

Engine fuel pre-filter .....	7-38
------------------------------	------

#### **Every 100 hours**

Front hitch .....	7-39
Front Power Take-Off (PTO) drive shaft .....	7-41

<b>Every 300 hours</b>	
Battery water level (Note E) .....	7-42
Engine air intake hoses.....	7-44
Engine coolant level - deaeration tank .....	7-46
Wheel bolt torque.....	7-47
Weight bolt torque .....	7-47
Front axle (Note A).....	7-48
Rear hitch (Note A).....	7-56
Fuel tank.....	7-58
Differential and planetary oil level (Note B).....	7-59
Transmission oil pressure .....	7-61
Front Power Take-Off (PTO) oil level.....	7-62
<b>Every 400 hours</b>	
Cab air filter.....	7-63
<b>Every 600 hours</b>	
Engine oil and filter .....	7-66
Engine coolant antifreeze protection .....	7-68
Engine coolant hoses and clamps.....	7-68
Engine primary fuel filter.....	7-71
Engine fuel pre-filter .....	7-74
Fuel system bleeding.....	7-77
Changeable Power Take-Off (PTO) internal splines.....	7-79
Front Power Take-Off (PTO) oil and filter.....	7-80
<b>Every 1000 hours or annually</b>	
Pneumatic brake system dryer .....	7-82
<b>Every 1200 hours or annually</b>	
Differential and planetary oil.....	7-83
Engine air filters .....	7-88
Engine air precleaner.....	7-92
<b>Every 1500 hours</b>	
Transmission oil .....	7-94
Transmission oil filter .....	7-96
Regulated transmission filter .....	7-97
Engine crankcase filter .....	7-98
<b>Every 2000 hours</b>	
Engine coolant.....	7-102
<b>Every 3000 hours</b>	

---

Emergency steering system .....	7-104
Engine valve adjustment (Note C) .....	7-104

## As required

Vehicle fire prevention .....	7-105
Engine primary air filter .....	7-106
Grille screen and radiator area .....	7-109
Fuel tank vent filter .....	7-111
Transmission clutch and accumulator .....	7-111
Tire pressure .....	7-111
Fan belt .....	7-112
Cab suspension, if equipped .....	7-115
Remote valve collection bottle .....	7-116
Emergency brake lever .....	7-117
Engine auxiliary fuel filter .....	7-118
Cab fabric and carpet .....	7-120
Seat belt .....	7-120

## STORAGE

Tractor storage .....	7-121
Removal from storage .....	7-122

## ELECTRICAL SYSTEM

Radio or audio system .....	7-123
Battery removal and installation .....	7-124
Auxiliary battery connections .....	7-126
Headlight .....	7-127
Grille work light .....	7-131
Fender tail light and warning light .....	7-133
Roof work light .....	7-135
Belt line, roof or fender work light .....	7-137
High intensity work light .....	7-139
Side turn indicator light .....	7-141
Rotating beacon light .....	7-143
Number plate light .....	7-144
Interior light .....	7-145

## 8 TROUBLESHOOTING

### ALARM(S)

Display warnings overview .....	8-1
Display warnings - Level 1 .....	8-2
Display warnings - Level 2 .....	8-5
Display warnings - Level 3 .....	8-8
Display warnings - Level 4 .....	8-10

### SYMPTOM(S)

---

**Thank you so much for reading.**

**Please click the “Buy Now!”  
button below to download the  
complete manual.**

***Buy Now***



**After you pay.**

**You can download the most  
perfect and complete manual in  
the world immediately.**

**Our support email:**

**ebooklibonline@outlook.com**