

ORIGINAL INSTRUCTIONS - according to Directive 2006/42/EC, Annex I 1.7.4.1

OPERATOR'S MANUAL

T4.85

T4.95

T4.105

Tractor

Part number 47435535

1st edition English
December 2012



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
EC Declaration of Conformity	1-2
Commission directive 2010/52/EU	1-4
Noise level	1-11
Electro-magnetic interference (EMC).....	1-12
International symbols	1-13
Introduction	1-15
Operator's manual storage	1-16
Tractor intended use.....	1-17
Ecology and the Environment	1-19
Identification plates	1-20
Approval data plate	1-22
Component Identification	1-23

2 SAFETY INFORMATION

Safety rules	2-1
Safety information	2-2
Air conditioning safety regulations.....	2-6
Vehicle vibration levels	2-7
Cab guard	2-8
Machine stability	2-10
Personal protective equipment (PPE).....	2-12
Tractor jacking points	2-13
Hazardous chemicals.....	2-14
Burn prevention.....	2-15
Fire or explosion prevention	2-16
Getting in and out of the machine	2-17
Emergency exit	2-18
Safety signs	2-19

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

General information	3-1
Cab	3-2

OPERATOR'S SEAT

Mechanically-adjusted operator seat - Adjust	3-6
Pneumatically-adjusted operator seat - Adjust	3-7
Seat belt	3-9

PASSENGER'S SEAT

Passenger seat.....	3-10
---------------------	------

FORWARD CONTROLS

Instrument cluster	3-10
Console Front console - Localisation overview.....	3-16

LEFT-HAND SIDE CONTROLS

Cableless version	3-20
Version with cab	3-20
Handbrake.....	3-21

RIGHT-HAND SIDE CONTROLS

Cableless version	3-22
Version with cab	3-23
HI-LO version with cab	3-24
Console Right-hand console - Localisation overview	3-25
Heating, ventilation or air-conditioning control	3-26

DISPLAY SETTINGS

Programmable display.....	3-28
Adjusting the dashboard/display brightness.....	3-29
Calibrating speed.....	3-31
Calibrating tool width	3-33
Programming maintenance work	3-34
Activating/deactivating buzzer.....	3-36
Setting units of measurement	3-37
Regenerating the diesel particulate filter (DPF) automatically/manually	3-38
Resetting the oil change counter	3-43
Viewing error codes	3-44

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Basic operating safety rules	4-1
------------------------------------	-----

STARTING THE UNIT

Starting the Engine	4-2
Machine movement start-up.....	4-5

STOPPING THE UNIT

Stopping the engine	4-6
Battery disconnect switch	4-7

MOVING THE UNIT

Transmission operation.....	4-8
12 x 12 transmission speed table	4-12
Speed table for 12 x 12 gearbox with additional reducer (20 x 12).....	4-14
Speed table for 12 x 12 gearbox with additional reducer (20 x 20).....	4-16

Transmission speed table 12 x 12 with "HI-LO" (24 x 24).....	4-18
--	------

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Transporting the machine	5-1
--------------------------------	-----

RECOVERY TRANSPORT

Towing the tractor.....	5-2
-------------------------	-----

6 WORKING OPERATIONS

2WD or 4WD

Four-wheel drive with electro-hydraulic control.....	6-1
--	-----

DIFFERENTIAL LOCK

Mechanical differential lock.....	6-1
Electrohydraulic differential lock.....	6-3

REMOTE CONTROL VALVES

Safety rules.....	6-4
Rear remote control valve(s)	6-5
Single/double action hydraulic valves	6-7

REAR POWER TAKE-OFF (PTO)

Safety rules.....	6-8
General	6-9
Speed adjustment	6-9
Electrohydraulically controlled power take-off	6-10
Mechanically controlled power take-off.....	6-12
Power take-off speeds.....	6-14
Power Take-Off (PTO) fender switch operation	6-15

HYDRAULIC LIFT

General safety and precautions	6-17
Hydraulic lift with mechanical control.....	6-18
Lift-O-Matic® control - Operating	6-20
Hydraulic lift with electronic control.....	6-22
Hydraulic lift external controls	6-28

THREE POINT HITCH

Three-point linkage	6-30
Three-point linkage dimensions	6-32
Quick coupler.....	6-33

Additional equipment attachment points	6-35
--	------

TOWBAR

General safety rules	6-37
Swinging drawbar	6-38

REAR TOW HITCH

General safety rules	6-39
Towing hitch	6-40

MAXIMUM PERMITTED LOADS

Front and rear axle	6-44
Towbar	6-46
Towing hitch	6-46

WHEELS AND TIRES

Wheels and tyres	6-47
Tyre dimensions	6-51

WHEEL TRACK ADJUSTMENT

Adjustment of the front tracks	6-53
Adjustment of the front mudguards	6-55
Adjustment of the steering angles	6-57
Front tracks diagram	6-58
Front tracks diagram	6-60
Rear tracks diagram	6-62

BALLAST

Safety rules	6-63
Front ballast	6-64
Rear Ballast	6-64
Wheels - Ballast	6-65

TRAILER BRAKING SYSTEMS

Hydraulic valve for trailer brakes	6-69
Mechanical trailer brake bracket	6-71

7 MAINTENANCE

GENERAL INFORMATION

General safety before you service	7-1
Introduction	7-3
Running-in period	7-4
Fuel supply	7-5
Biodiesel fuel - Biodiesel Fuels	7-6
Body maintenance	7-7

Opening the hood	7-9
Fluids and lubricants	7-10

MAINTENANCE CHART

Maintenance Chart	7-11
-------------------------	------

As required

Radiator expansion tank	7-13
Windshield washer reservoir	7-13
Air conditioning - Dehydration filter	7-13
Distributor oil recovery pan	7-14
Radiator - Check	7-14
Brakes - Adjust	7-14
Compressor belt	7-15
Machine lights	7-15
Tire pressure	7-15
Clutch pedal adjustment	7-16

AT WARNING MESSAGE DISPLAY

Dry air filter - External cartridge	7-17
Brake fluid level	7-18
Fuel filter water drain	7-18

Every 10 hours or daily

Engine oil level	7-19
------------------------	------

Every 50 hours

Rear wheel hub	7-20
Lift and linkage	7-20
Front axle	7-20

Every 100 hours

Air conditioning condenser	7-21
Transmission oil heat exchanger Only for Power Shuttle and HI-LO	7-21
Intercooler	7-21
Cab air filters	7-22
Cab recirculated air filter	7-22

Every 300 hours

Hydraulic circuit oil filter	7-23
Auxiliary services oil filter	7-23
Dry air filter - External cartridge	7-24
Alternator belt	7-24
Transmission and hydraulic lift	7-25
Front Axle Oil	7-25
Front axle final drives	7-25
Front axle spindle	7-26

Towing hitch	7-26
Battery electrolyte level.....	7-26

Every 600 hours

Change engine oil and filter	7-27
Replacing the fuel filters	7-28
Fuel prefilter	7-28
Wheel bolt torque.....	7-29

Every 1200 hours or annually

Replacing cab air filters.....	7-30
Replacing air filters	7-30
Fuel tank drain.....	7-30

Every 1200 hours or two years

Replacing front axle oil	7-31
Replacing front axle final drive oil	7-31
Replacing transmission oil.....	7-31
Washing cooling system.....	7-32

1800 hours Service

Fuel injectors - Check	7-35
------------------------------	------

Every 3000 hours

Diesel particulate filter (DPF).....	7-35
--------------------------------------	------

ELECTRICAL SYSTEM

Battery service.....	7-36
Fuses and relay box	7-38
Fuse and relay locations	7-40
Light adjustments.....	7-50
Hood lamp replacement.....	7-51

STORAGE

Tractor storage	7-52
-----------------------	------

CALIBRATION

Clutch calibration	7-53
Clutch calibration	7-56
Electronic lift calibration	7-59
Electronic lift calibration	7-60

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

TROUBLESHOOTING ENGINE	8-1
Electrical system - Troubleshooting ELECTRICAL SYSTEM	8-3
Hydraulic systems - Troubleshooting HYDRAULIC SYSTEM	8-4
Rear three-point hitch - Troubleshooting HYDRAULIC LIFT AND 3-POINT LINKAGE	8-5
Hydraulic service brakes - Troubleshooting	8-6
Cab climate control - Troubleshooting	8-7

ALARM(S)

Alarms	8-8
Display warnings overview	8-9

SYMPTOM(S)

Viewing error codes	8-13
Error code identification	8-13
Fault code of digital instrument	8-15

9 SPECIFICATIONS

Dimensions and weights	9-1
Technical data	9-3

10 ACCESSORIES

Radio	10-1
Joystick - Operating	10-9

1 - GENERAL INFORMATION

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

Your NEW HOLLAND AGRICULTURE dealer will instruct you in the general operation of your new equipment. Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your machine.

Your NEW HOLLAND AGRICULTURE dealer carries a complete line of genuine NEW HOLLAND AGRICULTURE service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model:
Product Identification Number (PIN):



This is the safety alert symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

⚠ WARNING

**Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.
Replace all shields before operating the machine.
Failure to comply could result in death or serious injury.**

W0012A

Engine tampering statement:

ATTENTION: *The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, [1]
1.A.2	Represented by Giuseppe Gavioli, CNH Europe Holding S.A. 24, Boulevard Royal L – 2449 Luxemburg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6] .
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322–1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: [7]
1.A.10	Name and signature of the authorised person: [8]

HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- FOPS level on your tractor cab is certified according to OECD Code 10.
- The CAB is Category 2 approved in accordance with EN 15695-1.
- NOISE EMISSION LEVELS have been measured in accordance with directives 2009/76/EC • 2009/63/EC.
- VIBRATION LEVELS are rated according to 78/764/EEC.
- ROPS PROTECTION is certified according to EN 15694.

NOTE: See safety section 1 in this manual for further explanation and details on above mentioned standards and specific terminology.

Commission directive 2010/52/EU

Aspects concerning safety of directive 2010/52/EU

Section 4.1

A | Ergonomic position of the driver seat.

Adjust the driver seat correctly in the most comfortable, ergonomic position before using the machine. This reduces the risks and effects of the vibrations transmitted to the whole body. Please refer to **3-6 — 3-7** for specific adjustment instructions. See **2-7** for further information on the effects and risks of vibration transmitted to the whole body.

B | Heating, ventilation and air-conditioning.

Carefully read and comprehend the instructions for using and operating the air-conditioning, heating and ventilation system, given on **3-26**. Only a correct use of the cab ventilation and filtration system provides protection against dust and that the minimum differential pressure is ensured. The necessary filtration of the outside air can be accomplished only by using the air-conditioner and setting the fan on the highest speed with the doors, windows and canopy closed.

C | Starting and shutting down the engine.

To be able to use the machine safely, it is recommended to read and fully understand all the information on engine start-up and shutdown and likewise safety for use and operation. Please refer to **4-2** and **4-6**.

D | Emergency exit.

The tractor's rear window can be used as an emergency exit, as indicated by a special safety sign. See **2-18**.

E | Getting on and off the tractor.

▲ WARNING

Fall hazard!

Jumping on or off the machine could cause an injury. Always face the machine, use the handrails and steps, and get on or off slowly. Maintain a three-point contact to avoid falling: both hands on the handrails and one foot on the step, or one hand on the handrail and both feet on the steps. Failure to comply could result in death or serious injury.

W0141A

See **2-17**.

F | Articulated tractors.

▲ WARNING

Uncontrolled equipment movement!

Moving the articulated tractor steering wheel can swing or move attached equipment. Do not move the steering wheel until everyone is clear of the equipment. Failure to comply could result in death or serious injury.

W0906A

There is no space for people when the tractor steers.

To prevent personal injury:

- Keep at a distance from the tractor articulation zone when the engine is running.
- Switch off the engine before working in the tractor articulation zone.
- Install the articulation cylinder retaining blocks before lifting the tractor or transporting it with another means, performing maintenance work in the articulation zone or activating static implements driven by the Power Take-Off (PTO). Take care to remove the retaining blocks before driving the tractor.
- Keep the transmission guards in position.

G | Special tools.

No special tools are required for using or servicing the machine. For support and maintenance work and services not covered in this manual, please contact your NEW HOLLAND AGRICULTURE dealer.

H | Support and maintenance.

⚠ DANGER

**Improper operation or service of this machine can result in an accident.
Do not operate this machine or perform any lubrication, maintenance, or repair on it until you have read and understood the operation, lubrication, maintenance, and repair information.
Failure to comply will result in death or serious injury.**

D0010A

⚠ DANGER

**Improper operation or service of this machine can result in an accident.
Any unauthorized modifications made to this machine can have serious consequences. Consult an authorized dealer on changes, additions, or modifications that may be required for this machine.
Do not make any unauthorized modifications.
Failure to comply will result in death or serious injury.**

D0030A

⚠ WARNING

**Improper operation or service of this machine can result in an accident.
Read and understand the SAFETY INFORMATION Section before you perform any maintenance, service, or repairs. Read and understand the specific service procedures for the components you plan to work with before you start servicing the machine.
Failure to comply could result in death or serious injury.**

W0138A

⚠ WARNING

**Improper operation or service of this machine can result in an accident.
If you do not understand a maintenance procedure, or doubt your ability to perform a maintenance procedure correctly, see your authorized dealer.
Failure to comply could result in death or serious injury.**

W0157A

⚠ WARNING

**Personal Protective Equipment (PPE) required.
When assembling, operating, or servicing the machine, wear protective clothing and PPE necessary for the particular procedure. Some PPE that may be necessary includes protective shoes, eye and/or face protection, hard hat, heavy gloves, filter mask, and hearing protection.
Failure to comply could result in death or serious injury.**

W0353A

I | Hydraulic hoses.

Although periodical inspection of the hydraulic hoses is required, it is not necessary for the operator to carry out maintenance work. Please refer to the general precautions to be observed for tests and inspections given in this manual (Maintenance chapter).

J | Towing the tractor.

⚠ WARNING

**Avoid injury!
Incorrect towing procedures can cause accidents. When towing your machine, follow the procedure in this manual.
Failure to comply could result in death or serious injury.**

W0476A

Please refer to 5-2.

K | Lifting points.

The points to use for hoisting the machine are shown on **2-13**.

L | Batteries and fuel tank.

Observe all precautions below. Please refer to **7-36** for the specific maintenance operations on the battery. Please refer to **7-5** for instructions on filling.

⚠ WARNING

Explosive gas!

Batteries emit explosive hydrogen gas and other fumes while charging. Ventilate the charging area. Keep the battery away from sparks, open flames, and other ignition sources. Never charge a frozen battery.

Failure to comply could result in death or serious injury.

W0005A

⚠ WARNING

Battery gas can explode!

To prevent an explosion: 1. Always disconnect the negative (-) battery cable first. 2. Always connect the negative (-) battery cable last. 3. Do not short circuit the battery posts with metal objects. 4. Do not weld, grind, or smoke near a battery.

Failure to comply could result in death or serious injury.

W0011A

⚠ WARNING

Battery acid causes burns. Batteries contain sulfuric acid.

Avoid contact with skin, eyes or clothing. Antidote (external): Flush with water. Antidote (eyes): flush with water for 15 minutes and seek medical attention immediately. Antidote (internal): Drink large quantities of water or milk. Do not induce vomiting. Seek medical attention immediately.

Failure to comply could result in death or serious injury.

W0111A

⚠ WARNING

Fire hazard!

When handling diesel fuel, observe the following precautions:

- 1. Do not smoke.**
- 2. Never fill the tank when the engine is running.**
- 3. Wipe up spilled fuel immediately.**

Failure to comply could result in death or serious injury.

W0099A

⚠ WARNING

Fire hazard!

Do not add gasoline, alcohol, or blended fuels to diesel fuel, except as recommended in this manual. Fuel combinations may increase fire and explosion hazards.

Failure to comply could result in death or serious injury.

W0401A

⚠ WARNING

Fuel vapors are explosive and flammable.

Do not smoke while handling fuel. Keep fuel away from flames or sparks. Shut off engine and remove key before servicing. Always work in a well-ventilated area. Clean up spilled fuel immediately.

Failure to comply could result in death or serious injury.

W0904A

M | Danger of overturning.

Do not use the tractor on slopes or in such conditions as to compromise its limits of safety and stability, indicated in **2-10**. Using the tractor beyond these limits may result in roll-over or a tip-over. Observe the recommendations in this manual. Pay particular attention when coming down steep slopes with a loaded tractor.

Do not drive the tractor on or near the edge of ditches, canals, dykes or embankments with ground that is unstable or dug out by rodents. The tractor may sink sideways and roll over.

Do not use the tractor on unstable bridge heads and/or poor bridge floors. These constructions may collapse and cause roll – over of the tractor. Always inspect the condition and carrying capacity of bridges and ramps prior to crossing.

Do not use the tractor without wearing the seat restraint system (seat belt) during activities where roll-over or tip-over hazards exist. Cabs with a Roll Over Protective Structure (**ROPS**) offer adequate protection only when the operator is correctly fastened in his seat.

Do not use the tractor beyond the respective limits of dynamic stability. High speed, abrupt manoeuvres and fast and tight cornering will increase the risk of roll over.

Do not use the tractor for pulling work, in cases where you do not know whether the load will yield, for instance, when pulling stumps. The tractor may flip over backwards when the stump is not yielding.

Be extremely cautious when working with the tractor on forage silos without side concrete walls. Dual wheels or a wide track setting may improve the sideways stability of the tractor.

Be cautious that the centre of gravity of the tractor may increase when loads on the front – end loader or the three-point linkage are raised. In these conditions, the tractor may roll – over earlier than expected.

N | Avoid burns.

WARNING

Hot surface possible!

Wait for all components to cool before performing any operation.

Failure to comply could result in death or serious injury.

W0251A

See **2-15**.

O | Falling Objects Protective Structure (**FOPS**).

The tractor is equipped with type approved **ROPS** and **FOPS** in accordance with Code 10 of the Organisation for Economic Co-operation and Development (OECD).

P | Dangerous substances.

The cab of your tractor corresponds to the category which is indicated on the tractor ROPS plate. This category is indicated in **EN 15695-1:2009** and defines the level of protection for the operator against potentially dangerous substances, such as fertilizers or pesticides. On tractors without a cab, the level of protection corresponds to that of category 1. For definitions, see **2-8**.

Q | Operators Protection Structure (**OPS**).

The tractor is not equipped with a type approved **OPS**. Protection against object penetration (**OPS**) can be obtained solely by installing a specific kit. Contact your dealer to check the availability of a type approved **OPS** kit for the tractor, especially in the case of forestry applications.

Section 4.2

A | Tractor implements.

The tractor is a multifunction machine, designed to tow, transport and operate various implements. This manual alone cannot provide you with all the information required for the safe operation of the combination.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com