

ORIGINAL INSTRUCTIONS - according to Directive 2006/42/EC, Annex I 1.7.4.1

# OPERATOR'S MANUAL

---

**T7.220**

**T7.235**

**T7.250**

**T7.260**

Power Command Tractor

**Part number 47457884**

5<sup>th</sup> edition English

March 2013





## OPERATOR'S MANUAL



**T7.220 Power Command**  
**T7.235 Power Command**  
**T7.250 Power Command**  
**T7.260 Power Command**

# Contents

---

## 1 GENERAL INFORMATION

CE DECLARATION OF CONFORMITY .....	1-1
METRIC AND IMPERIAL UNITS ABBREVIATIONS .....	1-3
TO THE OWNER .....	1-5
OPERATOR'S MANUAL STORAGE .....	1-7
PRODUCT IDENTIFICATION .....	1-8
ENGINE IDENTIFICATION .....	1-9
DRIVELINE IDENTIFICATION .....	1-10
CAB IDENTIFICATION .....	1-11
PRODUCT IDENTIFICATION PLATE .....	1-12
ECOLOGY AND THE ENVIRONMENT .....	1-13
NOISE LEVEL .....	1-14
PROGRAMMING TRACTOR FUNCTIONS .....	1-14
BEFORE OPERATING THE TRACTOR .....	1-15
INTERNATIONAL SYMBOLS .....	1-16
VIBRATION LEVEL INFORMATION SHEET .....	1-17
MACHINE STABILITY .....	1-18
PASSENGER'S SEAT .....	1-22
SELECTIVE CATALYTIC REDUCTION (SCR) SYSTEM .....	1-23

## 2 SAFETY INFORMATION

SAFETY DECALS .....	2-1
SAFETY PRECAUTIONS .....	2-9
BEFORE DRIVING THE TRACTOR .....	2-10
DRIVING THE TRACTOR .....	2-11
OPERATING THE TRACTOR .....	2-12
OPERATING THE P.T.O. ....	2-14
OPERATING THE EXTERNAL CONTROLS .....	2-14
SERVICING THE TRACTOR .....	2-15
DIESEL FUEL .....	2-17
PREVENTION OF FIRE OR EXPLOSION .....	2-18
FIRE EXTINGUISHER .....	2-19
PROTECTION OFFERED BY THE TRACTOR .....	2-20
INTENDED USE STATEMENT .....	2-23
SAFETY ASPECTS .....	2-25

## 3 CONTROLS/INSTRUMENTS

### ACCESS TO OPERATOR'S PLATFORM

INTRODUCTION .....	3-1
CAB AIR FILTERS .....	3-5
IN CAB STORAGE (where fitted) .....	3-6
CABLE AND WIRING ROUTING .....	3-7
MOBILE TELEPHONE USAGE .....	3-7
IMPLEMENT MONITOR INSTALLATION .....	3-8
CAB AIR PRESSURISATION MONITOR (where fitted) .....	3-8

### OPERATOR'S SEAT

AIR SUSPENSION SEAT .....	3-10
AIR SUSPENSION SEAT DELUXE .....	3-12
SEAT BELT .....	3-17

---

<b>INSTRUCTOR'S SEAT</b>	
PASSENGER'S SEAT .....	3-18

## FORWARD CONTROLS

KEY- START SWITCH .....	3-19
HAZARD WARNING LIGHT SWITCH.....	3-19
LIGHT-/ TURN LEVER .....	3-20
FOLLOW ME HOME LIGHTS.....	3-20
WINDSHIELD WIPER AND WASHER CONTROLS .....	3-21
ELECTRONIC PARK BRAKE .....	3-22
FOOT BRAKES .....	3-26
STEERING COLUMN .....	3-27
ADJUSTABLE AIR VENTS.....	3-28

## LEFT-HAND SIDE CONTROLS

HANDBRAKE.....	3-29
----------------	------

## RIGHT-HAND SIDE CONTROLS

SWITCH PANEL.....	3-30
-------------------	------

## REARWARD CONTROLS

SWITCH PANEL C- PILLAR.....	3-31
BATTERY ISOLATOR SWITCH .....	3-32
CLIMATE CONTROLS .....	3-33
MANUAL TEMPERATURE CONTROL .....	3-35
AUTOMATIC TEMPERATURE CONTROL (ATC).....	3-36

## OVERHEAD CONTROLS

SWITCH PANEL WORKLIGHTS .....	3-38
RADIO/CASSETTE/CD PLAYER (where fitted).....	3-39
INTERIOR LIGHT .....	3-39

## INSTRUMENT CLUSTER

ANALOGUE/ DIGITAL INSTRUMENT CLUSTER .....	3-41
GAUGES .....	3-41
INDICATOR AND WARNING LIGHTS .....	3-42
DISPLAYS .....	3-44
KEYPAD ENHANCED .....	3-47
SELECTING OR CHANGING THE DISPLAY SETTINGS .....	3-49
GROUND SPEED CALIBRATION.....	3-50
PERFORMANCE MONITOR.....	3-55
ALARM FUNCTIONS.....	3-63
ACCESSING STORED ERROR CODES .....	3-65
WARNING AND ADVISORY SYMBOLS .....	3-66
COLOUR MONITOR (Where fitted) .....	3-76
POP- UP SCREENS .....	3-78
PERFORMANCE MONITOR ON COLOUR DISPLAY .....	3-84
SETTING THE IMPLEMENT WIDTH .....	3-87

---

## 4 OPERATING INSTRUCTIONS

### COMMISSIONING THE UNIT

TRACTOR REFUELLING .....	4-1
--------------------------	-----

### STARTING THE UNIT

STARTING THE ENGINE .....	4-3
GRID HEATER COLD START AID (where fitted) .....	4-4
FUEL HEATER (where fitted) .....	4-5
COOLANT IMMERSION HEATER (where fitted) .....	4-5
TRANSMISSION OIL HEATER (where fitted).....	4-6
BOOSTING THE BATTERY .....	4-7

### STOPPING THE UNIT

STOPPING THE ENGINE.....	4-8
AUTOMATIC ENGINE SHUTDOWN .....	4-8
AUTOMATIC ENGINE SHUTDOWN WITH ENHANCED KEYPAD (where fitted) .....	4-9

### MOVING THE UNIT

OPERATING IN COLD TEMPERATURES .....	4-10
--------------------------------------	------

## 5 TRANSPORT OPERATIONS

### PREPARING FOR ROAD TRANSPORT

CARRYING THE TRACTOR ON A TRANSPORTER .....	5-1
SECURE THE HIGH VISIBILITY ROOF PANEL .....	5-1

### RECOVERY TRANSPORT

TOWING THE TRACTOR .....	5-2
--------------------------	-----

## 6 WORKING OPERATIONS

### GENERAL INFORMATION

VARIABLE ENGINE POWER MANAGEMENT .....	6-1
CONSTANT ENGINE SPEED .....	6-3
DIFFERENTIAL LOCK .....	6-5
FOUR WHEEL DRIVE .....	6-7
FRONT AXLE SUSPENSION (where fitted) .....	6-9
AUTOMATED HEADLAND FUNCTIONS .....	6-10
QUICK GUIDE.....	6-10
RECORDING AND RE-PLAYING .....	6-12
EXPLANATION OF SYMBOLS.....	6-14
RECORDING A SEQUENCE .....	6-15
RE-PLAYING A SEQUENCE.....	6-17
FAST STEERING SYSTEM (where fitted) .....	6-19

### TRANSMISSION

FULL POWERSHIFT TRANSMISSION .....	6-21
------------------------------------	------

---

CLUTCH/ INCHING PEDAL .....	6-21
FOOT THROTTLE PEDAL .....	6-22
HAND THROTTLE .....	6-22
TRANSMISSION OPERATION.....	6-23
Transmission electronic control module Powershift - Control .....	6-24
SHUTTLE LEVER .....	6-25
DRIVING THE TRACTOR.....	6-26
AUTO SHIFT FUNCTION .....	6-28
AUTO SHIFTING IN ROAD MODE .....	6-28
Powershift transmission - Operating .....	6-30
AUTO SHIFTING IN FIELD MODE.....	6-31
Powershift transmission - Control Programming Reverse gear Ratios with Colour Display (where fitted) .....	6-34
CREEPER GEARS (where fitted) .....	6-35
GROUND SPEED CHART FULL POWERSHIFT TRANSMISSION Ground speeds .....	6-36

## REAR POWER TAKE-OFF

P.T.O. OPERATING PRECAUTIONS.....	6-41
CHANGING THE P.T.O. OUTPUT SHAFT .....	6-41
ATTACHING P.T.O. DRIVEN EQUIPMENT .....	6-42
P.T.O. OPERATION.....	6-43
TWO-SPEED P.T.O. SYSTEM .....	6-49
THREE-SPEED P.T.O. SYSTEM .....	6-50
EXTERNAL P.T.O. CONTROLS.....	6-51
AUTO P.T.O. OPERATION .....	6-53

## FRONT POWER TAKE OFF

P.T.O. OPERATION.....	6-56
-----------------------	------

## REAR HITCH

ELECTRONIC DRAFT CONTROL .....	6-58
Rear three-point hitch - Control.....	6-61
ELECTRONIC DRAFT CONTROL OPERATION .....	6-63
Rear three-point hitch electronic control system - Operating.....	6-68
EXTERNAL HITCH CONTROLS.....	6-69

## FRONT HITCH

SETTINGS AND ADJUSTMENTS .....	6-71
HITCH OPERATION.....	6-74
Front hitch - Operating .....	6-79
AUXILIARY FRONT COUPLERS (where fitted).....	6-80
EXTERNAL HITCH CONTROLS.....	6-82

## HYDRAULIC REMOTE CONTROL VALVES

REMOTE CONTROL VALVES .....	6-83
OPERATING WITH REMOTE VALVES .....	6-86
CONNECTING REMOTE CYLINDERS .....	6-89
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT .....	6-91

## ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

---

MID MOUNT REMOTE VALVES .....	6-93
Mid-mount remote control valve Electrohydraulic remote valve - Adjust .....	6-94
Mid-mount remote control valve Electrohydraulic remote valve - Adjust .....	6-95
JOYSTICK OPERATION WITH A FRONT LOADER.....	6-99

## HYDRAULIC POWER BEYOND PORT

HYDRAULIC POWER BEYOND FOR EXTERNAL SERVICES .....	6-101
Power beyond valve - Static description .....	6-103

## THREE POINT HITCH

ATTACHING THREE-POINT HITCH EQUIPMENT .....	6-104
LIFT ROD ADJUSTMENT .....	6-106
TOP LINK ADJUSTMENT .....	6-108
FLEXIBLE LINK END ADJUSTMENT .....	6-109
QUICK HITCH .....	6-110
LINKAGE STABILISER ADJUSTMENT .....	6-112

## DRAWBARS AND TOWING ATTACHMENTS

DRAWBARS AND TOWING ATTACHMENTS .....	6-116
SWINGING DRAWBARS.....	6-118
AUTOMATIC PICK-UP HITCH .....	6-121
REAR TOW HITCH.....	6-123

## TRAILER BRAKING SYSTEMS

AIR-OPERATED TRAILER BRAKES .....	6-129
AIR-OPERATED TRAILER BRAKES (Italy only).....	6-132
TRAILER BRAKE BIAS CONTROL .....	6-133
AUXILIARY AIR SUPPLY CONNECTOR (where fitted).....	6-133
HYDRAULIC TRAILER BRAKES .....	6-134
HYDRAULIC TRAILER BRAKES (Italy only).....	6-135

## WHEEL TRACK ADJUSTMENT

FRONT WHEEL TRACK ADJUSTMENT .....	6-136
FRONT WHEEL ALIGNMENT .....	6-139
STEERING STOPS .....	6-140
FRONT AXLE OSCILLATION STOPS .....	6-140
FRONT FENDER.....	6-141
REAR WHEEL TRACK ADJUSTMENT .....	6-143
FLANGE TYPE AXLE (where fitted) .....	6-143
BAR TYPE AXLE (where fitted) .....	6-147

## BALLASTING AND TYRES

BALLASTING AND TYRES .....	6-153
IRON WEIGHTS (where fitted) .....	6-156
LIQUID BALLAST .....	6-158
TYRE INFLATION .....	6-160
TYRE PRESSURES AND PERMISSIBLE LOADS .....	6-161

## AUXILIARY POWER CONNECTIONS

DIAGNOSTIC SOCKET .....	6-163
-------------------------	-------

---

TRAILER SOCKET ELECTRICAL .....	6-163
ELECTRICAL POWER CONNECTORS .....	6-164
INTERNAL POWER CONNECTORS .....	6-164
EXTERNAL POWER CONNECTORS .....	6-166

## 7 MAINTENANCE

### GENERAL INFORMATION

INTRODUCTION .....	7-1
FUEL REQUIREMENT .....	7-2
BIODIESEL FUEL .....	7-4
ENGINE OIL CHANGE .....	7-6
PROTECTIVE DEVICES .....	7-7
LUBRICANTS AND COOLANTS .....	7-9
TRACTOR JACKING POINTS .....	7-11
GENERAL SPECIFICATIONS .....	7-12
CAPACITIES .....	7-13

### MAINTENANCE CHART

Maintenance Chart .....	7-14
-------------------------	------

### WHEN THE WARNING LAMP LIGHTS

CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT .....	7-16
DRAIN FUEL SYSTEM WATER SEPARATOR .....	7-17

### EVERY 10 HOURS OR EACH DAY

CHECK ENGINE COOLANT LEVEL .....	7-18
CHECK ENGINE OIL LEVEL .....	7-19
CHECK REMOTE CONTROL VALVE DRAIN BOTTLES .....	7-19
CHECK WINDSCREEN WASHER RESERVOIR .....	7-20
DRAIN AIR RESERVOIR ON AIR OPERATED TRAILER BRAKE .....	7-20

### FIRST 50 HOURS

SERVICE OPERATIONS .....	7-21
--------------------------	------

### EVERY 50 HOURS

CLEAN THE CAB AIR FILTER .....	7-23
CLEAN THE SCR COVER AIR DUCTS .....	7-25
CLEAN THE COOLER SECTION .....	7-26
ALL GREASE FITTINGS .....	7-27
CHECK FRONT AND REAR WHEEL NUTS .....	7-34
CHECK TYRE PRESSURES AND TYRE CONDITION .....	7-34

### EVERY 100 HOURS

INSPECT POLY V-BELT .....	7-35
INSPECT COMPRESSOR DRIVE BELT .....	7-35

### EVERY 300 HOURS

CHECK BATTERY FLUID LEVEL .....	7-36
ADJUST HANDBRAKE .....	7-37

---



CHECK TRANSMISSION/REAR AXLE AND HYDRAULIC OIL LEVEL .....	7-38
CHECK 4WD FRONT AXLE DIFFERENTIAL AND HUBS OIL LEVEL .....	7-39
CHECK FRONT P.T.O. GEARBOX OIL LEVEL .....	7-40

## EVERY 600 HOURS

CHANGE ENGINE OIL AND FILTER .....	7-41
CHANGE FUEL PRE-FILTER AND FUEL FILTER ELEMENT .....	7-43
CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT .....	7-44
CHANGE CHARGE PUMP OIL FILTER .....	7-45
CHECK ENGINE AIR INTAKE CONNECTIONS .....	7-46
CHECK TRANSMISSION OIL COOLER PIPE COUPLINGS .....	7-47
CLEAN DEF/ AdBlue INLINE FILTER .....	7-48

## EVERY 1200 HOURS OR ANNUALLY

CHANGE CAB AIR FILTERS .....	7-49
CHANGE MAIN OIL FILTER CARTRIDGE .....	7-50
CHANGE TRANSMISSION/ REAR AXLE AND HYDRAULIC OIL .....	7-51
CHANGE 4WD DIFFERENTIAL OIL .....	7-52
CHANGE 4WD PLANETARY HUB OIL .....	7-53
GREASE REAR AXLE SHAFT BEARING .....	7-54

## EVERY 1200 HOURS OR EVERY 2 YEARS

CHECK BATTERY FLUID LEVEL .....	7-55
CHANGE DEF/ AdBlue INLINE FILTER .....	7-56
CHANGE ENGINE AIR CLEANER INNER ELEMENT .....	7-57
CHECK VALVE TAPPET CLEARANCE .....	7-58
CHANGE ENGINE COOLANT FLUID .....	7-59
CHANGE AIR BRAKE DRIER RESERVOIR .....	7-63
CHANGE POLY V-BELTS .....	7-64

## EVERY 1800 HOURS OR EVERY 2 YEARS

CHANGE ENGINE BREATHER FILTER .....	7-65
-------------------------------------	------

## EVERY 3600 HOURS OR EVERY 2 YEARS

CHANGE DEF/ AdBlue MAIN FILTER .....	7-65
--------------------------------------	------

## EVERY 36 MONTHS

SERVICE THE AIR CONDITIONER SYSTEM .....	7-66
CHECK BATTERY FLUID LEVEL .....	7-67

## GENERAL MAINTENANCE

CLEANING THE TRACTOR .....	7-69
FUEL SYSTEM PRE- FILTER AND WATER TRAP .....	7-71
BLEEDING THE FUEL INJECTION SYSTEM .....	7-71
CHECK BRAKE PEDAL LATCHING/UNLATCHING .....	7-72
ADJUST CAB SUSPENSION (where fitted) .....	7-73
ADJUST AUTOMATIC PICK- UP HITCH .....	7-74
TRANSMISSION CLUTCH CALIBRATION .....	7-75
HEADLIGHT AND WORKLAMP ADJUSTMENT .....	7-77
BULB REPLACEMENT .....	7-78
FUSES AND RELAYS .....	7-82

---

PROTECTING THE ELECTRONIC AND ELECTRICAL SYSTEMS DURING BATTERY CHARGING OR WELDING .....	7-87
BATTERY REMOVAL AND INSTALLATION .....	7-88

## STORAGE

TRACTOR STORAGE.....	7-89
PREPARATION FOR USE AFTER STORAGE .....	7-89

## 8 TROUBLESHOOTING

### FAULT CODE RESOLUTION

INTRODUCTION .....	8-1
--------------------	-----

### ALARM(S)

FAULT CODES AND SYMBOLS .....	8-2
-------------------------------	-----

### SYMPTOM(S)

ENGINE .....	8-4
TRANSMISSION .....	8-5
HYDRAULICS .....	8-5
THREE POINT HITCH .....	8-6
BRAKES.....	8-6
CAB.....	8-7
ELECTRICAL SYSTEM .....	8-7

## 9 SPECIFICATIONS

GENERAL DIMENSIONS .....	9-1
Frame - General specification .....	9-1
CAPACITIES .....	9-4
Transmission - Capacity .....	9-5
Front axle system - Capacity .....	9-5
ENGINE .....	9-6
TRANSMISSION .....	9-7
REAR POWER TAKE-OFF .....	9-8
FRONT POWER TAKE OFF .....	9-8
HYDRAULIC SYSTEM .....	9-9
THREE POINT HITCH .....	9-10
REMOTE CONTROL VALVES .....	9-11
THREE POINT HITCH FRONT .....	9-11
BRAKES.....	9-12
STEERING .....	9-12
ELECTRICAL EQUIPMENT.....	9-13
MINIMUM HARDWARE TIGHTENING TORQUES .....	9-14

 
## 10 ACCESSORIES

EXTERNAL REAR VIEW MIRRORS.....	10-1
AUXILIARY HEADLIGHTS .....	10-3
ROTATING BEACON.....	10-3
FRONT- END LOADER FIXATION POINTS .....	10-4

---

## 11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy .....	11-1
Service record 1st 50 hour, Dealer copy .....	11-3





For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes.

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, [1]
1.A.2	Represented by Guiseppe Gavioli CNH Europe Holding S.A. 24, Boulevard Royal L- 2449 Luxembourg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6]
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied:  • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: [7]
1.A.10	Name and signature of the authorised person: [8]

## HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- PASSENGER SEAT is certified according to **EN 15694**.
- FOPS level on your tractor cab is certified according to **OECD Code 10**.
- HVAC (Heating, ventilation Air Conditioning) CAB is certified Category 1 according to **EN 15695-1**.
- HV (Heating, ventilation) cab is certified Category 1 according to **EN 15695-1**.
- NOISE EMISSION LEVELS are rated according to **2009/76/EC** and **2009/63/EC**.
- VIBRATION LEVELS are rated according to **78/764/EEC**.

**NOTE:** See safety section 2 in this manual for further explanation and details on above mentioned standards and specific terminology.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)