

ORIGINAL INSTRUCTIONS

# OPERATOR'S MANUAL

---

**T7030**

**T7040**

**T7050**

**T7060**

Transmission

Power Command - Tractor

**Part number 47789308**

4<sup>th</sup> edition English

January 2015

*Replaces part number 47623313*



# Contents

---

## 1 GENERAL INFORMATION

Metric and Imperial units abbreviations .....	1-1
To the owner .....	1-3
Product identification .....	1-5
Engine identification .....	1-6
Drive line identification .....	1-7
Cab identification .....	1-7
Cab identification .....	1-8
Ecology and the environment .....	1-9
General Information .....	1-10
Programming tractor functions .....	1-12
Before operating the tractor .....	1-13
International symbols .....	1-14
Machine stability .....	1-15
Instructor's seat .....	1-19
Passenger's seat .....	1-20

## 2 SAFETY INFORMATION

Safety precautions .....	2-1
Safety decals .....	2-3
Safety rules .....	2-10
Fire or explosion prevention .....	2-17
Fire extinguisher .....	2-18
Protection offered by the tractor .....	2-19
Intended use statement .....	2-22

## 3 CONTROLS AND INSTRUMENTS

### ACCESS TO OPERATOR'S PLATFORM

Cab access/exit .....	3-1
Cab air filters .....	3-5
In cab storage (where applicable) .....	3-6
Cable routing .....	3-7
Mobile phone .....	3-7
Monitor installation .....	3-8
Cab air pressurisation control (where fitted) .....	3-8

### OPERATOR'S SEAT

Air suspension seat .....	3-10
Air suspension seat deluxe .....	3-12
Seat belt .....	3-17

### INSTRUCTOR'S SEAT

Instructional seat .....	3-18
--------------------------	------

---

## EXTERIOR CONTROLS

Passenger's seat .....	3-19
------------------------	------

## FORWARD CONTROLS

Key start switch .....	3-20
Hazard light switch .....	3-20
Light's and turn indicator lever .....	3-21
Follow me home light's .....	3-21
Windshield wiper and washer controls .....	3-22
Park brake and electronic park lock (EPL) .....	3-23
Foot brakes .....	3-27
Steering column .....	3-28
Airflow vents .....	3-29

## LEFT-HAND SIDE CONTROLS

Handbrake .....	3-30
-----------------	------

## RIGHT-HAND SIDE CONTROLS

Switch panel .....	3-31
--------------------	------

## REARWARD CONTROLS

Switch panel .....	3-32
Battery isolator switch (where fitted) .....	3-33
Climate controls .....	3-34
Temperature controls, cab .....	3-35

## OVERHEAD CONTROLS

Worklights .....	3-36
Radio or audio system .....	3-37
Interior light .....	3-37

## INSTRUMENT CLUSTER

Analogue digital instrument cluster .....	3-39
Gauges .....	3-39
Indicator and warning lights .....	3-40
Displays .....	3-42
Keypad enhanced .....	3-44
Display settings .....	3-46
Ground speed calibration .....	3-47
Performance monitor .....	3-52
Alarm functions .....	3-60
Error code access .....	3-62
Warning and advisory symbols .....	3-63
Color display .....	3-70
Color display screen .....	3-72
Performance monitor .....	3-78
Setting the implement width .....	3-81

---

## 4 OPERATING INSTRUCTIONS

### COMMISSIONING THE UNIT

Refueling the tractor .....	4-1
-----------------------------	-----

### STARTING THE UNIT

Engine start-up .....	4-2
Starting a cold engine .....	4-4
Fuel heater (where fitted) .....	4-5
Coolant immersion heater (where fitted) .....	4-5
Transmission oil heater (where fitted) .....	4-6
Booster battery procedure .....	4-7

### STOPPING THE UNIT

Engine shutdown .....	4-8
Engine automatic shutdown .....	4-8
Engine automatic shutdown with enhanced keypad (where fitted) .....	4-9

### MOVING THE UNIT

Engine start-up .....	4-10
-----------------------	------

## 5 TRANSPORT OPERATIONS

### PREPARING FOR ROAD TRANSPORT

Tractor transporting .....	5-1
Roof hatch .....	5-1

### RECOVERY TRANSPORT

Towing the tractor .....	5-2
--------------------------	-----

## 6 WORKING OPERATIONS

### GENERAL INFORMATION

Engine power management .....	6-1
Engine speed control .....	6-3
Differential control .....	6-5
Four wheel drive .....	6-7
Front axle suspension (where fitted) .....	6-10
Automated headland functions .....	6-11
Quick guide .....	6-11
Record and replay .....	6-13
Universal symbols .....	6-15
Record a sequence .....	6-16
Record and replay .....	6-18
Fast steering system (where fitted) .....	6-20

### TRANSMISSION

Full powershift transmission .....	6-22
------------------------------------	------

---

Clutch pedal .....	6-22
Foot throttle pedal .....	6-23
Hand throttle lever .....	6-23
Transmission operation .....	6-24
Transmission controls .....	6-25
Shuttle lever .....	6-26
Driving the tractor .....	6-27
Speed matching .....	6-29
Auto shifting in road mode .....	6-30
Powershift transmission - Control .....	6-30
Auto shifting field mode .....	6-33
Setting the forward and reverse gear ratios .....	6-36
Creeper gears .....	6-37
Transmission error codes .....	6-38
Ground speed Ground speeds .....	6-39

## REAR POWER TAKE-OFF

PTO operation safety rules .....	6-44
Front PTO drive shaft .....	6-44
Attaching Power-Take Off (PTO) driven equipment .....	6-45
PTO operation .....	6-46
Two speed PTO systems .....	6-52
Three speed PTO systems .....	6-53
PTO external controls .....	6-54
Auto PTO operation .....	6-56

## FRONT POWER TAKE OFF

Front Power Take-Off (PTO) operation .....	6-59
--	------

## REAR HITCH

Electronic Draft Control (EDC) .....	6-61
Rear hitch controls .....	6-64
Electronic Draft Control (EDC) .....	6-66
Slip limit .....	6-71
External EHR controls .....	6-72

## FRONT HITCH

Front hitch .....	6-74
Front hitch operation .....	6-77
Front hitch - Operating .....	6-82
Auxiliary front couplers (where fitted) .....	6-83
External hitch controls .....	6-85

## HYDRAULIC REMOTE CONTROL VALVES

Rear remote control valve(s) .....	6-86
Remote control valve operation .....	6-89
Connecting remote cylinders .....	6-92
Hydraulic oil level .....	6-94

---

## ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

Mid mount control valve .....	6-96
Mid-mount remote control valve Electrohydraulic remote valve - Adjust .....	6-97
Mid-mount remote control valve Electrohydraulic remote valve - Adjust .....	6-98
Joystick for control valves .....	6-102

## HYDRAULIC POWER BEYOND PORT

Power beyond circuit .....	6-105
Power beyond valve - Static description .....	6-107

## THREE POINT HITCH

Three-point hitch .....	6-108
Lift rods .....	6-110
Top link .....	6-112
Lower links .....	6-113
Quick hitch .....	6-114
Lower links .....	6-116

## DRAWBARS AND TOWING ATTACHMENTS

Drawbars and towing attachments .....	6-120
Drawbars and towing attachments .....	6-122
Rear tow hitch .....	6-126

## TRAILER BRAKING SYSTEMS

Trailer brakes air operated .....	6-132
Trailer brakes air operated (Italy only) .....	6-136
Trailer brake bias control .....	6-137
Auxiliary air supply .....	6-137
Trailer brakes hydraulic operated .....	6-138
Trailer brakes hydraulic operated (Italy only) .....	6-139

## WHEEL TRACK ADJUSTMENT

Front wheels .....	6-140
Front wheel alignment .....	6-144
Front axle .....	6-145
Front drive axle .....	6-145
Front wheel fenders .....	6-146
Rear axle .....	6-148
Rear axle .....	6-152
Dual wheels .....	6-159

## BALLASTING AND TIRES

Ballasting and tires .....	6-162
Iron weights (where fitted) .....	6-165
Liquid Ballast .....	6-167
Tire inflation .....	6-169
Tire load and inflation charts .....	6-170

---

## AUXILIARY POWER CONNECTIONS

Diagnostic socket.....	6-172
Trailer electrical socket.....	6-172
Internal power connectors.....	6-173
External power connectors.....	6-175

## 7 MAINTENANCE

### GENERAL INFORMATION

Introduction.....	7-1
Diesel fuel.....	7-2
Biodiesel fuel - Biodiesel fuels.....	7-3
Engine oil change.....	7-5
Protective devices.....	7-6
Lubricants and coolants.....	7-8
Tractor jacking points.....	7-10
General specifications.....	7-11
Capacities.....	7-12
Organic Acid Technology (OAT) coolant.....	7-13

### MAINTENANCE CHART

Maintenance chart.....	7-14
------------------------	------

### WHEN THE WARNING LAMP LIGHTS

Engine air cleaner.....	7-16
Draining the fuel filter water separator.....	7-17

### EVERY 10 HOURS OR EACH DAY

Engine coolant level.....	7-18
Engine oil level.....	7-19
Remote valve collection bottle.....	7-19
Windscreen washer reservoir.....	7-20
Trailer brakes air operated.....	7-20

### FIRST 50 HOURS

Service operations.....	7-21
-------------------------	------

### EVERY 50 HOURS

Cab air filters.....	7-22
Engine and hydraulic coolers.....	7-24
Grease fittings.....	7-25
Wheel and axle torques.....	7-32
Tire inflation pressures.....	7-32

### EVERY 100 HOURS

Drive belts.....	7-33
Drive belts.....	7-33

---

## EVERY 300 HOURS

Battery electrolyte level .....	7-34
Handbrake .....	7-35
Transmission rear axle and hydraulic system oil level .....	7-36
Front axle .....	7-37
Front PTO oil level .....	7-37

## EVERY 600 HOURS

Change engine oil and filter .....	7-38
Fuel filters .....	7-40
Engine air cleaner .....	7-41
Transmission / hydraulic oil filters .....	7-42
Engine air intake hoses .....	7-43
Transmission oil cooler .....	7-44

## EVERY 1200 HOURS OR ANNUALLY

Cab air filters .....	7-45
Transmission / hydraulic oil filters .....	7-46
Transmission oil .....	7-47
Front axle differential oil level .....	7-48
Front axle - hubs .....	7-49
Front Power Take-Off (PTO) .....	7-49
Rear axle drive shaft .....	7-50

## EVERY 1200 HOURS OR EVERY 2 YEARS

Battery check .....	7-51
Engine air cleaner .....	7-52
Adjustment of engine valve rocker clearances .....	7-53
Change the engine coolant fluid - Conventional type coolant .....	7-54
Trailer brakes air operated .....	7-58
Drive belts .....	7-59

## EVERY 1800 HOURS OR EVERY 2 YEARS

Engine breather filter .....	7-60
------------------------------	------

## EVERY 3600 HOURS OR EVERY 4 YEARS

Change the engine coolant fluid - OAT type coolant .....	7-61
--	------

## EVERY 36 MONTHS

Air conditioning system .....	7-65
Battery check .....	7-66

## GENERAL MAINTENANCE

Cleaning the tractor .....	7-67
Fuel filter water drain .....	7-69
Fuel system bleeding .....	7-69

---



Brake pedals .....	7-70
Cab suspension, if equipped .....	7-71
Adjust the automatic pickup hitch .....	7-72
Adjust the automatic pickup hitch .....	7-73
Clutch calibration .....	7-74
Lighting system .....	7-76
Bulb replacement .....	7-77
Fuses and relays .....	7-81
Protection of the electronic modules during welding operations .....	7-87
Battery removal and installation .....	7-88

## STORAGE

Tractor storage .....	7-89
Removal of tractor from storage .....	7-89

## 8 TROUBLESHOOTING

### FAULT CODE RESOLUTION

Introduction .....	8-1
--------------------	-----

### ALARM(S)

Vehicle fault codes .....	8-2
---------------------------	-----

### SYMPTOM(S)

Engine .....	8-4
Transmission .....	8-5
Hydraulics .....	8-5
Three-point hitch .....	8-6
Brakes .....	8-6
Cab .....	8-6
Electrical system .....	8-7

## 9 SPECIFICATIONS

General dimensions .....	9-1
Frame - General specification .....	9-1
Capacities .....	9-3
Transmission - Capacity .....	9-3
Front axle system - Capacity .....	9-3
Engine .....	9-4
Transmission .....	9-5
Rear PTO .....	9-6
Front Power Take-Off (PTO) .....	9-6
Hydraulic system .....	9-7
Three-point hitch .....	9-9
Remote control valves .....	9-9
Three-point hitch .....	9-9
Brakes .....	9-10
Steering system .....	9-10
Electrical equipment .....	9-11

---

Minimum hardware tightening torques .....	9-12
---	------

## 10 ACCESSORIES

Rear view mirrors.....	10-1
Lighting system.....	10-3
Roof beacon.....	10-3
Front loader support.....	10-4

## 11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy .....	11-1
Service record 1st 50 hour, Dealer copy .....	11-3

# 1 - GENERAL INFORMATION

## Metric and Imperial units abbreviations

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m <sup>2</sup>	square foot	ft <sup>2</sup>
			square inch	in <sup>2</sup>
	square millimeter	mm <sup>2</sup>	square inch	in <sup>2</sup>
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	μF	microfarad	μF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency - Rotational				
	revolution per minute	r/min	revolution per minute	r/min <sup>a</sup>
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	μm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per mass				
	milligram per kilogram	mg/ kg	parts per million	ppm
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH <sub>2</sub> O
	megapascal	MPa	pound per square inch	psi
	millibar	mbar		
	bar	bar		

1 - GENERAL INFORMATION

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Temperature (other than thermodynamic)				
	degrees Celsius	°C	degrees Fahrenheit	°F
Time				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
Torque (includes bending moment, moment of force, and moment of a couple)				
	newton meter	N m	pound foot	lb ft
			pound foot	lb in
Velocity				
	kilometer per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimeter per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
Volume (includes capacity)				
	cubic meter	m <sup>3</sup>	cubic yard	yd <sup>3</sup>
				cu yd
	liter	l	cubic inch	in <sup>3</sup>
	liter	l	US gallon	US gal
			UK gallon	UK gal
			US quart	US qt
			UK quart	UK qt
	milliliter	ml	fluid ounce	fl oz
Volume per time (includes discharge and flow rate)				
	cubic meter per minute	m <sup>3</sup> /min	cubic foot per minute	ft <sup>3</sup> /min
	liter per minute	l/min	US gallon per minute	US gal/min
	milliliter per minute	ml/min	UK gallon per minute	UK gal/min
Sound power level and sound pressure level				
	decibel	dB	decibel	dB
Water hardness				
	German hardness	°dH	English hardness	°e
	French hardness	°fH	parts per million	ppm

**Glossary**

Acronym	Definition
DEF	Diesel Exhaust Fluid
ISO	International Organization for Standardization
MSDS	Material Safety Data Sheet
NOx	Nitrogen Oxide
PPE	Personal Protective Equipment
SCR	Selective Catalytic Reduction
ULSD	Ultra Low Sulfur Diesel
%	Percent
<	Less than
>	Greater than

## To the owner

### GENERAL INFORMATION

This Manual has been prepared to assist you in the correct procedure for running- in, driving and operating and for the maintenance of your new tractor. Read this Manual carefully. Your tractor is intended for use in normal and customary agricultural applications.

If at any time you require advice concerning your tractor, do not hesitate to contact your authorised dealer. He has factory trained personnel, genuine manufacturers' parts and the necessary equipment to carry out all your service requirements.

The specification are provided for your information and guidance. For further information concerning your tractor and equipment, consult your authorised dealer.

All data given in this manual is subject to production variations. Dimensions and weight are approximate only. The illustrations do not necessarily show tractors in standard condition or imply that these features are available in all countries. For exact information about any particular tractor, please consult your authorised dealer.

Your tractor has been designed and built to give maximum performance, economy and ease of operation under a wide variety of operating conditions. Prior to delivery, the tractor was carefully inspected, both at the factory and by your dealer to ensure that it reaches you in optimum condition. To maintain this condition and ensure trouble-free operation, it is important that the routine services, as specified in Maintenance Section of this Manual, are carried out at the recommended intervals.

### ABOUT THIS MANUAL

This manual gives information for use of your machine, as intended and under the conditions foreseen by the manufacturer during normal operation and routine service and maintenance.

Read and understand; keep it in good condition and always safely store it in the provided pocket in the back of your seat for later easy retrieval.

This manual does not contain all the information related to periodical service, converting and repairs to be carried out by professional service personnel.

The Table of Contents page(s) are provided to have an overview of main manual's topics. A detailed alphabetic index is available at the end of this manual for locating specific items.

### Normal operation

- Normal operation means the use of the tractor for the purpose intended by the manufacturer by an operator familiar with the tractor and the mounted or towed equipment and complying with the information for op-

eration and safe practices, as specified by the manufacturer in this manual and by the decals on the tractor and the equipment.

- Normal operation includes the preparation and storage of the tractor, swinging components into work position and vice versa, adding or removing ballast and picking up and setting off attachments.
- Normal operation includes the adjustment and setting of the tractor and equipment, for the specific condition of the field and/ or the crop.

### Routine service

- Routine service and maintenance means activities that must be done daily by an operator familiar with the tractor characteristics and complying with the information for routine service and safe practices, as specified by the manufacturer in this manual and by decals on the tractor, in order to maintain its proper function. Routine service includes activities such as fueling, cleaning, washing, topping up fluid levels, greasing, replacing of consumable articles such as lamp bulbs.

### Converting, periodical service and repair

- Periodical service means activities that must be done at defined intervals by trained personnel familiar with the tractor characteristics and which are complying with the information for periodical service and safe practices, as partly specified by the manufacturer in this manual and in other Company literature, in order to maintain the expected life time of the tractor.
- Converting means activities that must be done by professional service personnel familiar with the tractor characteristics and complying with the information for converting, as partly specified by the manufacturer in this manual, in assembly instructions or in other Company literature, in order to fit the tractor to a specific configuration.
- Repair means activities that must be done by professional service personnel only familiar with the tractor characteristics and complying with the information for repair, as specified by the manufacturer in the dealer's workshop manual, in order to restore the proper function of the tractor after a failure or degradation of performance.

### CLEANING THE TRACTOR

Your tractor is a state- of- the- art machine with sophisticated, electronic controls. This should be taken into consideration when cleaning the tractor, particularly if using a high pressure washer. Even though every precaution has been taken to safeguard electronic components and connections, the pressure generated by some of these machines is such that complete protection against water ingress cannot be guaranteed.

When using a high pressure washer, do not stand too close to the tractor and avoid directing the jet at electronic components, electrical connections, breathers, seals, filler caps, etc. Never direct a cold water jet at a hot engine or exhaust.

Failure to comply with these rules will render the warranty null and void.

## SAFETY

The pages in Section 2 list the precautions to be observed to ensure your safety and the safety of others. Read the safety precautions and follow the advice offered before operating the tractor.

## FIRST 50 HOUR SERVICE

In Section 11, at the back of this Manual, you will find the 50- hour service reports.

**NOTICE:** *It is important the 50 hour service is carried out as recommended to ensure your tractor provides optimum performance and efficiency.*

After you have operated the tractor for 50 hours, take your tractor, together with this Manual, to your dealer. He will then perform the factory recommended 50 hour service and complete the service report sheets. The first sheet is your copy of the service performed. The second sheet is the dealer's copy and should be removed by the dealer after the service has been carried out. Ensure that you and the dealer sign both copies.

## SERVICE PARTS

It should be pointed out that genuine parts have been examined and approved by the Company. The installation

and/ or use of 'non- genuine' products could have negative effects upon the design characteristics of your tractor and thereby affect it's safety. The Company is not liable for any damage caused by the use of 'non- genuine' parts and accessories. Only genuine replacement parts should be used. The use of non- genuine parts may invalidate legal approvals associated with this product.

It is prohibited to carry out any modifications to the tractor unless specifically authorised, in writing, by the After Sales Service department of the Company.

## WARRANTY

Your tractor is warranted according to legal rights in your country and the contractual agreement with the selling dealer. No warranty shall, however, apply if the tractor has not been used, adjusted and maintained according to the instructions given in the Operator's Manual.

## USE OF BIODIESEL FUELS

**NOTICE:** *Before using Biodiesel fuels in your tractor, refer to the information on page regarding the storage and use of Bio diesel fuels.*

## EMISSION CONTROLS

**NOTE:** *The engine and fuel system on your machine is designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/ or repairs must be done by a certified technician only!*

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)