

ORIGINAL INSTRUCTIONS

OPERATOR'S MANUAL

T8.320

T8.350

T8.380

T8.410

T8.435

T8.380 SmartTrax™

T8.410 SmartTrax™

T8.435 SmartTrax™

Tractor

PIN ZFRE05001 and above

Part number 47886380

1st edition English

August 2015



Contents

NOTE: The Operator's Manual consists of two volumes. The first volume contains operating information, the second volume the maintenance and diagnostic information.

1 GENERAL INFORMATION

Note to the owner.....	1-1
Engine tampering.....	1-2
Tractor intended use.....	1-2
Electro-magnetic compatibility (EMC).....	1-3
ISOBUS certification.....	1-4
Product identification.....	1-5
Manual storage.....	1-8
Machine orientation.....	1-9
Component identification.....	1-10

2 SAFETY INFORMATION

Safety rules and signal word definitions.....	2-1
Safety rules - General.....	2-2
Safety rules - General maintenance safety.....	2-4
Safety rules - Wheels and tires.....	2-4
Safety rules - Driving on public roads and general transportation safety.....	2-4
Safety rules - Fire and explosion prevention.....	2-5
Safety rules - General battery safety.....	2-5
Safety rules - Hydraulic system safety.....	2-6
Safety rules - Instructional seat safety.....	2-6
Safety rules - Operator presence system.....	2-7
Safety rules - Power Take-Off (PTO).....	2-7
Safety rules - Reflectors and warning lights.....	2-7
Safety rules - Seat belts.....	2-7
Safety rules - Roll Over Protective Structure (ROPS).....	2-7
Safety rules - Cab protection.....	2-9
Safety rules - Air conditioning system.....	2-9
Safety rules - Personal Protective Equipment (PPE).....	2-9
Safety rules - Do Not Operate tag.....	2-9
Safety rules - Hazardous chemicals.....	2-9
Safety rules - Utility safety.....	2-10
Safety rules - Electrical storm safety.....	2-10
Safety rules - Mounting and dismounting.....	2-10
Safety rules - Working at heights.....	2-11
Safety rules - Lifting and overhead loads.....	2-11
Safety rules - Implements, tools and trailers.....	2-11
Safety rules - Roll over and tip over.....	2-12
Ecology and the environment.....	2-13
Safety signs.....	2-14

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Tractor access	3-1
Lower step	3-3

OPERATOR'S SEAT

Control identification	3-4
------------------------------	-----

INSTRUCTOR'S SEAT

Overview	3-8
----------------	-----

FORWARD CONTROLS

Steering column	3-9
Front console	3-12
Pedal controls	3-14

LEFT-HAND SIDE CONTROLS

Pneumatic trailer brake	3-16
-------------------------------	------

RIGHT-HAND SIDE CONTROLS

Armrest console	3-17
Multi function handle	3-19
Engine speed control	3-24
Control panel	3-25
Remote valve controls	3-32
Joystick	3-33
Rear hitch controls	3-35
Armrest compartment	3-37
Adjusting the armrest console	3-39

REARWARD CONTROLS

Fender console	3-40
Automatic temperature controls	3-43
Automatic temperature control system	3-46
Ventilation	3-47

OVERHEAD CONTROLS

Interior lamps	3-49
----------------------	------

EXTERIOR CONTROLS

Rear fender	3-50
Front hitch	3-52

INSTRUMENT CLUSTER

Overview	3-53
Gauges	3-54
Status and warning icons	3-55

Upper display	3-58
Keypad	3-61
Setup menu.....	3-63
Rear tire radius and track radius charts	3-69
Adjust menu	3-70
Performance features	3-78

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Engine - Safety rules	4-1
-----------------------------	-----

STARTING THE UNIT

Normal engine starting	4-4
Cold starting aids	4-8
Cold temperature operation	4-10

STOPPING THE UNIT

Stopping the engine	4-12
---------------------------	------

MOVING THE UNIT

FULL POWERSHIFT TRANSMISSION	4-14
Powershift transmission	4-14
Best practices for prolonged transmission life.....	4-15
Inching pedal and throttle.....	4-16
Powershift transmission controls	4-17
Upper display - Powershift transmission	4-20
Driving the Powershift vehicle	4-22
Setting default gears	4-27
Ground Speed Management (GSM)	4-29
CONTINUOUSLY VARIABLE TRANSMISSION (CVT)	4-37
Auto Command brake, pedal and throttle operation.....	4-37
Auto Command controls	4-43
Upper display	4-48
Auto Command operation	4-49
Driving the Auto Command transmission.....	4-55
Transmission messages	4-60
POWERSHIFT AND CVT TRANSMISSIONS	4-62
Mechanical Front Drive (MFD)	4-62
Differential lock system	4-65
Suspended axle	4-67
Ride control.....	4-72
Engine power boost	4-74
Constant engine speed	4-75
Suspended cab.....	4-78
Headland management system	4-79

PARKING THE UNIT

Automatic park lock.....	4-85
--------------------------	------

5 TRANSPORT OPERATIONS

ROAD TRANSPORT

Tractor warning lamps and Slow Moving Vehicle (SMV) symbol.....	5-1
Tractor warning lamps.....	5-2
Safe transport speed.....	5-4
Implement warning lamps and Slow Moving Vehicle (SMV) symbol.....	5-5
Safety chain.....	5-6

SHIPPING TRANSPORT

Securing the tractor for shipping.....	5-7
--	-----

RECOVERY TRANSPORT

Safety rules.....	5-8
Towing the tractor.....	5-9

6 WORKING OPERATIONS

GENERAL INFORMATION

Overview.....	6-1
---------------	-----

REAR POWER TAKE-OFF (PTO)

Safety rules.....	6-2
Connecting the Power Take-Off (PTO).....	6-5
Interchangeable Power Take-Off (PTO) shaft.....	6-6
Rear Power Take-Off (PTO) operation.....	6-12
Power Take-Off (PTO) fender switch operation.....	6-16
Auto Power Take-Off (PTO) operation.....	6-17

FRONT POWER TAKE-OFF (PTO)

Overview.....	6-20
Front Power Take-Off (PTO) operation.....	6-21

REAR HITCH

Identification.....	6-24
Link adjustment.....	6-25
Hitch high clearance adjustment.....	6-29
Hydraulic links.....	6-32
Sway limiter adjustment.....	6-34
Lower link block adjustment.....	6-35
Mechanical float adjustment.....	6-37
Hitch quick coupler - Category III/IIIN.....	6-38
Hitch quick coupler - Category IVN.....	6-43
Hitch operation.....	6-47

Hitch remote switch operation	6-52
Position control operation	6-53
Load control operation.....	6-55
Slip control operation	6-57
Hitch set point	6-59

FRONT HITCH

Overview	6-61
Front hitch operation	6-61

DRAWBARS AND TOWING ATTACHMENTS

Safety rules	6-68
Drawbar capacity/position	6-69
Adjusting the drawbar	6-73

TRAILER BRAKING SYSTEMS

Safety rules	6-75
Trailer brake connections.....	6-76
Air pressure monitoring.....	6-77

AUXILIARY CONNECTIONS

Auxiliary power and lighting	6-78
Cab power connections	6-80
Radar connection.....	6-81
Implement ISOBUS connector	6-82

HYDRAULIC REMOTE CONTROL VALVES

Valve couplers and connections	6-83
Motor return circuit	6-87
Power beyond circuit	6-88
Flow capacity	6-89
Hydraulic transport lock	6-90
Operating the controls	6-91
Remote valve display screens.....	6-95
Remote hydraulic auto mode.....	6-98
Auto depth control	6-101
Joystick operation	6-103

BALLASTING THE TRACTOR

Guidelines	6-107
Tire load and inflation charts	6-118
Weights, cast metal.....	6-132
Wheel slip and power hop performance	6-146

MECHANICAL FRONT DRIVE (MFD) AXLES

Front axle identification.....	6-149
--------------------------------	-------

Tire combinations and tread positions.....	6-150
Steering and oscillation stops	6-158
Tread and fender settings - Class 4.75 and 5.0 fixed front axles.....	6-160
Tread and fender settings - Class 4.75 and 5.0 saddle suspended front axles ..	6-168
Tread and fender settings - Class 5.0 wide front axles.....	6-175
Front wheel fenders	6-177
Front wheel fenders - Class 4.75 and 5.0 fixed and suspended axles	6-178
Front wheel fenders - Class 5.0 wide fixed and suspended axles	6-183

REAR AXLE

Rear wheel installation	6-188
Rear wheel tread settings	6-192
Dual/triple wheel setup for 508 mm (20 in)/559 mm (22 in) row spacing.....	6-200
Adjustable rear wheel	6-207

REAR TRACKS

Tire load and inflation charts - - Tractors with rear tracks	6-209
Maximum front ballast recommendations	6-211
Front wheel tread settings.....	6-212
Track preconditioning.....	6-217
Factory and field track settings	6-219

7 MAINTENANCE

GENERAL INFORMATION

Safety rules.....	7-1
Maintenance guidelines	7-2
Opening the hood	7-3
Closing the hood	7-5
Filling the fuel tank	7-6
Battery disconnect switch	7-8
Battery access and service	7-9
Tire and rim service.....	7-10
Tractor jacking points.....	7-12
Capacities	7-14
Consumables - Engine oil	7-15
Consumables - Transmission/hydraulic system fluid	7-16
Consumables - Diesel fuel	7-17
Consumables - Organic Acid Technology (OAT) coolant	7-18
Maintenance chart notes	7-20
Maintenance summary decal.....	7-21

Maintenance planning

Maintenance chart.....	7-22
------------------------	------

At warning message display

Air filter service icon/message*	7-24
Water in fuel message.....	7-27
Transmission oil filter switch.....	7-29

Hydraulic oil filter switch	7-32
-----------------------------------	------

First 10 to 50 hours

Wheel bolt torque	7-35
Weight bolt torque	7-36
Differential and planetary oil	7-37

Every 10 hours or daily

Engine oil level	7-38
Transmission oil level	7-39
Engine coolant level	7-40
Air reservoir	7-40
Rear hitch and front axle	7-40

Every 50 hours or weekly

Engine auxiliary fuel filter	7-41
------------------------------------	------

First 100 hours

Powershift transmission clutch calibration	7-43
--	------

Every 100 hours

Front hitch	7-49
Front Power Take-Off (PTO) drive shaft	7-51

Every 200 hours

Track alignment	7-52
-----------------------	------

Every 300 hours

Battery water level (Note B)	7-53
Engine air intake and exhaust hoses	7-55
Engine coolant level - deaeration tank	7-57
Weight bolt torque	7-58
Front axle (Note A)	7-59
Rear hitch (Note A)	7-61
Fuel tank	7-63
Differential and planetary oil level (Note B)	7-64
Transmission oil pressure	7-65
Front Power Take-Off (PTO) oil level	7-66

Every 400 hours

Cab air filter*	7-67
-----------------------	------

Every 600 hours

Engine oil and filter*	7-70
------------------------------	------

Engine coolant antifreeze protection	7-73
Engine coolant hoses and clamps.....	7-73
Engine fuel filter*	7-75
Engine auxiliary fuel filter*	7-78
Fuel system bleeding	7-80
Changeable Power Take-Off (PTO) internal splines.....	7-81
Diesel Exhaust Fluid (DEF)/AdBlue® in-line filter	7-82
Front Power Take-Off (PTO) oil and filter*	7-83
Front Power Take-Off (PTO) dropbox oil	7-85
Engine air precleaner*	7-86

Every 1000 hours or annually

Pneumatic brake system dryer	7-87
Powershift transmission clutch calibration.....	7-88

Every 1200 hours or annually

Differential and planetary oil.....	7-94
Engine air filters*	7-98

Every 1500 hours

Transmission oil	7-101
Hydraulic oil filter*	7-104
Transmission oil filter*	7-105
Idler/roller wheel oil	7-106
Engine crankcase filter*	7-107

Every 3000 hours

Engine valve adjustment (Note C).....	7-111
---------------------------------------	-------

Every 4000 hours or every four years

Engine coolant.....	7-112
---------------------	-------

As required

Vehicle fire prevention	7-114
Track inspection and bolt torque	7-115
Track rotation	7-115
Track drive wheel and idler bolt torque	7-115
Track tension release.....	7-116
Track alignment.....	7-118
Cab air filter*.....	7-120
Grille screen and radiator area	7-123
Fuel tank vent filter	7-124
Transmission clutch and accumulator	7-124
Tire pressure	7-125
Fan belt.....	7-126
Remote valve collection bottle.....	7-132
Remote valve couplers	7-133

Cab fabric and carpet.....	7-134
Seat belt	7-134

Fuse and relay locations

Electrical component location	7-135
Lamps and bulbs	7-140

STORAGE

Preparing for storage	7-141
Removal from storage	7-142

ELECTRICAL SYSTEM

Radio or audio system.....	7-143
Battery removal and installation	7-144
Auxiliary battery connections	7-146
Headlight	7-147
LED work lights	7-148
Grille work light	7-148
Fender tail light and warning light	7-149
Roof warning light	7-150
Roof work light.....	7-150
High intensity work light	7-151
Wide transport marker light.....	7-152
Rotating beacon light.....	7-153
Interior light	7-154

8 TROUBLESHOOTING

ALARM(S)

Display warnings overview	8-1
Display warnings - Level 1	8-2
Display warnings - Level 2	8-4
Display warnings - Level 3	8-7
Display warnings - Level 4	8-8

SYMPTOM(S)

Engine symptoms	8-9
Transmission symptoms.....	8-11
Hydraulic symptoms	8-12
Hitch symptoms	8-13
Brake symptoms.....	8-14
Cab environment symptoms.....	8-14
Electrical power system symptoms.....	8-15

9 SPECIFICATIONS

Engine specifications	9-1
Power train specifications	9-2
Operating speeds.....	9-6

Operating speeds - SmartTrax™ tractors 9-7
Vehicle dimensions and shipping weight 9-11
Vehicle dimensions and shipping weight - SmartTrax™ tractors 9-18
Maximum operating weight 9-20

10 ACCESSORIES

Farming system displays 10-1
Rear view mirrors 10-2
Chemical tank mounting 10-4
Loader connection and operation 10-6
General accessories 10-7

11 FORMS AND DECLARATIONS

Delivery report - owner copy 11-1
Delivery report - dealer copy 11-2
First service - owner copy 11-4
First service - owner copy 11-6

1 - GENERAL INFORMATION

Note to the owner

This manual contains important information about the safe operation, adjustment and routine maintenance of your T8. or T8. **SmartTrax™** series tractor. The manual is divided into 10 chapters as outlined in the table of contents. Refer to the index at the end of this manual for locating specific items about your tractor.

Do NOT operate or permit anyone to operate or service this machine until you or the other persons have read this manual. Use only trained operators who have demonstrated the ability to operate and service this machine correctly and safely.

Tractors equipped with rear tracks

On **SmartTrax™** models, refer to the information starting on page **Operating speeds - SmartTrax™ tractors** for transport speed weight limitations.

This Operator's Manual is to be stored in the manual compartment behind the operator's seat in the vehicle. Make sure this manual is in good condition. Contact your dealer to obtain additional manuals.

Your NEW HOLLAND dealer will instruct you in the general operation of your new equipment. Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your machine. They will also provide any after-sales service you may need, and genuine NEW HOLLAND parts, your guarantee of quality and match.

See Operator's Manual for
Transport Speed Weight Guidelines

kph/mph

Kg/lbs

code 00000000A

RAIL14TR03870BA 1

Engine tampering

The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators, and users is strictly prohibited by law.

Failure to comply could result in government fines, rework charges, invalid warranty, legal action, and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!

Tractor intended use

T8. or T8. **SmartTrax™** series tractors, with standard equipment and authorized attachments, are intended to be used for customary farming, land leveling and related agriculture operations (intended use). Installation of utility (dozer) blades, tile plows, or push bars on the tractor is not recommended. Any tractor damage resulting from the installation and/or use of such equipment is not covered by the tractor warranty.

Consult an authorized dealer or CNH Industrial America LLC on changes, additions or modifications that can be required for this machine to comply with various regulations and safety requirements. Unauthorized modifications will cause serious injury or death. Anyone making such unauthorized modifications is responsible for the consequences.

The tractor is not designed for light/heavy forestry applications; usage is prohibited for forestry applications.

Do not use this machine for any purpose or in any manner other than as described in the manual, decals, or other product safety information provided with the machine. These materials define the machine's intended use.

Use in any other way is considered as contrary to the intended use. The manufacture accepts no liability for any damage or injury resulting from this misuse and these risks must be born solely by the user.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com