

ORIGINAL INSTRUCTIONS

OPERATOR'S MANUAL

T6.120

T6.140

T6.150

T6.155

T6.160

T6.165

T6.175

Tractor

Part number 47897244

6th edition English

June 2016

Replaces part number 47777130



Contents

1 GENERAL INFORMATION

Metric and imperial units abbreviations.....	1-1
To the owner.....	1-3
Product identification.....	1-5
Engine identification.....	1-6
Drive line identification.....	1-7
Cab identification.....	1-7
Product identification.....	1-8
Ecology and the environment.....	1-9
Programming tractor functions.....	1-10
Operator's manual storage.....	1-11
Before operating the tractor.....	1-12
International symbols.....	1-13
Machine stability.....	1-14
Selective Catalytic Reduction (SCR) system.....	1-18

2 SAFETY INFORMATION

Safety precautions.....	2-1
Safety decals.....	2-3
Safety rules.....	2-11
Burn prevention.....	2-18
Prevention of fire or explosions.....	2-19
Fire extinguisher.....	2-20
Protection offered by the tractor.....	2-21
Hazardous substances.....	2-24
Emergency exit.....	2-25
Wheel chocks.....	2-26
Intended use statement.....	2-27
Instructor's seat.....	2-29

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Introduction.....	3-1
Cab air filters.....	3-5
In cab storage (where fitted).....	3-6
Cable and wiring routing.....	3-7
Mobile telephone usage.....	3-7
Implement monitor installation.....	3-8
Cab air pressurisation control (where fitted).....	3-8

OPERATOR'S SEAT

Mechanical seat deluxe (where fitted).....	3-10
Air suspension seat (where fitted).....	3-12
Air suspension seat deluxe.....	3-15
Seat belt.....	3-19

INSTRUCTOR'S SEAT

Instructional seat	3-20
--------------------------	------

FORWARD CONTROLS

Ignition key	3-21
Hazard light switch	3-21
Lights and turn indicator lever	3-22
Windshield wiper and washer controls	3-23
Clutch pedal	3-24
Foot throttle pedal	3-24
Hand throttle	3-25
Foot brakes	3-26
Steering column	3-27

LEFT-HAND SIDE CONTROLS

Hand brake	3-28
------------------	------

RIGHT-HAND SIDE CONTROLS

Switch panel	3-29
--------------------	------

REARWARD CONTROLS

Switches on C-pillar	3-30
Fast steering system (where fitted)	3-32
Battery isolator control switch	3-34
Climate controls	3-35
Manual temperature control	3-36
Automatic Temperature Control (ATC)	3-37

OVERHEAD CONTROLS

Switch panel work lights	3-38
Interior light	3-39

INSTRUMENT CLUSTER

Analog Digital Instrument Cluster (ADIC)	3-40
Gauges	3-40
Indicator and warning lights	3-41
Displays	3-43
Keypad enhanced	3-46
Selecting or changing the display settings	3-48
Ground speed calibration	3-49
Performance monitor	3-54
Alarm functions	3-62
Accessing stored error codes	3-64
Warning and advisory symbols	3-65

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Refueling the tractor	4-1
-----------------------------	-----

STARTING THE UNIT

Starting the engine	4-3
Grid heater cold start aid (where fitted).....	4-5
Fuel heater (where fitted).....	4-5
Coolant immersion heater (where fitted)	4-6
Transmission oil heater (where fitted)	4-6
Boosting the battery	4-7

STOPPING THE UNIT

Stopping the engine	4-8
Automatic engine shut down	4-8
Automatic engine shut down with enhanced keypad (where fitted)	4-9

MOVING THE UNIT

Operating in cold temperatures.....	4-10
Low idle speed management.....	4-12

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

Carrying the tractor on a transporter	5-1
Secure the high visibility roof panel	5-1

RECOVERY TRANSPORT

Freeing a stuck tractor.....	5-2
Towing the tractor.....	5-3

6 WORKING OPERATIONS

GENERAL INFORMATION

Variable engine power management	6-1
Constant engine speed	6-3
Differential lock	6-5
Four wheel drive.....	6-7
Front axle suspension (where fitted)	6-9

AUTOMATED HEADLAND FUNCTIONS

Quick guide	6-10
Explanation of symbols	6-12
Recording and replaying	6-13
Recording a sequence	6-15
Replaying a sequence.....	6-17

TRANSMISSION

Shuttle lever	6-19
24x24 TRANSMISSION	6-20
Transmission controls	6-20
Creeper gears	6-21
Fault codes	6-22
16X16 TRANSMISSION	6-23
Transmission operation	6-23
Transmission display	6-25
Transmission controls	6-26
Shuttle mode	6-28
Driving the tractor	6-31
Auto take off	6-32
Speed matching	6-34
Auto shift function	6-35
Auto shifting field mode	6-35
Auto shifting in road mode	6-40
Creeper gears	6-42
Fault codes	6-43

REAR POWER TAKE-OFF

Power Take-Off (PTO) operating precautions	6-44
Changing the PTO output shaft	6-44
Attaching PTO driven equipment	6-45
Power Take-Off (PTO) operation	6-46
Three speed PTO systems	6-51
Ground drive PTO (where fitted)	6-52
External PTO controls	6-53
Auto PTO operation	6-55

FRONT POWER TAKE OFF

Power Take-Off (PTO) operation	6-57
--------------------------------------	------

REAR HITCH

Electronic Draft Control (EDC)	6-59
Electronic Draft Control (EDC) operation	6-62
External hitch controls	6-67

FRONT HITCH

Settings and adjustments	6-69
Hitch operation	6-72
Auxiliary front couplers (where fitted)	6-76
External hitch controls	6-77

HYDRAULIC REMOTE CONTROL VALVES

Remote control valves	6-78
Connecting remote cylinders	6-82
Operating with remote valves	6-84

Joystick operation with a front loader.....	6-87
Hydraulic oil level when using remote hydraulic equipment.....	6-88

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

Remote control valves.....	6-90
Settings and adjustments.....	6-92
Creating timer programs.....	6-94
Connecting remote cylinders.....	6-99
Operating with remote valves.....	6-101
External EHR controls.....	6-103
Hydraulic oil level when using remote hydraulic equipment.....	6-104

HYDRAULIC POWER BEYOND PORT

Hydraulic power beyond for external services.....	6-106
---	-------

THREE POINT HITCH

Attaching three-point hitch equipment.....	6-109
Lift rod adjustment.....	6-111
Top link adjustment.....	6-114
Flexible link end adjustment.....	6-115
Quick hitch.....	6-116
Linkage stabilizer adjustment.....	6-118

DRAWBARS AND TOWING ATTACHMENTS

Drawbars and towing attachments.....	6-121
Swinging drawbar.....	6-124
Automatic pickup hitch.....	6-127
Automatic pickup hitch.....	6-131
Rear trailer hitches.....	6-135

TRAILER BRAKING SYSTEMS

Air-operated trailer brakes.....	6-141
Air-operated trailer brakes (Italian type).....	6-144
Trailer brake bias control.....	6-145
Auxiliary air supply connector (where fitted).....	6-145
Hydraulic trailer brakes.....	6-146
Hydraulic trailer brakes (Italian type).....	6-147

WHEEL TRACK ADJUSTMENT

Front wheel track adjustment.....	6-148
Front wheel alignment.....	6-152
Steering stops.....	6-153
Front axle oscillation stops.....	6-153
Front fender.....	6-154

REAR WHEEL TRACK ADJUSTMENT.....	6-156
Flange type axle (where fitted).....	6-156
Bar type axle (where fitted).....	6-160

Dual rear wheels (where fitted).....	6-165
--------------------------------------	-------

BALLASTING AND TIRES

Ballasting and tires	6-168
Iron weights (where fitted).....	6-171
Liquid ballast	6-174
Tire inflation.....	6-176
Tire pressures and permissible loads	6-177

AUXILIARY POWER CONNECTIONS

Diagnostic socket.....	6-179
Trailer socket electrical	6-179
ELECTRICAL POWER CONNECTORS	6-180
Internal power connectors	6-180
External power connectors	6-182

7 MAINTENANCE

GENERAL INFORMATION

Introduction	7-1
Fuel requirement	7-2
Biodiesel fuel	7-4
Change the engine oil	7-6
Protective devices	7-7
Lubricants and coolants	7-9
Tractor jacking points	7-11
General specifications	7-12
Capacities	7-13
Organic Acid Technology (OAT) coolant.....	7-14

MAINTENANCE CHART

Maintenance chart.....	7-15
------------------------	------

WHEN THE WARNING LIGHT IS ON

Change the engine air cleaner outer element.....	7-17
Drain the fuel system water separator.....	7-18
Check the battery fluid level	7-19

EVERY 10 HOURS OR EACH DAY

Check the engine coolant level.....	7-20
Check the engine oil level	7-21
Check the remote control valve drain bottles.....	7-21
Check windscreen washer reservoir	7-22
Drain air reservoir on air operated trailer brake	7-22

FIRST 50 HOURS

Service operations.....	7-23
-------------------------	------

EVERY 50 HOURS

Clean the cab air filter	7-24
Clean the cooler section	7-26
All grease fittings	7-27
Check the front and the rear wheel nuts	7-34
Check the tire pressures and the tire condition.....	7-34

EVERY 100 HOURS

Inspect the poly V-belt.....	7-35
Inspect the compressor drive belt	7-35

EVERY 300 HOURS

Check the battery fluid level	7-37
Adjust the hand brake	7-39
Check the transmission oil level, the rear axle oil level and the hydraulic oil level	7-40
Check the 4WD front axle differential oil level and the hubs oil level.....	7-41
Check the front PTO gearbox oil level.....	7-41

EVERY 600 HOURS

Change engine oil and filter	7-42
Change the first stage fuel filter and the fuel filter element.....	7-44
Change the engine air cleaner outer element	7-45
Change the hydraulic charge pump oil filter	7-46
Check the engine air intake connections	7-48
Check the transmission oil cooler pipe couplings	7-49
Clean the DEF/AdBlue in-line filter	7-49

EVERY 1200 HOURS OR ANNUALLY

Change the cab air filters	7-50
Change the hydraulic suction pump oil filter.....	7-52
Change the 4WD differential oil	7-53
Change the 4WD planetary hub oil.....	7-54
Change the front PTO gearbox oil.....	7-54
Grease the rear axle shaft bearing	7-55

EVERY 1200 HOURS OR EVERY 2 YEARS

Change the engine air cleaner inner element	7-56
Check the valve tappet clearance	7-57
Change the DEF/AdBlue in-line filter	7-57
Change the air brake drier reservoir.....	7-58
Change the poly V-belts	7-59
Change the transmission oil, the rear axle oil and the hydraulic oil	7-61

EVERY 1800 HOURS OR EVERY 2 YEARS

Change the engine breather filter	7-62
---	------

EVERY 3600 HOURS OR EVERY 2 YEARS

Change the DEF/AdBlue main filter 7-63

EVERY 3600 HOURS OR EVERY 4 YEARS

Change the engine coolant fluid 7-64

EVERY 36 MONTHS

Check the air-conditioning system 7-68

GENERAL MAINTENANCE

Cleaning the tractor 7-69

Check first stage fuel filter and water trap 7-71

Bleeding the fuel system 7-71

Hydraulic system hoses 7-72

Check the brake pedal latching/unlatching 7-72

Adjust the automatic pickup hitch 7-73

Adjust the automatic pickup hitch 7-74

Headlight and work light adjustment 7-75

Bulb replacement 7-76

Fuses and relays 7-80

Protecting the electronic and electrical systems during battery charging or welding.. 7-85

Battery removal and installation 7-86

STORAGE

Tractor storage 7-88

Preparation for use after storage 7-88

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

Introduction 8-1

ALARM(S)

Fault codes and symbols 8-2

SYMPTOM(S)

Engine 8-4

Transmission 8-5

Hydraulics 8-5

Three-point hitch 8-6

Brakes 8-6

Cab 8-6

Electrical system 8-7

9 SPECIFICATIONS

General dimensions 9-1

Minimum turn radius 9-3

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com