

ORIGINAL INSTRUCTIONS

OPERATOR'S MANUAL

TD65F

TD75F

TD85F

Tractor

Part number 47918158

1st edition English

August 2015

Replaces part number 47646536



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
Electro-Magnetic Compatibility (EMC)	1-2
Legal advice	1-3
METRIC AND IMPERIAL UNITS ABBREVIATIONS	1-5
TO THE OWNER	1-7
PRODUCT IDENTIFICATION	1-9
ECOLOGY AND THE ENVIRONMENT	1-10
INTERNATIONAL SYMBOLS	1-11
NOISE LEVEL INFORMATION SHEET	1-12
VIBRATION LEVEL INFORMATION SHEET	1-13
Electro-Magnetic Compatibility (EMC)	1-14

2 SAFETY INFORMATION

SAFETY PRECAUTIONS	2-1
SAFETY ASPECTS	2-3
BEFORE DRIVING THE TRACTOR	2-10
DRIVING THE TRACTOR	2-11
OPERATING THE TRACTOR	2-12
OPERATING THE P.T.O.	2-14
SERVICING THE TRACTOR	2-14
DIESEL FUEL	2-16
PREVENTION OF FIRE OR EXPLOSION	2-16
FIRE EXTINGUISHER	2-18
PROTECTION OFFERED BY THE TRACTOR	2-19
MACHINE STABILITY	2-21
INTENDED USE STATEMENT	2-23
SAFETY DECALS	2-25
GUARDS	2-30
TRACTOR JACKING POINTS	2-31

3 CONTROLS AND INSTRUMENTS

Operator's seat

DOCUMENTATION STORAGE	3-1
OPERATOR'S SEAT	3-1
SEAT BELT	3-3

Forward controls

Front controls	3-4
Fuel tank cap	3-5
KEY- START SWITCH	3-5
LIGHT-/ TURN LEVER	3-5
TRANSMISSION WITH MECHANICAL SHUTTLE	3-7
TRANSMISSION WITH POWER SHUTTLE	3-10
TRANSMISSION WITH CREEPER AND SHUTTLE	3-13
ELECTROHYDRAULIC DIFFERENTIAL LOCK	3-16
LIMITED SLIP DIFFERENTIAL LOCK	3-17
ELECTRO-HYDRAULICALLY OPERATED FOUR-WHEEL DRIVE	3-17
Foot pedals	3-18

Left-hand side controls	
Left-hand side controls	3-19

Right-hand side controls	
Right-hand side controls.....	3-20

4 OPERATING INSTRUCTIONS

Starting the unit	
STARTING THE ENGINE	4-1

Stopping the unit	
STOPPING THE ENGINE.....	4-3

5 TRANSPORT OPERATIONS

Preparing for road transport	
CARRYING THE TRACTOR ON A TRANSPORTER.....	5-1

Recovery transport	
TOWING THE TRACTOR	5-1

6 WORKING OPERATIONS

One-speed rear Power Take-Off (PTO)	
General instructions	6-1
POWER TAKE OFF (PTO)	6-2
POWER TAKE OFF (PTO) SPEEDS.....	6-3
POWER TAKE OFF (PTO) SPEEDS.....	6-4
INDEPENDENT POWER TAKE-OFF SERVO ASSIST PTO	6-22
SYNCHRONIZED POWER TAKE-OFF SERVO ASSIST PTO	6-23

Rear hitch	
HYDRAULIC LIFT	6-24
AUXILIARY CONTROL VALVES	6-28

Remote control valves	
REMOTE CONTROL VALVES	6-32

Rear three-point hitch linkage	
THREE POINT LINKAGE	6-34
Top link arm - Adjust.....	6-35
Vertical rod - Adjust.....	6-36
Stabilizer - Adjust.....	6-37

Roll Over Protective Structure (ROPS) frame	
Roll Over Protective Structure (ROPS) frame - Adjust	6-38
Front wheels	
Front wheels - General specification	6-39
Rear wheels	
Rear wheels - General specification.....	6-40
Wheels	
Tires	6-42
Tires	6-43
Ballasts and supports	
IRON WEIGHTS (where fitted) BALLASTING	6-45
LIQUID BALLAST LIQUID BALLASTING	6-46
Frames and ballasting - Weight	6-48

7 MAINTENANCE

General information

General safety before you service.....	7-1
Introduction	7-3
Various controls	7-4
Fuel supply	7-5
FUEL REQUIREMENT	7-6
Engine cooling system - Basic instructions.....	7-8
Capacities	7-9
Hood - Basic instructions	7-11

Maintenance planning

MAINTENANCE CHART	7-12
-------------------------	------

Flexible Maintenance

Clutch pedal adjustment.....	7-14
Brake pedals - Check Adjusting height of service brake pedals	7-14
Alternator drive system Belt - Check ALTERNATOR BELT INSPECTION	7-15
Air cleaner - Check AIR FILTER VALVE	7-15
External lighting - Check TRACTOR LIGHT	7-16
Hand brake lever - Adjust HANDBRAKE	7-16
Engine cooling system - Check RADIATOR FLUID LEVEL	7-17
Air conditioner condenser, radiator, and intercooler.....	7-17
Tires - Pressure check TYRE PRESSURE	7-18
CHECK THE WHEEL NUTS FOR TIGHTNESS WHEEL DISKS NUT TORQUE	7-18

WHEN THE WARNING LAMP LIGHTS

Air cleaner - Cleaning	7-19
------------------------------	------

EVERY 10 HOURS OR DAILY

CHECK ENGINE OIL LEVEL ENGINE OIL LEVEL	7-20
-----------------------------------------------	------

EVERY 50 HOURS

Grease.....	7-20
-------------	------

EVERY 300 HOURS

Oil filters - Replace TRANSMISSION AND HYDRAULIC LIFT OIL FILTER	7-24
Air cleaner - Cleaning DRY AIR FILTER, EXTERNAL CARTRIDGE	7-24
Alternator drive system Belt - Check ALTERNATOR BELT INSPECTION	7-25
Battery - Check BATTERY CAPACITY 80 Ah	7-25
Steering knuckle and king pin - Grease KING PIN BEARINGS 4WD	7-26
Transmission - Check TRANSMISSION AND HYDRAULIC LIFT OIL	7-26
Axle housing - Check FRONT AXLE HOUSING 4WD	7-26
Wheel hub - Check FRONT AXLE REDUCTION HUBS 4WD	7-27

EVERY 600 HOURS

Engine lubrication system - Replace	7-27
Fuel filters - Replace FUEL FILTER	7-29

EVERY 1200 HOURS

Air cleaner - Cleaning DRY AIR FILTER, EXTERNAL CARTRIDGE	7-30
Valves - Check ENGINE VALVES	7-31
Fuel tank - Cleaning FUEL TANK	7-32
Drive shaft - Check DRIVE SHAFT SLEEVE FOR 4WD FRONT AXLE CONNECTION	7-33

EVERY 1200 HOURS OR EVERY 2 YEARS

Axle housing - Change fluid FRONT AXLE HOUSING - 4WD	7-34
Wheel hub - Change fluid FRONT AXLE HOUSING	7-34
Transmission - Change fluid TRANSMISSION AND HYDRAULIC LIFT OIL	7-35

EVERY 1800 HOURS

Fuel injectors - Check INJECTORS	7-36
----------------------------------------	------

EVERY 3600 HOURS

Engine cooling system - Change fluid	7-36
--------------------------------------------	------

GENERAL MAINTENANCE

Fuel injection system - Bleed BLEEDING THE FUEL SYSTEM	7-37
CHECK BATTERY FLUID LEVEL BATTERY	7-38
FUSES AND RELAYS MAIN FUSE AND RELAY BOX--	7-40
Headlight - Adjust FRONT HEADLIGHT ADJUSTMENT	7-41
Bulbs - replacement REPLACING THE FRONT HEADLIGHT BULBS	7-43
Platform, cab, bodywork, and decals - Cleaning	7-44

STORAGE	
TRACTOR STORAGE.....	7-46

8 TROUBLESHOOTING

Alarm(s)

HYDRAULIC REMOTE CONTROL VALVES.....	8-1
ENGINE	8-2
ELECTRICAL SYSTEM	8-3
HYDRAULIC SYSTEM	8-4
THREE POINT HITCH	8-5
BRAKES.....	8-6

9 SPECIFICATIONS

GENERAL DIMENSIONS	9-1
WEIGHTS (OPTIONAL)(kg)	9-2
TRACTOR WEIGHTS	9-2
Technical data	9-3
Wheels - General specification	9-7
Electrical systems - General specification.....	9-7

10 ACCESSORIES

ROTATING BEACON.....	10-1
SWINGING DRAWBARS.....	10-3
Hitches, drawbars, and implement couplings - General specification	10-4

11 FORMS AND DECLARATIONS

Service record - 1st 50 hour, Owner copy 1st 50 hour, Owner copy	11-1
Service record - 1st 50 hour, Dealer copy 1st 50 hour, Dealer's copy	11-3

1 - GENERAL INFORMATION

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

The NEW HOLLAND dealer will provide instructions on the general operation of new equipment. The dealer's staff, assigned to maintenance, is available for any questions related to the operation of the machine.

Your NEW HOLLAND dealer carries a complete line of genuine NEW HOLLAND service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model code and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model :
Product Identification Number (PIN):



Warning symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

⚠ WARNING

**Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.
Replace all shields before operating the machine.
Failure to comply could result in death or serious injury.**

W0012A

The machine has been designed and built according to the highest standards of quality and it complies with all current safety regulations. However, the risk of accidents can never be completely excluded. That is why it is essential to observe elementary safety rules and precautions.

Read this manual carefully, paying particular attention to the instructions concerning safety, operation and maintenance so as to avoid the risk of injury while operating or servicing the machine.

Do not use this machine for any application or purpose other than those described in this manual. If the machine is to be used for work involving the use of special attachments, accessories or equipment, consult your NEW HOLLAND Dealer in order to make sure that any adaptations or modifications made are in keeping with the machine's technical specifications and with prevailing safety requirements.

Any modification or adaptation which is not approved by the manufacturer may invalidate the machine's initial conformity with safety requirements.

The machine must undergo regular inspections, the frequency of which varies according to the type of use. Consult your authorized NEW HOLLAND dealer.

Always keep this manual in the operator's compartment (in the seat back, behind the operator's seat). Make sure it is always complete and in good condition. To receive extra copies of the manual or copies in languages other than that of your country of residence, please contact your NEW HOLLAND dealer.

The manufacturer is committed to the constant improvement of its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

NOTICE: *The information in this manual is provided on the basis of the information that was available at the time the manual was written. Settings, procedures, part numbers, software and other items may change, which may affect the maintenance of the machine. Ensure that you have complete and current information from your dealer before you start any machine operation. All data given in this book is subject to production variations.*

Engine tampering statement:

ATTENTION: *The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply with this prohibition could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*

Electro-Magnetic Compatibility (EMC)

This tractor complies with the European Regulations on electro-magnetic emissions. However, interference may arise as a result of add-on equipment which may not necessarily meet the required standards. As such interference can result in serious malfunction of the unit and/or create unsafe situations, you must observe the following:

- Ensure that each piece of non- NEW HOLLAND equipment fitted to the tractor bears the CE mark.
- The maximum power of emission equipment (radio, telephones, etc.) must not exceed the limits imposed by the national authorities of the country where you use the tractor.
- The electro-magnetic field generated by the add-on system should not exceed **24 V/m** at any time and at any location in the proximity of electronic components.

Failure to comply with these rules will render the NEW HOLLAND warranty null and void.

1 - GENERAL INFORMATION

Legal advice

Class of 2006/42/EC Annex I	BG Декларация ЕС за съответствие съгласно Директива 2006/42/ЕО	CE Problèmes et objets ES Problemas e objetos ES	DA EU-overensstemmelseserklæring EU-overensstemmelseserklæring	DE EG-Konformitätserklärung EG-Konformitätserklärung	EL Δήλωση Συμμόρφωσης ΕΚ Δήλωση Συμμόρφωσης ΕΚ	EN EC Declaration of conformity According to Directive 2006/42/EC	ES Declaración de conformidad de acuerdo con la Directiva 2006/42/CE	ET EU vastavõtmise deklaratsioon EU vastavõtmise deklaratsioon	FI EY-vaatamustenmukaistusvakuutus EY-vaatamustenmukaistusvakuutus	F Declaración de conformidad de acuerdo con la Directiva 2006/42/CE
1.A.1	Име [1]	Име [1]	Име [1]	Име [1]	Επίκληση [1]	Име [1]	Име [1]	Име [1]	Име [1]	Име [1]
1.A.2	Представител на Glaxopac GmbH, CNH Europe Holding S.A., 13, Rue Adolphe, L-1118 Luxembourg	Застъпникът Glaxopac GmbH, CNH Europe Holding S.A., 13, Rue Adolphe, L-1118 Luxembourg	representant af Glaxopac GmbH, CNH Europe Holding S.A., 13, Rue Adolphe, L-1118 Luxembourg	vertreter durch Glaxopac GmbH, CNH Europe Holding S.A., 13, Rue Adolphe, L-1118 Luxembourg	επιφορολογούμενος της Glaxopac GmbH, CNH Europe Holding S.A., 13, Rue Adolphe, L-1118 Luxembourg	representant på Glaxopac GmbH, CNH Europe Holding S.A., 13, Rue Adolphe, L-1118 Luxembourg	representant de Glaxopac GmbH, CNH Europe Holding S.A., 13, Rue Adolphe, L-1118 Luxembourg	esindajajärgi Glaxopac GmbH, CNH Europe Holding S.A., 13, Rue Adolphe, L-1118 Luxembourg	edustaja Glaxopac GmbH, CNH Europe Holding S.A., 13, Rue Adolphe, L-1118 Luxembourg	representant de Glaxopac GmbH, CNH Europe Holding S.A., 13, Rue Adolphe, L-1118 Luxembourg
1.A.3	Декларацията, описаната по-долу отговаря на изискванията на Директива 2006/42/ЕО, променена с [2]	Prohlášení, popsané v tomto prohlášení, odpovídá ustanovením Směrnice 2006/42/ES a každé její změně [2]	erklærer på eget ansvar at produktet Landbrugsmaskiner Handlingsnavn [2] Model [3] Type [4] Serienummer [5]	erklären auf meine alleinige Verantwortung, dass das Produkt Landwirtschaftliche Zugmaschinen Handelsbezeichnung [2] Modell [3] Typ [4] Serienummer [5]	δηλώνω, υπό αποκλειστική μου ευθύνη, ότι ο υποκείμενος παρ. 1 μηχανήματα συμμορφώνονται με τις απαιτήσεις της Οδηγίας 2006/42/ΕΚ, όπως τροποποιήθηκε με τις [2]	Декларацията, описаната по-долу отговаря на изискванията на Директива 2006/42/ЕО, променена с [2]	Declaración de conformidad de acuerdo con la Directiva 2006/42/CE, modificada por [2]	et vastavõtmise deklaratsioon, mis vastab selle deklaratsiooni kohaldatavale Euroopa Liidu direktiivile [2]	en omstämning som överensstämmer med bestämmelserna i direktiv 2006/42/EG och dess ändringar [2]	Declaración de conformidad de acuerdo con la Directiva 2006/42/CE, modificada por [2]
1.A.4	За релевантни изискванията на Директива 2006/42/ЕО, съответствие с [2]	Pro relevantní požadavky ustanovení této směrnice jsou splněny následující harmonizované normy:	harvedt denne erklæring henfører, opfylder alle de relevante krav i direktivet der findes i 2006/42/EF samt ændret ved [2]	auf das sich diese Erklärung bezieht, allen einschlägigen Bestimmungen der Richtlinie 2006/42/EG entspricht, abgeändert durch [2]	επιφορολογούμενος παρ. 1 Οδηγίας, είναι σύμφωνο με τις απαιτήσεις της Οδηγίας 2006/42/ΕΚ, όπως τροποποιήθηκε με τις [2]	За релевантни изискванията на Директива 2006/42/ЕО, съответствие с [2]	Pro relevantní požadavky ustanovení této směrnice jsou splněny následující harmonizované normy:	harvedt denne erklæring henfører, opfylder alle de relevante krav i direktivet der findes i 2006/42/EF samt ændret ved [2]	auf das sich diese Erklärung bezieht, allen einschlägigen Bestimmungen der Richtlinie 2006/42/EG entspricht, abgeändert durch [2]	За релевантни изискванията на Директива 2006/42/ЕО, съответствие с [2]
1.A.7	Име на производителя на машината [2]	Име на производителя на машината [2]	Име на производителя на машината [2]	Име на производителя на машината [2]	Име на производителя на машината [2]	Име на производителя на машината [2]	Име на производителя на машината [2]	Име на производителя на машината [2]	Име на производителя на машината [2]	Име на производителя на машината [2]
1.A.9	Место и дата на декларацията [7]	Место и дата на декларацията [7]	Место и дата на декларацията [7]	Место и дата на декларацията [7]	Место и дата на декларацията [7]	Место и дата на декларацията [7]	Место и дата на декларацията [7]	Место и дата на декларацията [7]	Место и дата на декларацията [7]	Место и дата на декларацията [7]
1.A.10	Име и подпис на уполномощеното лице [8]	Име и подпис на уполномощеното лице [8]	Име и подпис на уполномощеното лице [8]	Име и Unterschrift des Befugten [8]	Όνομα και υπογραφή του εξουσιοδοτημένου προσώπου [8]	Име и подпис на уполномощеното лице [8]	Име и подпис на уполномощеното лице [8]	Име и подпис на уполномощеното лице [8]	Име и подпис на уполномощеното лице [8]	Име и подпис на уполномощеното лице [8]



NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

NEW HOLLAND

Here above is provided copy of the "EC" Declaration of Conformity (EC Declaration of Conformity acc to 2006/42/EC).

The EC Declaration of Conformity is the manufacturer's declaration about equipment compliance to relevant EU provisions.

Please keep the original document in a safe place. Local authorities may require you to show this document in order to assure compliance of your equipment.

Translation of this declaration in your own country language is provided from the original document.

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes.

1 - GENERAL INFORMATION

Clause of 2006/42/EC Annex II	EN
1.A.1	EC Declaration of conformity According to Directive 2006/42/EC.
1.A.2	We, [1] Represented by Guiseppe Gavioli CNH Europe Holding S.A. 13, Rue Aldringen L- 1118 Luxembourg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6]
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied:
1.A.9	• ISO 26322-1 part 1 or 2
1.A.10	Other standards: see Operators Manual Place and date of the declaration: [7] Name and signature of the authorised person: [8]

HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- ROPS PROTECTION is certified according to OECD Code 6.
- NOISE EMISSION LEVELS are rated according to **2009/76/EC** and 2009/63/EC Annex VI
- VIBRATION LEVELS are rated according to 78/764/EEC.

NOTE: See safety section 2 in this manual for further explanation and details on above mentioned standards and specific terminology.

METRIC AND IMPERIAL UNITS ABBREVIATIONS

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m ²	square foot	ft ²
	square millimeter	mm ²	square inch	in ²
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	μF	microfarad	μF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency - Rotational				
	revolution per minute	r/min	revolution per minute	r/min ^a
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	μm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per Mass				
	milligram per kilogram	mg/ kg		
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH ₂ O
	megapascal	MPa	pound per square inch	psi

1 - GENERAL INFORMATION

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Temperature (other than Thermodynamic)				
	degrees Celsius	°C	degrees Fahrenheit	°F
Time				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
Torque (includes Bending moment, Moment of force, and Moment of a couple)				
	newton meter	N m	pound foot	lb ft
			pound foot	lb in
Velocity				
	kilometer per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimeter per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
Volume (includes Capacity)				
	cubic meter	m ³	cubic yard	yd ³
				cu yd
	liter	l	cubic inch	in ³
	liter	l	US gallon	US gal
			UK gallon	UK gal
			US quart	US qt
			UK quart	UK qt
	milliliter	ml	fluid ounce	fl oz
Volume per time (includes Discharge and Flow rate)				
	cubic meter per minute	m ³ /min	cubic foot per minute	ft ³ /min
	liter per minute	l/min	US gallon per minute	US gal/min
	milliliter per minute	ml/min	UK gallon per minute	UK gal/min
Sound power level and Sound pressure level				
	decibel	dB	decibel	dB

TO THE OWNER

INTRODUCTION

Read and refer to this Manual carefully, and always keep it in a convenient place so that you can refer to it whenever necessary.

All the data provided in this Manual is subject to product modifications. Weights and measures are to be considered approximate figures and the illustrations do not necessarily show tractors with standard fittings.

For precise information on specific tractor models and versions, please contact your authorised dealer.

The Company is engaged in a continuous process of product development and improvement and therefore reserves the right to change the specifications, components and prices of the product itself at any time, without prior notice.

In this Manual, the "left-hand" and "right-hand" parts of the tractor are as seen from the driver's seat, facing forward.

GENERAL INFORMATION

This Manual has been prepared to assist you in the correct procedure for running- in, driving and operating and for the maintenance of your new tractor. Read this Manual carefully. Your tractor is intended for use in normal and customary agricultural applications.

If at any time you require advice concerning your tractor, do not hesitate to contact your authorised dealer. He has factory trained personnel, genuine manufacturers' parts and the necessary equipment to carry out all your service requirements.

Your tractor has been designed and built to give maximum performance, economy and ease of operation under a wide variety of operating conditions. Prior to delivery, the tractor was carefully inspected, both at the factory and by your dealer to ensure that it reaches you in optimum condition. To maintain this condition and ensure trouble-free operation, it is important that the routine services, as specified on page **Maintenance chart** of this Manual, are carried out at the recommended intervals.

CLEANING THE TRACTOR

Your tractor is a state-of-the-art machine with user friendly controls. This should be borne in mind when cleaning the tractor, particularly if using a high pressure washer. Even though every precaution has been taken to safeguard electrical components and connections, the pressure generated by some of these machines is such that complete protection against water ingress cannot be guaranteed.

When using a high pressure washer, do not stand too close to the tractor and avoid directing the jet at electronic components, electrical connections, breathers, seals, filler caps, etc. Never direct a cold water jet at a hot engine or exhaust.

SAFETY

Pages **2-10** to **2-1** inclusive list the precautions to be observed to ensure your safety and the safety of others. Read the safety precautions and follow the advice offered before operating the tractor.

FIRST 50 HOUR SERVICE

In Section 10, at the back of this Manual, you will find the 50- hour service reports.

After you have operated the tractor for 50 hours, take your tractor, together with this Manual, to your dealer. He will then perform the factory recommended 50 hour service and complete the service report sheets (pages **Service record 1st 50 hour, Owner copy** and **Service record**). The first sheet (page **Service record 1st 50 hour, Owner copy**) is your copy of the service performed. The second sheet (page **Service record**) is the dealer's copy and should be removed by the dealer after the service has been carried out. Ensure that you and the dealer sign both copies.

SERVICE PARTS

It should be pointed out that genuine parts have been examined and approved by the Company. The installation and/ or use of 'non- genuine' products could have negative effects upon the design characteristics of your tractor and thereby affect it's safety. The Company is not liable for any damage caused by the use of 'non- genuine' parts and accessories. Only genuine replacement parts should be used. The use of non- genuine parts may invalidate legal approvals associated with this product.

It is prohibited to carry out any modifications to the tractor unless specifically authorised, in writing, by the After Sales Service department of the Company.

WARRANTY

Your tractor is warranted according to legal rights in your country and the contractual agreement with the selling dealer. No warranty shall, however, apply if the tractor has not been used, adjusted and maintained according to the instructions given in the Operator's Manual.

ABOUT THIS MANUAL

This Manual gives information for use of this tractor, as intended and under the conditions foreseen by the

manufacturer during normal operation and routine service and maintenance.

- Normal operation means the use of the tractor for the purpose intended by the manufacturer by an operator familiar with the tractor and the mounted or towed equipment and complying with the information for operation and safe practices, as specified by the manufacturer in this Manual and by the signs on the tractor and the equipment.
- Normal operation includes the preparation and storage of the tractor, swinging components into work position and vice versa, adding or removing ballast and picking up and setting off attachments.
- Normal operation includes the adjustment and setting of the tractor and equipment, for the specific condition of the field and/or the crop.
- Routine service and maintenance means activities that must be done daily by an operator familiar with the tractor characteristics and complying with the information for routine service and safe practices, as specified by the manufacturer in this Manual and by signs on the tractor, in order to maintain its proper function. Routine service includes activities such as fueling, cleaning, washing, topping up fluid levels, greasing, replacing of consumable articles such as lamp bulbs.
- This Manual is not giving all the information related to periodical service, converting and repairs to be carried out by professional service personnel. For some of the latter activities, there may be a need for appropriate facilities, technical skills and tools which are not supplied with the tractor, please refer to your dealer or authorised workshop.
- Periodical service means activities that must be done at defined intervals by trained personnel familiar with the tractor characteristics and which are complying with the information for periodical service and safe practices, as partly specified by the manufacturer in this Manual and in other Company literature, in order to maintain the expected life time of the tractor.
- Converting means activities that must be done by professional service personnel familiar with the tractor characteristics and complying with the information for converting, as partly specified by the manufacturer in this Manual, in assembly instructions or in other Company literature, in order to fit the tractor to a specific configuration.
- Repair means activities that must be done by professional service personnel only familiar with the tractor characteristics and complying with the information for repair, as specified by the manufacturer in the dealer's workshop Manual, in order to restore the proper function of the tractor after a failure or degradation of performance.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com