

ORIGINAL INSTRUCTIONS

# OPERATOR'S MANUAL

---

**T6.125S**

**T6.145**

**T6.155**

**T6.165**

**T6.175**

**T6.180**

**Tier 4B (final)**

Tractor

**Part number 48039792**

2<sup>nd</sup> edition English

November 2016

*Replaces part number 47835904*



# Contents

---

## 1 GENERAL INFORMATION

Metric and imperial units abbreviations.....	1-1
To the owner.....	1-3
Product identification.....	1-5
Engine identification.....	1-6
Drive line identification.....	1-7
Transmission identification.....	1-7
Cab identification.....	1-8
Ecology and the environment.....	1-9
Programming tractor functions.....	1-10
Operator's manual storage.....	1-11
Before operating the tractor.....	1-12
International symbols.....	1-13
Machine stability.....	1-14
Selective Catalytic Reduction (SCR) system.....	1-18

## 2 SAFETY INFORMATION

Safety precautions.....	2-1
Safety decals.....	2-3
Safety rules.....	2-11
Burn prevention.....	2-18
Prevention of fire or explosions.....	2-19
Fire extinguisher.....	2-20
Protection offered by the tractor.....	2-21
Hazardous substances.....	2-24
Emergency exit.....	2-25
Wheel chocks.....	2-26
Intended use statement.....	2-27
Instructor's seat.....	2-29

## 3 CONTROLS AND INSTRUMENTS

### ACCESS TO OPERATOR'S PLATFORM

Introduction.....	3-1
Cab air filters.....	3-5
In cab storage (where fitted).....	3-6
Cable and wiring routing.....	3-7
Mobile telephone usage.....	3-7
Implement monitor installation.....	3-8
Cab air pressurisation control (where fitted).....	3-8

### OPERATOR'S SEAT

Operator's seat.....	3-10
Air suspension seat.....	3-11
Air suspension seat deluxe.....	3-14
Air suspension seat with passive or Dynamic Damping System (DDS).....	3-18

---

Seat belt .....	3-24
<b>INSTRUCTOR'S SEAT</b>	
Instructional seat .....	3-25
<b>FORWARD CONTROLS</b>	
Ignition key .....	3-26
Hazard light switch .....	3-26
Lights and turn indicator lever .....	3-27
Follow me home lights.....	3-27
Windshield wiper and washer controls .....	3-28
Clutch pedal .....	3-29
Foot throttle pedal .....	3-29
Hand throttle.....	3-30
Foot brakes.....	3-31
Steering column .....	3-32
<b>LEFT-HAND SIDE CONTROLS</b>	
Hand brake .....	3-33
<b>RIGHT-HAND SIDE CONTROLS</b>	
Switch panel.....	3-34
<b>REARWARD CONTROLS</b>	
Switches on C-pillar .....	3-35
Hydraulic master switch .....	3-37
Fast steering system (where fitted).....	3-38
Battery isolator control switch .....	3-40
Climate controls .....	3-41
Manual temperature control .....	3-42
Automatic Temperature Control (ATC) .....	3-43
<b>OVERHEAD CONTROLS</b>	
Switch panel.....	3-44
Left-hand and right-hand outermost work light switch.....	3-45
Interior light.....	3-46
<b>INSTRUMENT CLUSTER</b>	
Analog Digital Instrument Cluster (ADIC) .....	3-47
Gauges .....	3-48
Indicator and warning lights .....	3-49
Displays .....	3-51
Keypad enhanced .....	3-54
Selecting or changing the display settings .....	3-56
Ground speed calibration.....	3-57
Performance monitor .....	3-62
Color monitor (where fitted) .....	3-70
Pop-up screens on color display .....	3-71

---

Performance monitor on color display .....	3-76
Programming the displays .....	3-81
Alarm functions .....	3-84
Accessing stored fault codes .....	3-86
Selective Catalytic Reduction (SCR) exhaust treatment - Overview .....	3-87
Warning and advisory symbols .....	3-96

## 4 OPERATING INSTRUCTIONS

### COMMISSIONING THE UNIT

Refueling the tractor .....	4-1
-----------------------------	-----

### STARTING THE UNIT

Starting the engine .....	4-3
Grid heater cold start aid (where fitted) .....	4-5
Fuel heater (where fitted) .....	4-5
Coolant immersion heater (where fitted) .....	4-6
Transmission oil heater (where fitted) .....	4-6
Boosting the battery .....	4-7

### STOPPING THE UNIT

Stopping the engine .....	4-8
Automatic engine shut down .....	4-8
Automatic engine shut down with enhanced keypad (where fitted) .....	4-9

### MOVING THE UNIT

Operating in cold temperatures .....	4-10
Low idle speed management .....	4-11

## 5 TRANSPORT OPERATIONS

### PREPARING FOR ROAD TRANSPORT

Carrying the tractor on a transporter .....	5-1
Secure the high visibility roof panel .....	5-1

### RECOVERY TRANSPORT

Freeing a stuck tractor .....	5-2
Towing the tractor .....	5-3

## 6 WORKING OPERATIONS

### GENERAL INFORMATION

Variable engine power management .....	6-1
Constant engine speed .....	6-3
Differential lock .....	6-5
Four wheel drive .....	6-7
Front axle suspension (where fitted) .....	6-9
HTS standard .....	6-10

---

Quick guide .....	6-10
Explanation of symbols .....	6-12
Recording and replaying .....	6-13
Recording a sequence .....	6-15
Replaying a sequence .....	6-17
<b>TRANSMISSION</b>	
Shuttle lever .....	6-19
Sharp shuttle setting .....	6-20
Transmission operation .....	6-21
Transmission display .....	6-23
Transmission controls .....	6-24
Shuttle mode .....	6-26
Driving the tractor .....	6-29
Auto take off .....	6-31
Speed matching .....	6-32
Auto shift function .....	6-32
Auto shifting field mode .....	6-33
Auto shifting in road mode .....	6-37
Creeper gears .....	6-39
Fault codes .....	6-40
<b>REAR POWER TAKE-OFF</b>	
Power Take-Off (PTO) operating precautions .....	6-41
Changing the PTO output shaft .....	6-41
Attaching PTO driven equipment .....	6-42
Power Take-Off (PTO) operation .....	6-43
Two speed PTO systems .....	6-47
External PTO controls .....	6-49
Auto PTO operation .....	6-51
<b>FRONT POWER TAKE OFF</b>	
Power Take-Off (PTO) operation .....	6-54
<b>REAR HITCH</b>	
Electronic Draft Control (EDC) .....	6-56
Electronic Draft Control (EDC) operation .....	6-60
External hitch controls .....	6-66
<b>FRONT HITCH</b>	
Settings and adjustments .....	6-68
Hitch operation .....	6-71
Auxiliary front couplers (where fitted) .....	6-75
External hitch controls .....	6-76
Front hitch management .....	6-77
<b>HYDRAULIC REMOTE CONTROL VALVES</b>	
Remote control valves .....	6-81

---

Connecting remote cylinders .....	6-85
Operating with remote valves .....	6-86
Hydraulic oil level when using remote hydraulic equipment.....	6-90

## ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

Remote control valves .....	6-92
Settings and adjustments.....	6-99
Creating timer programs.....	6-101
Connecting remote cylinders .....	6-110
Operating with remote valves .....	6-112
External EHR controls .....	6-114
Hydraulic oil level when using remote hydraulic equipment.....	6-115

## HYDRAULIC POWER BEYOND PORT

Hydraulic power beyond for external services.....	6-117
---	-------

## THREE POINT HITCH

Attaching three-point hitch equipment.....	6-120
Lift rod adjustment.....	6-122
Top link adjustment .....	6-124
Flexible link end adjustment.....	6-125
Quick hitch.....	6-126
Linkage stabilizer adjustment.....	6-128

## DRAWBARS AND TOWING ATTACHMENTS

Drawbars and towing attachments .....	6-131
Swinging drawbar .....	6-134

## TRAILER BRAKING SYSTEMS

Air-operated trailer brakes .....	6-137
Trailer brake bias control .....	6-140
Auxiliary air supply connector (where fitted).....	6-140
Hydraulic trailer brakes .....	6-141

## WHEEL TRACK ADJUSTMENT

Front wheel track adjustment (two wheel drive).....	6-142
Front wheel track adjustment (four wheel drive) .....	6-144
Front wheel alignment (two wheel drive).....	6-148
Front wheel alignment (four wheel drive).....	6-149
Steering stops .....	6-150
Front axle oscillation stops .....	6-150
Front fender .....	6-151
REAR WHEEL TRACK ADJUSTMENT .....	6-153
Flange type axle (where fitted) .....	6-153
Bar type axle (where fitted).....	6-157
Dual rear wheels (where fitted).....	6-162

---

## BALLASTING AND TIRES

Ballasting and tires .....	6-165
Iron weights (where fitted) .....	6-168
Liquid ballast .....	6-171
Tire inflation .....	6-172
Tire pressures and permissible loads .....	6-173

## AUXILIARY POWER CONNECTIONS

Diagnostic socket .....	6-175
Trailer socket electrical .....	6-175
ELECTRICAL POWER CONNECTORS .....	6-176
Internal power connectors .....	6-176
External power connectors .....	6-178
ISO bus classes .....	6-179

## 7 MAINTENANCE

### GENERAL INFORMATION

Introduction .....	7-1
Fuel requirement - Diesel fuel .....	7-2
Fuel - Storage, handling and transport .....	7-2
Biodiesel fuel - Biodiesel fuels .....	7-3
Change the engine oil .....	7-5
Protective devices .....	7-6
Tractor jacking points .....	7-8
Lubricants and coolants .....	7-9
General specifications .....	7-10
Capacities .....	7-11
Organic Acid Technology (OAT) coolant .....	7-12

### MAINTENANCE CHART

Maintenance chart .....	7-13
-------------------------	------

### WHEN THE WARNING LIGHT IS ON

Change the engine air cleaner outer element .....	7-15
Drain the fuel system water separator .....	7-16
Check the battery fluid level .....	7-17

### EVERY 10 HOURS OR EACH DAY

Check the engine coolant level .....	7-18
Check the engine oil level .....	7-19
Check the remote control valve drain bottles .....	7-19
Check windscreen washer reservoir .....	7-20
Drain air reservoir on air operated trailer brake .....	7-20

### FIRST 50 HOURS

Service operations .....	7-21
--------------------------	------

---

## EVERY 50 HOURS

Clean the cab air filter .....	7-22
Clean the cooler section .....	7-24
All grease fittings .....	7-25
Check the front and the rear wheel nuts .....	7-33
Check the tire pressures and the tire condition.....	7-33

## EVERY 100 HOURS

Inspect the poly V-belt.....	7-34
Inspect the compressor drive belt .....	7-34

## EVERY 300 HOURS

Check the battery fluid level .....	7-36
Adjust the hand brake .....	7-38
Check the transmission oil level, the rear axle oil level and the hydraulic oil level ....	7-39
Check the 4WD front axle differential oil level and the hubs oil level.....	7-40
Check the front PTO gearbox oil level.....	7-40

## EVERY 600 HOURS

Change engine oil and filter .....	7-41
Change the first stage fuel filter and the fuel filter element.....	7-43
Change the engine air cleaner outer element .....	7-44
Change the charge pump oil filter .....	7-45
Check the engine air intake connections .....	7-47
Check the transmission oil cooler pipe couplings .....	7-48
Clean the DEF/AdBlue in-line filter .....	7-48

## EVERY 1200 HOURS OR ANNUALLY

Change the cab air filters .....	7-49
Change the hydraulic suction pump oil filter.....	7-50
Change the 4WD differential oil .....	7-51
Change the 4WD planetary hub oil.....	7-52
Change the front PTO gearbox oil.....	7-52
Grease the rear axle shaft bearing .....	7-53

## EVERY 1200 HOURS OR EVERY 2 YEARS

Change the engine air cleaner inner element .....	7-54
Check the valve tappet clearance .....	7-55
Change the DEF/AdBlue in-line filter .....	7-55
Change the air brake drier reservoir.....	7-56
Change the poly V-belts .....	7-57
Change the transmission oil, the rear axle oil and the hydraulic oil .....	7-59

## EVERY 2 YEARS

Change the air conditioning receiver drier.....	7-60
---	------

---



## EVERY 1800 HOURS OR EVERY 2 YEARS

Change the engine breather filter ..... 7-61

## EVERY 3600 HOURS OR EVERY 2 YEARS

Change the DEF/AdBlue main filter ..... 7-62

## EVERY 3600 HOURS OR EVERY 4 YEARS

Change the engine coolant fluid ..... 7-63

## GENERAL MAINTENANCE

Cleaning the tractor ..... 7-67

Check first stage fuel filter and water trap ..... 7-69

Bleeding the fuel system ..... 7-69

Hydraulic system hoses ..... 7-70

Check the brake pedal latching/unlatching ..... 7-70

Adjust the automatic pickup hitch ..... 7-71

Headlight adjustment ..... 7-72

Work light adjustment ..... 7-73

Bulb replacement ..... 7-74

Fuses and relays ..... 7-77

Protecting the electronic and electrical systems during battery charging or welding.. 7-83

Battery removal and installation ..... 7-84

## STORAGE

Tractor storage ..... 7-86

Preparation for use after storage ..... 7-86

## 8 TROUBLESHOOTING

### FAULT CODE RESOLUTION

Introduction ..... 8-1

### ALARM(S)

Fault codes and symbols ..... 8-2

### SYMPTOM(S)

Engine ..... 8-4

Transmission ..... 8-5

Hydraulics ..... 8-5

Three-point hitch ..... 8-6

Brakes ..... 8-6

Cab ..... 8-6

Electrical system ..... 8-7

## 9 SPECIFICATIONS

General dimensions ..... 9-1

Minimum turn radius ..... 9-3

Axle dimension .....	9-4
Maximum operating angle .....	9-5
Maximum tractor operating weights .....	9-5
Tractor weights .....	9-6
Capacities .....	9-7
Engine .....	9-8
Fuel system.....	9-8
Air cleaner system.....	9-9
Cooling system .....	9-9
Transmission .....	9-9
Rear Power Take-Off (PTO) .....	9-10
Front Power Take-Off (PTO).....	9-10
Three-point hitch .....	9-11
Three-point hitch front .....	9-12
Hydraulic system .....	9-12
Remote control valves .....	9-13
Front remote control valve couplers .....	9-13
Brakes .....	9-14
Steering.....	9-14
Electrical equipment.....	9-15
Ground speed chart .....	9-16
Minimum hardware tightening torques .....	9-19

## 10 ACCESSORIES

Radio (where fitted).....	10-1
External rear view mirrors .....	10-2
Auxiliary head lights and signature lights.....	10-4
Rotating beacon .....	10-5
Front-end loader fixation points .....	10-6

## 11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy .....	11-1
Service record 1st 50 hour, Dealer copy .....	11-3

---

# 1 - GENERAL INFORMATION

## Metric and imperial units abbreviations

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
<b>Area (Land area)</b>				
	hectare	ha	acre	ac
	square meter	m <sup>2</sup>	square foot	ft <sup>2</sup>
			square inch	in <sup>2</sup>
	square millimeter	mm <sup>2</sup>	square inch	in <sup>2</sup>
<b>Electricity</b>				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	μF	microfarad	μF
	ohm	Ω	ohm	Ω
<b>Force</b>				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
<b>Force per length</b>				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
<b>Frequency</b>				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
<b>Frequency - Rotational</b>				
	revolution per minute	r/min	revolution per minute	r/min <sup>a</sup>
		rpm		rpm
<b>Length</b>				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	μm		
<b>Mass</b>				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
<b>Mass per mass</b>				
	milligram per kilogram	mg/ kg	parts per million	ppm
<b>Power</b>				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
<b>Pressure or stress (Force per area)</b>				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH <sub>2</sub> O
	megapascal	MPa	pound per square inch	psi
	millibar	mbar		
	bar	bar		

1 - GENERAL INFORMATION

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Temperature (other than thermodynamic)				
	degrees Celsius	°C	degrees Fahrenheit	°F
Time				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
Torque (includes bending moment, moment of force, and moment of a couple)				
	newton meter	N m	pound foot	lb ft
			pound foot	lb in
Velocity				
	kilometer per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimeter per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
Volume (includes capacity)				
	cubic meter	m <sup>3</sup>	cubic yard	yd <sup>3</sup>
				cu yd
	liter	l	cubic inch	in <sup>3</sup>
	liter	l	US gallon	US gal
			UK gallon	UK gal
			US quart	US qt
			UK quart	UK qt
	milliliter	ml	fluid ounce	fl oz
Volume per time (includes discharge and flow rate)				
	cubic meter per minute	m <sup>3</sup> /min	cubic foot per minute	ft <sup>3</sup> /min
	liter per minute	l/min	US gallon per minute	US gal/min
	milliliter per minute	ml/min	UK gallon per minute	UK gal/min
Sound power level and sound pressure level				
	decibel	dB	decibel	dB
Water hardness				
	German hardness	°dH	English hardness	°e
	French hardness	°fH	parts per million	ppm

**Glossary**

Acronym	Definition
DEF	Diesel Exhaust Fluid
ISO	International Organization for Standardization
MSDS	Material Safety Data Sheet
NOx	Nitrogen Oxide
PPE	Personal Protective Equipment
SCR	Selective Catalytic Reduction
ULSD	Ultra Low Sulfur Diesel
%	Percent
<	Less than
>	Greater than

## To the owner

### General information

This manual has been prepared to assist you in the correct procedure for running-in, driving and operating and for the maintenance of your new tractor. Read this manual carefully. Your tractor is intended for use in normal and customary agricultural applications.

If at any time you require advice concerning your tractor, do not hesitate to contact your authorized dealer. He has factory trained personnel, genuine manufacturers' parts and the necessary equipment to carry out all your service requirements.

The specifications are provided for your information and guidance. For further information concerning your tractor and equipment, consult your authorized dealer.

All data given in this manual is subject to production variations. Dimensions and weight are approximate only. The illustrations do not necessarily show tractors in standard condition or imply that these features are available in all countries. For exact information about any particular tractor, please consult your authorized dealer.

Your tractor has been designed and built to give maximum performance, economy and ease of operation under a wide variety of operating conditions. Prior to delivery, the tractor was carefully inspected, both at the factory and by your dealer to ensure that it reaches you in optimum condition. To maintain this condition and ensure trouble-free operation, it is important that the routine services, as specified on page 7-13 of this manual, are carried out at the recommended intervals.

### About this manual

This manual gives information for use of your machine, as intended and under the conditions foreseen by the manufacturer during normal operation and routine service and maintenance.

Read and understand; keep it in good condition and always safely store it in the provided pocket in the back of your seat for later easy retrieval.

This manual does not contain all the information related to periodical service, converting and repairs to be carried out by professional service personnel.

The table of contents page(s) are provided to have an overview of main manual's topics. A detailed alphabetic index is available at the end of this manual for locating specific items.

### Normal operation

- Normal operation means the use of the tractor for the purpose intended by the manufacturer by an operator familiar with the tractor and the mounted or towed equipment and complying with the information for op-

eration and safe practices, as specified by the manufacturer in this manual and by the decals on the tractor and the equipment.

- Normal operation includes the preparation and storage of the tractor, swinging components into work position and vice versa, adding or removing ballast and picking up and setting off attachments.
- Normal operation includes the adjustment and setting of the tractor and equipment, for the specific condition of the field and/or the crop.

### Routine service

- Routine service and maintenance means activities that must be done daily by an operator familiar with the tractor characteristics and complying with the information for routine service and safe practices, as specified by the manufacturer in this manual and by decals on the tractor, in order to maintain its proper function. Routine service includes activities such as fueling, cleaning, washing, topping up fluid levels, greasing, replacing of consumable articles such as lamp bulbs.

### Converting, periodical service and repair

- Periodical service means activities that must be done at defined intervals by trained personnel familiar with the tractor characteristics and which are complying with the information for periodical service and safe practices, as partly specified by the manufacturer in this manual and in other Company literature, in order to maintain the expected life time of the tractor.
- Converting means activities that must be done by professional service personnel familiar with the tractor characteristics and complying with the information for converting, as partly specified by the manufacturer in this manual, in assembly instructions or in other Company literature, in order to fit the tractor to a specific configuration.
- Repair means activities that must be done by professional service personnel only familiar with the tractor characteristics and complying with the information for repair, as specified by the manufacturer in the dealer's workshop manual, in order to restore the proper function of the tractor after a failure or degradation of performance.

### Cleaning the tractor

Your tractor is a state-of the-art machine with sophisticated, electronic controls. This should be taken into consideration when cleaning the tractor, particularly if using a high pressure washer. Even though every precaution has been taken to safeguard electronic components and connections, the pressure generated by some of these machines is such that complete protection against water ingress cannot be guaranteed.

When using a high pressure washer, do not stand too close to the tractor and avoid directing the jet at electronic components, electrical connections, breathers, seals, filler caps, etc. Never direct a cold water jet at a hot engine or exhaust.

Failure to comply with these rules will render the warranty null and void.

## Safety

The pages in Section 2 list the precautions to be observed to ensure your safety and the safety of others. Read the safety precautions and follow the advice offered before operating the tractor.

## First 50 hour service

In Section 11, at the back of this manual, you will find the 50 hour service reports.

**NOTICE:** *It is important the 50 hour service is carried out as recommended to ensure your tractor provides optimum performance and efficiency.*

After you have operated the tractor for 50 hours, take your tractor, together with this Manual, to your dealer. He will then perform the factory recommended 50 hour service and complete the service report sheets (pages **11-1** and **11-3**). The first sheet (page **11-1**) is your copy of the service performed. The second sheet (page **11-3**) is the dealer's copy and should be removed by the dealer after the service has been carried out. Ensure that you and the dealer sign both copies.

## Service parts

It should be pointed out that genuine parts have been examined and approved by the company. The installation

and/or use of 'non-genuine' products could have negative effects upon the design characteristics of your tractor and thereby affect its safety. The company is not liable for any damage caused by the use of 'non-genuine' parts and accessories. Only genuine replacement parts should be used. The use of non-genuine parts may invalidate legal approvals associated with this product.

It is prohibited to carry out any modifications to the tractor unless specifically authorized, in writing, by the After Sales Service department of the Company.

## Warranty

Your tractor is warranted according to legal rights in your country and the contractual agreement with the selling dealer. No warranty shall, however, apply if the tractor has not been used, adjusted and maintained according to the instructions given in the Operator's Manual.

## Use of biodiesel fuels

**NOTICE:** *Before using biodiesel fuels in your tractor, refer to the information on page 7-3 regarding the storage and use of biodiesel fuels.*

## Emission controls


**NOTE:** *The engine and fuel system on your machine is designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*

## Product identification

The tractor and major components are identified using serial numbers and/or manufacturing codes.

Tractor identification data must be supplied to the dealer when requesting parts or service and will also be needed to aid in identifying the tractor if it is ever stolen.


The following provides the locations of the identification data.

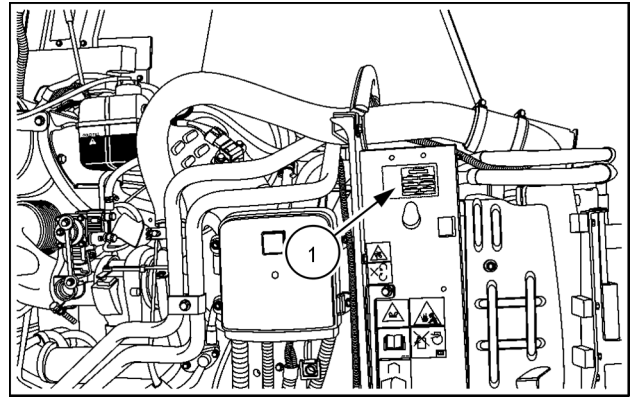

SVIL15TR00015AB 1

## Vehicle identification plate


The vehicle identification plate (1), figure 1, is located on the right-hand radiator support. Record the information on the sample identification plate provided below.

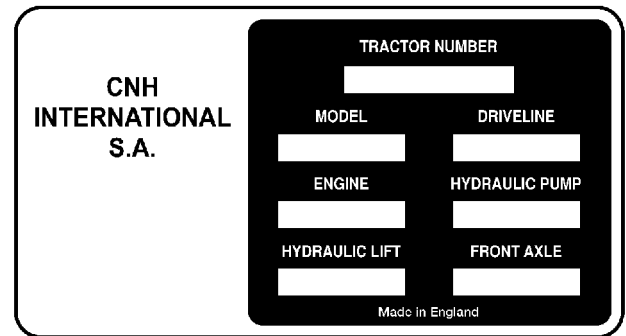

SS10D342 2

## Tractor identification

The serial number and model identification information is stamped on the front support (1). These numbers are also repeated on the vehicle identification plate reproduced above.

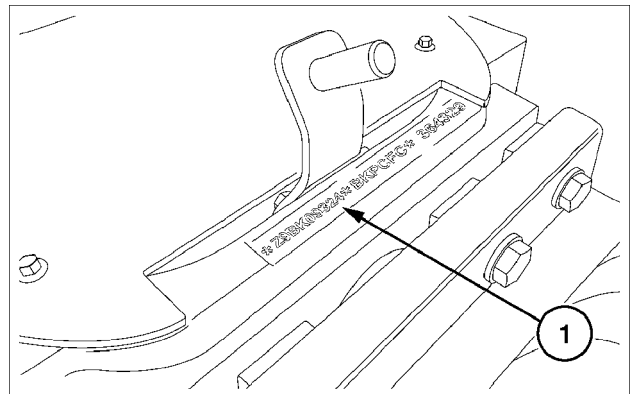

BRL6441B 3

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)