

ORIGINAL INSTRUCTIONS - according to Regulation (EU) 2014/1322, Annex XXII

OPERATOR'S MANUAL

T7.195S

T7.215S

T7.230

T7.245

T7.260

Tractor - Stage IV

*PIN HACT7****JE401001 and above*

Part number 48198555

2nd edition English

January 2018

Replaces part number 48072366



Contents

1 GENERAL INFORMATION

Metric and Imperial units abbreviations	1-1
To the owner	1-3
Operator's manual storage	1-5
Product identification	1-6
Engine identification	1-7
Drive line identification	1-8
Cab identification	1-8
Product identification plate	1-9
Ecology and the environment	1-10
Noise level information sheet	1-11
Programming tractor functions	1-11
Before operating the tractor	1-12
International symbols	1-13
Vibration level information sheet	1-14
Machine stability	1-15
Selective Catalytic Reduction (SCR) system	1-19

2 SAFETY INFORMATION

Safety precautions	2-1
Safety decals	2-3
Safety rules	2-12
Burn prevention	2-19
Prevention of fire or explosions	2-20
Fire extinguisher	2-21
Protection offered by the tractor	2-22
Hazardous substances	2-25
Emergency exit	2-26
Wheel chocks	2-27
Intended use statement	2-28
Passenger's seat	2-30
Safety aspects in accordance with Regulation (EU) 1322/2014 - Annex XXII and subsequent amendments and modifications	2-31

3 CONTROLS AND INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

Introduction	3-1
Cab air filters	3-5
In cab storage (where fitted)	3-6
Cable and wiring routing	3-7
Mobile telephone usage	3-7
Implement monitor installation	3-8
Cab air pressurisation control (where fitted)	3-9

OPERATOR'S SEAT

Operator's seat	3-10
Air suspension seat deluxe	3-11
Air suspension seat with passive or Dynamic Damping System (DDS).....	3-16
Seat belt	3-22

PASSENGER'S SEAT

Passenger seat.....	3-23
---------------------	------

FORWARD CONTROLS

Ignition key	3-24
Hazard light switch	3-24
Lights and turn indicator lever	3-25
Follow me home lights.....	3-25
Windshield wiper and washer controls	3-26
Electronic parking brake.....	3-27
Clutch pedal	3-31
Foot brakes.....	3-32
Steering column	3-35

LEFT-HAND SIDE CONTROLS

Hand brake	3-36
------------------	------

RIGHT-HAND SIDE CONTROLS

Switch panel.....	3-37
Advanced steering system field/road switch	3-38
Variable Ratio Steering (VRS).....	3-39
Autoguidance system.....	3-42
Autoguidance - Variable ratio steering.....	3-43

REARWARD CONTROLS

Switches on C-pillar	3-44
Battery isolator control switch	3-45
Hydraulic lift rod adjust	3-46
Hydraulic top link adjust	3-47
Lock switch for Electro Hydraulic Remote (EHR) control valves	3-48

OVERHEAD CONTROLS

Switch panel.....	3-49
Left-hand and right-hand outermost work light switch.....	3-50
Interior light.....	3-51
Climate controls	3-52
Manual temperature control	3-53
Automatic Temperature Control (ATC)	3-54

INSTRUMENT CLUSTER

Analog Digital Instrument Cluster (ADIC)	3-55
--	------

Gauges	3-56
Indicator and warning lights	3-57
Displays	3-59
Keypad enhanced	3-62
Selecting or changing the display settings	3-64
Ground speed calibration.....	3-65
Performance monitor	3-70
Alarm functions	3-78
Accessing stored error codes	3-80
Selective Catalytic Reduction (SCR) exhaust treatment - Overview	3-81
Warning and advisory symbols	3-90
Color monitor (where fitted)	3-103
Pop-up screens on color display	3-104
Performance monitor on color display.....	3-109
Programming the displays.....	3-114

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

Refueling the tractor.....	4-1
----------------------------	-----

STARTING THE UNIT

Starting the tractor.....	4-3
Grid heater cold start aid (where fitted).....	4-5
Fuel heater (where fitted).....	4-5
Coolant immersion heater (where fitted)	4-6
Transmission oil heater (where fitted)	4-6
Boosting the battery	4-7

STOPPING THE UNIT

Stopping the engine	4-8
Automatic engine shut down	4-9
Automatic engine shut down with enhanced keypad (where fitted)	4-9

MOVING THE UNIT

Operating in cold temperatures.....	4-11
Low idle speed management.....	4-12

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

Carrying the tractor on a transporter	5-1
Secure the high visibility roof panel	5-1

RECOVERY TRANSPORT

Freeing a stuck tractor.....	5-2
Towing the tractor.....	5-3

6 WORKING OPERATIONS

GENERAL INFORMATION

Variable engine power management (where fitted)	6-1
Constant engine speed	6-3
Differential lock	6-5
Four wheel drive	6-7
Front axle suspension (where fitted)	6-9
Automated headland functions (where fitted)	6-11
Quick guide	6-11
Recording and replaying	6-13
Explanation of symbols	6-15
Recording a sequence	6-16
Replaying a sequence	6-18

TRANSMISSION

Full powershift transmission	6-20
Foot throttle pedal	6-20
Hand throttle lever	6-20
Transmission operation	6-21
Transmission electronic control module Powershift - Control	6-22
Shuttle lever	6-23
Setting the sharp shuttle function	6-24
Driving the tractor	6-25
Speed matching	6-27
Auto shifting field mode (where fitted)	6-27
Auto shifting in road mode (where fitted)	6-28
Start off gear (where fitted)	6-29
Autoshift field mode (where fitted)	6-30
Setting the forward and reverse gear ratios (where fitted)	6-33
Auto shifting and 'go to' modes (where fitted)	6-34
Creeper gears (where fitted)	6-36
Error codes	6-37
Ground speed chart powershift transmission Ground speeds	6-38

REAR POWER TAKE-OFF

Power Take-Off (PTO) operating precautions	6-43
Changing the PTO output shaft	6-44
Attaching PTO driven equipment	6-45
Power take-off (PTO) operation	6-46
PTO shiftable multi speed	6-51
External PTO controls	6-53
Auto Power Take-Off (PTO) operation	6-55

FRONT POWER TAKE OFF

Front PTO operation	6-58
---------------------------	------

REAR HITCH

Electronic Draft Control (EDC)	6-61
Electronic Draft Control (EDC)	6-64
Electronic Draft Control (EDC) operation.....	6-66
Electronic Draft Control (EDC) operation.....	6-71
External hitch controls	6-72

FRONT HITCH

Settings and adjustments.....	6-74
Hitch operation	6-77
Front hitch operation	6-83
External hitch controls	6-85
Front hitch management (where fitted).....	6-86
Auxiliary front couplers (where fitted).....	6-91
External controls for front couplers	6-94

HYDRAULIC REMOTE CONTROL VALVES

Remote control valves.....	6-95
Operating with remote valves	6-98
Connecting remote cylinders	6-101
Hydraulic/axle oil level.....	6-104

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

Mid mount remote valves.....	6-106
Setting the remote valve priority	6-107
Mid mount (EHR) valve settings	6-108
Joystick operation	6-112

HYDRAULIC POWER BEYOND PORT

Power beyond circuit	6-115
ISO Power beyond couplings.....	6-117

THREE POINT HITCH

Attaching three-point hitch equipment.....	6-118
Lift rod adjustment.....	6-120
Top link adjustment	6-123
Flexible link end adjustment	6-125
Quick hitch.....	6-126
Lower links	6-128

DRAWBARS AND TOWING ATTACHMENTS

Drawbars and towing attachments	6-132
Automatic pickup hitch	6-135
Rear trailer hitches	6-139

TRAILER BRAKING SYSTEMS

Trailer brake release switch	6-146
Air-operated trailer brakes (Universal type)	6-147
Air-operated trailer brakes (UK type)	6-150
Air-operated trailer brakes (Italian type)	6-151
Auxiliary air supply connector (where fitted).....	6-152
Hydraulic trailer brakes (Universal type - Dual line)	6-153
Hydraulic trailer brakes (Universal type - Single line)	6-156
Hydraulic trailer brakes (Italian type)	6-157

WHEEL TRACK ADJUSTMENT

Front wheel track adjustment.....	6-158
Front wheel alignment	6-163
Steering stops	6-164
Front axle oscillation stops	6-165
Front wheel fenders	6-166
Rear wheel track adjustment	6-168
Flange type axle (where fitted)	6-168
Bar type axle (where fitted).....	6-172
Dual rear wheels (where fitted).....	6-179

BALLASTING AND TIRES

Ballasting and tires	6-182
Iron weights (where fitted).....	6-185
Liquid ballast	6-187
Tire inflation.....	6-189
Tire pressures and permissible loads	6-190

AUXILIARY POWER CONNECTIONS

Diagnostic socket.....	6-192
Trailer socket electrical	6-193
Cab power connections	6-194
Internal power connectors.....	6-194
External power connectors	6-196
ISO bus classes	6-198

7 MAINTENANCE

GENERAL INFORMATION

Introduction	7-1
Fuel requirement - Diesel fuel	7-2
Fuel - Storage, handling and transport	7-2
Biodiesel fuel	7-3
Change the engine oil	7-5
Protective devices	7-6
Tractor jacking points.....	7-8
Engine oils.....	7-9
General specifications	7-10

Capacities	7-11
Organic Acid Technology (OAT) coolant.....	7-12

MAINTENANCE CHART

Maintenance chart.....	7-13
------------------------	------

WHEN THE WARNING LAMP LIGHTS

Change the engine air cleaner outer element.....	7-15
Draining the fuel filter water separator	7-16

EVERY 10 HOURS OR EACH DAY

Check the engine coolant level.....	7-17
Checking the engine oil level	7-18
Check the remote control valve drain bottles.....	7-19
Check windscreen washer reservoir	7-19
Drain air reservoir on air operated trailer brake	7-19

FIRST 50 HOURS

Service operations.....	7-20
-------------------------	------

EVERY 50 HOURS

Clean the cab air filter	7-22
Clean the SCR cover air ducts	7-24
Clean the cooler section.....	7-25
All grease fittings	7-26
Check the front and the rear wheel nuts	7-33
Check the tire pressures and the tire condition.....	7-33

EVERY 100 HOURS

Inspect the poly V-belt.....	7-34
Inspect the compressor drive belt	7-35

EVERY 300 HOURS

Check the battery fluid level	7-36
Adjust the hand brake	7-37
Check the transmission oil level, the rear axle oil level and the hydraulic oil level....	7-38
Check the 4WD front axle differential oil level and the hubs oil level.....	7-39
Check the front PTO gearbox oil level.....	7-40

EVERY 600 HOURS

Change engine oil and filter	7-41
Change the first stage fuel filter and the fuel filter element.....	7-43
Change the engine air cleaner outer element.....	7-45
Change the charge pump oil filter	7-46
Check the engine air intake connections	7-47
Check the transmission oil cooler pipe couplings	7-48
Clean the DEF/AdBlue in-line filter	7-48

EVERY 1200 HOURS OR ANNUALLY

Change the cab air filters	7-49
Change the main oil filter cartridge	7-50
Change the 4WD differential oil	7-51
Change the 4WD planetary hub oil	7-52
Change the front PTO gearbox oil	7-53
Grease the rear axle shaft bearing	7-54

EVERY 1200 HOURS OR EVERY 2 YEARS

Change the DEF/AdBlue in-line filter	7-55
Change the engine air cleaner inner element	7-56
Check the valve tappet clearance	7-57
Change the air brake drier reservoir	7-58
Change the poly V-belts	7-59
Change the transmission oil, the rear axle oil and the hydraulic oil	7-61

EVERY 2 YEARS

Change the air conditioning receiver drier	7-62
--	------

EVERY 1800 HOURS OR EVERY 2 YEARS

Change the engine breather filter	7-63
---	------

EVERY 3600 HOURS OR EVERY 2 YEARS

Change the DEF/AdBlue main filter	7-63
---	------

EVERY 3600 HOURS OR EVERY 4 YEARS

Change the engine coolant fluid	7-64
---------------------------------------	------

GENERAL MAINTENANCE

Cleaning the tractor	7-68
Check first stage fuel filter and water trap	7-70
Bleeding the fuel system	7-70
Hydraulic system hoses	7-71
Check the brake pedal latching/unlatching	7-71
Adjust the cab suspension (where fitted)	7-72
Adjust the automatic pickup hitch	7-73
Headlight adjustment	7-74
Work light adjustment	7-74
Bulb replacement	7-75
Fuses and relays	7-77
Protecting the electronic and electrical systems during battery charging or welding ..	7-89
Battery removal and installation	7-90

STORAGE

Tractor storage	7-92
-----------------------	------

Preparation for use after storage	7-92
---	------

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

Introduction	8-1
--------------------	-----

ALARM(S)

Fault codes and symbols	8-2
-------------------------------	-----

SYMPTOM(S)

Engine	8-4
Transmission	8-5
Hydraulics	8-5
Three-point hitch	8-6
Brakes	8-6
Cab	8-6
Electrical system	8-7

9 SPECIFICATIONS

 
GENERAL DIMENSIONS	9-1
General dimensions	9-1
Minimum turn radius	9-3
Axle dimension	9-4
Maximum permissible operating weights	9-5
Tractor weights	9-5
Engine and Fuel tank - Capacity	9-6
Driveline - Capacity	9-6
Front axle system - Capacity	9-6
Engine	9-7
Transmission	9-8
Rear Power Take-Off (PTO)	9-9
Front Power Take-Off (PTO)	9-10
Hydraulic system	9-11
Three-point hitch	9-13
Remote control valves	9-13
Three-point hitch	9-13
Brakes	9-14
Steering	9-15
Electrical equipment	9-15
Minimum hardware tightening torques	9-16

10 ACCESSORIES

Radio (where fitted)	10-1
External rear view mirrors	10-2
Auxiliary head lights and signature lights (where fitted)	10-4
Rotating beacon	10-5
Front-end loader fixation points	10-6

11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy	11-1
Service record 1st 50 hour, Dealer copy	11-3
Telematics module declaration of conformity	11-4



1 - GENERAL INFORMATION

Metric and Imperial units abbreviations

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m ²	square foot	ft ²
			square inch	in ²
	square millimeter	mm ²	square inch	in ²
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	μF	microfarad	μF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency - Rotational				
	revolution per minute	r/min	revolution per minute	r/min ^a
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	μm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per mass				
	milligram per kilogram	mg/ kg	parts per million	ppm
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH ₂ O
	megapascal	MPa	pound per square inch	psi
	millibar	mbar		
	bar	bar		

1 - GENERAL INFORMATION

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Temperature (other than thermodynamic)				
	degrees Celsius	°C	degrees Fahrenheit	°F
Time				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
Torque (includes bending moment, moment of force, and moment of a couple)				
	newton meter	N m	pound foot	lb ft
			pound foot	lb in
Velocity				
	kilometer per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimeter per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
Volume (includes capacity)				
	cubic meter	m ³	cubic yard	yd ³
				cu yd
	liter	l	cubic inch	in ³
	liter	l	US gallon	US gal
			UK gallon	UK gal
			US quart	US qt
			UK quart	UK qt
	milliliter	ml	fluid ounce	fl oz
Volume per time (includes discharge and flow rate)				
	cubic meter per minute	m ³ /min	cubic foot per minute	ft ³ /min
	liter per minute	l/min	US gallon per minute	US gal/min
	milliliter per minute	ml/min	UK gallon per minute	UK gal/min
Sound power level and sound pressure level				
	decibel	dB	decibel	dB
Water hardness				
	German hardness	°dH	English hardness	°e
	French hardness	°fH	parts per million	ppm

Glossary

Acronym	Definition
DEF	Diesel Exhaust Fluid
ISO	International Organization for Standardization
MSDS	Material Safety Data Sheet
NOx	Nitrogen Oxide
PPE	Personal Protective Equipment
SCR	Selective Catalytic Reduction
ULSD	Ultra Low Sulfur Diesel
%	Percent
<	Less than
>	Greater than

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com