

ORIGINAL INSTRUCTIONS

# OPERATOR'S MANUAL

---

**T8.320**

**T8.350**

**T8.380**

**T8.410**

**T8.435**

**T8.380 SmartTrax™**

**T8.410 SmartTrax™**

**T8.435 SmartTrax™**

Tractor

*PIN ZJRE04001 and above*

**Part number 51483374**

1<sup>st</sup> edition English

August 2018



# Contents

---

**NOTE:** The Operator's Manual consists of two volumes. The first volume contains operating information, the second volume the maintenance and diagnostic information.

## 1 GENERAL INFORMATION

Note to the owner.....	1-1
Engine tampering.....	1-2
Intended use.....	1-3
Electro-Magnetic Compatibility (EMC) .....	1-4
ISOBUS certification.....	1-5
Product identification .....	1-6
Operator's manual storage on the machine .....	1-9
Machine orientation.....	1-10
Machine components.....	1-11

## 2 SAFETY INFORMATION

Safety rules and signal word definitions .....	2-1
Safety rules - General .....	2-2
Safety rules - General maintenance safety .....	2-5
Safety rules - Wheels and tires .....	2-5
Safety rules - Driving on public roads and general transportation safety .....	2-5
Safety rules - Fire and explosion prevention .....	2-6
Safety rules - General battery safety .....	2-6
Safety rules - Hydraulic system safety .....	2-7
Safety rules - Instructional seat safety .....	2-7
Safety rules - Operator presence system .....	2-8
Safety rules - Power Take-Off (PTO) .....	2-8
Safety rules - Reflectors and warning lights .....	2-8
Safety rules - Seat belts .....	2-8
Safety rules - Roll Over Protective Structure (ROPS) .....	2-9
Safety rules - Cab protection .....	2-11
Safety rules - Air conditioning system .....	2-12
Safety rules - Personal Protective Equipment (PPE) .....	2-12
Safety rules - Do Not Operate tag .....	2-12
Safety rules - Hazardous chemicals .....	2-12
Safety rules - Utility safety .....	2-12
Safety rules - Electrical storm safety .....	2-13
Safety rules - Mounting and dismounting .....	2-13
Safety rules - Working at heights .....	2-13
Safety rules - Lifting and overhead loads .....	2-13
Safety rules - Implements, tools and trailers .....	2-14
Safety rules - Roll over and tip over .....	2-14
Ecology and the environment .....	2-16
Safety signs .....	2-17
Informational signs .....	2-31

---

## 3 CONTROLS AND INSTRUMENTS

### ACCESS TO OPERATOR'S PLATFORM

Tractor access .....	3-1
Lower step .....	3-3

### OPERATOR'S SEAT

Control identification .....	3-4
------------------------------	-----

### INSTRUCTOR'S SEAT

Overview .....	3-8
----------------	-----

### FORWARD CONTROLS

Steering column .....	3-9
Front console .....	3-12
Pedal controls .....	3-14

### LEFT-HAND SIDE CONTROLS

Hand brake, if equipped .....	3-18
Pneumatic trailer brake .....	3-19

### RIGHT-HAND SIDE CONTROLS

Armrest console .....	3-20
Multi function handle .....	3-22
Engine speed control .....	3-27
Control panel .....	3-29
Remote valve controls .....	3-36
Joystick .....	3-37
Rear hitch controls .....	3-39
Armrest compartment .....	3-41
Adjusting the armrest console .....	3-43

### REARWARD CONTROLS

Fender console .....	3-44
Automatic temperature controls .....	3-49
Automatic temperature control system .....	3-52
Ventilation .....	3-53

### OVERHEAD CONTROLS

Interior lamps .....	3-55
----------------------	------

### EXTERIOR CONTROLS

Rear fender .....	3-56
Front hitch .....	3-58

### INSTRUMENT CLUSTER

Overview .....	3-59
Gauges .....	3-60

---

Status and warning icons .....	3-61
Upper display .....	3-64
Lower display .....	3-68
Keypad .....	3-70
Setup menu .....	3-72
Rear tire radius and track radius charts .....	3-78
Adjust menu .....	3-79
Performance features .....	3-88

## 4 OPERATING INSTRUCTIONS

### COMMISSIONING THE UNIT

Engine - Safety rules .....	4-1
-----------------------------	-----

### STARTING THE UNIT

Normal engine starting .....	4-4
Cold starting aids .....	4-8
Cold temperature operation .....	4-10

### STOPPING THE UNIT

Stopping the engine .....	4-12
---------------------------	------

### MOVING THE UNIT

FULL POWERSHIFT TRANSMISSION .....	4-14
Powershift transmission .....	4-14
Best practices for prolonged transmission life .....	4-15
Inching pedal and throttle .....	4-16
Powershift transmission controls .....	4-17
Upper display - Powershift transmission .....	4-20
Driving the Powershift vehicle .....	4-22
Setting default gears .....	4-27
Ground Speed Management (GSM) .....	4-29
ECO power mode .....	4-37
CONTINUOUSLY VARIABLE TRANSMISSION (CVT) .....	4-39
Introduction .....	4-39
Auto Command™ brake, pedal and throttle operation .....	4-40
Auto Command™ controls .....	4-45
Upper display .....	4-51
Auto Command™ operation .....	4-53
Eco-Draft or Shuttle mode .....	4-59
Driving the Auto Command™ transmission .....	4-62
ECO power mode .....	4-66
Transmission messages .....	4-68
POWERSHIFT AND CVT TRANSMISSIONS .....	4-70
Mechanical Front Drive (MFD) .....	4-70
Differential lock system .....	4-73
Suspended axle .....	4-75
Ride control .....	4-80
Engine power boost .....	4-82

---

Constant engine speed .....	4-83
Suspended cab .....	4-86
Headland management system .....	4-87

## PARKING THE UNIT

Automatic park lock .....	4-93
---------------------------	------

## 5 TRANSPORT OPERATIONS

### ROAD TRANSPORT

Tractor warning lamps .....	5-1
Wide transport marker light .....	5-3
Wide transport marker light - Russia only .....	5-5
Turn signal lamps .....	5-6
Safe transport speed .....	5-7

### SHIPPING TRANSPORT

Securing the tractor for shipping .....	5-8
---	-----

### RECOVERY TRANSPORT

Safety rules .....	5-9
Towing the tractor .....	5-10

## 6 WORKING OPERATIONS

### GENERAL INFORMATION

Overview .....	6-1
----------------	-----

### REAR POWER TAKE-OFF (PTO)

Safety rules .....	6-2
Connecting the Power Take-Off (PTO) .....	6-5
Interchangeable Power Take-Off (PTO) shaft .....	6-6
Rear Power Take-Off (PTO) operation .....	6-12
Power Take-Off (PTO) fender switch operation .....	6-16
Auto Power Take-Off (PTO) operation .....	6-17

### FRONT POWER TAKE-OFF (PTO)

Overview .....	6-20
Front Power Take-Off (PTO) operation .....	6-21

### REAR HITCH

Identification .....	6-24
Link adjustment .....	6-25
Hitch high clearance adjustment .....	6-29
Hydraulic links .....	6-32
Sway limiter adjustment .....	6-34
Lower link block adjustment .....	6-35

---

Mechanical float adjustment .....	6-37
Hitch quick coupler - Category III/IIIN .....	6-38
Hitch quick coupler - Category IVN.....	6-43
Hitch operation .....	6-48
Hitch remote switch operation.....	6-53
Position control operation .....	6-54
Load control operation.....	6-56
Slip control operation .....	6-58
Hitch set point .....	6-60

## FRONT HITCH

Overview .....	6-62
Front hitch operation .....	6-63

## DRAWBARS AND TOWING ATTACHMENTS

Safety rules.....	6-70
Drawbar capacity/position .....	6-71
Adjusting the drawbar .....	6-75

## TRAILER HITCHES

Clevis and special drawbars.....	6-77
Automatic rotation trailer hitch.....	6-79
Auto pickup hitch operation.....	6-82
Manual trailer hitch .....	6-84

## TRAILER BRAKING SYSTEMS

Safety rules.....	6-86
Trailer brake connections.....	6-87
Air pressure monitoring.....	6-88

## AUXILIARY CONNECTIONS

Auxiliary power and lighting .....	6-89
Cab power connections .....	6-91
Radar connection.....	6-93
Implement ISOBUS connector .....	6-94
GPS (NMEA) message sharing .....	6-95
Telematics .....	6-95

## HYDRAULIC REMOTE CONTROL VALVES

Valve couplers and connections .....	6-96
Motor return circuit .....	6-100
Power beyond circuit .....	6-101
Flow capacity .....	6-102
Hydraulic control lock.....	6-103
Operating the controls.....	6-104
Remote valve display screens.....	6-108
Remote hydraulic auto mode.....	6-111

---

Auto depth control .....	6-114
Joystick operation .....	6-116

## BALLASTING THE TRACTOR

Guidelines .....	6-120
Tire load and inflation charts .....	6-135
Weights, cast metal.....	6-157
Wheel slip and power hop performance .....	6-171

## MECHANICAL FRONT DRIVE (MFD) AXLES

Front axle identification .....	6-174
Tire combinations and tread positions.....	6-175
Steering and oscillation stops .....	6-193
Tread and fender settings - Class 4.75 and 5.0 fixed front axles.....	6-195
Tread and fender settings - Class 4.75 and 5.0 saddle suspended front axles ..	6-209
Tread and fender settings - Class 5.0 wide front axles.....	6-223
Front wheel fenders .....	6-226
Front wheel narrow fenders - Class 4.75 and 5.0 fixed and suspended axles ...	6-227
Wide tire fender kit .....	6-232
Front wheel wide and extra wide fenders - Class 5.0 fixed and suspended axles	6-238
All front wheel fenders – Class 5.0 wide fixed and suspended axles .....	6-243

## REAR AXLE

Rear wheel installation .....	6-248
Rear wheel tread settings .....	6-253
Dual/triple wheel setup for 508 mm (20 in)/559 mm (22 in) row spacing.....	6-261
Adjustable rear wheel .....	6-268

## REAR TRACKS

Tire load and inflation charts - - Tractors with rear tracks .....	6-270
Maximum front ballast recommendations .....	6-273
Track preconditioning.....	6-274
Factory and field track settings .....	6-276

## 7 MAINTENANCE

### GENERAL INFORMATION

Safety rules.....	7-1
Maintenance guidelines .....	7-2
Opening the hood .....	7-3
Closing the hood .....	7-5
Filling the fuel tank .....	7-6
Battery disconnect switch .....	7-8
Battery access and service.....	7-9
Tire and rim service.....	7-10
Tractor jacking points.....	7-12
Capacities .....	7-14
Consumables - Engine oil .....	7-15

---

Consumables - Transmission/hydraulic system fluid .....	7-16
Consumables - Diesel fuel .....	7-17
Consumables - Organic Acid Technology (OAT) coolant .....	7-18
Maintenance chart notes .....	7-20
Maintenance summary decal .....	7-21

## Maintenance planning

Maintenance chart .....	7-22
-------------------------	------

## At warning message display

Air filter service icon/message* .....	7-24
Water in fuel message .....	7-27
Transmission oil filter switch .....	7-29
Hydraulic oil filter switch .....	7-32

## First 10 to 50 hours

Wheel bolt torque .....	7-35
Weight bolt torque .....	7-37
Differential and planetary oil .....	7-38

## Every 10 hours or daily

Engine oil level .....	7-39
Transmission oil level .....	7-40
Engine coolant level .....	7-41
Air reservoir .....	7-41
Rear hitch and front axle .....	7-41

## Every 50 hours or weekly

Engine auxiliary fuel filter .....	7-42
------------------------------------	------

## First 100 hours or at warning message

Transmission and regulated system oil filters .....	7-44
---	------

## First 100 hours

Powershift transmission clutch calibration .....	7-45
--	------

## Every 100 hours

Front hitch .....	7-51
Front Power Take-Off (PTO) drive shaft .....	7-53
Input shaft for the front Power Take-Off (PTO) dropbox .....	7-54

## Every 200 hours

Track alignment .....	7-56
-----------------------	------

---



## Every 300 hours

Battery water level (Note B) .....	7-57
Engine air intake and exhaust hoses .....	7-59
Engine coolant level - deaeration tank .....	7-61
Weight bolt torque .....	7-62
Front axle (Note A) .....	7-63
Rear hitch (Note A) .....	7-65
Fuel tank .....	7-67
Differential and planetary oil level (Note B) .....	7-68
Transmission oil pressure .....	7-69
Front Power Take-Off (PTO) oil level .....	7-70

## Every 400 hours

Cab air filter* .....	7-71
-----------------------	------

## Every 600 hours

Engine oil and filter* .....	7-74
Engine coolant antifreeze protection .....	7-77
Engine coolant hoses and clamps .....	7-77
Engine fuel filter* .....	7-79
Engine auxiliary fuel filter* .....	7-82
Fuel system bleeding .....	7-84
Changeable Power Take-Off (PTO) internal splines .....	7-85
Engine air precleaner* .....	7-86

## Every 1000 hours or annually

Pneumatic brake system dryer .....	7-87
Powershift transmission clutch calibration .....	7-88
Front Power Take-Off (PTO) oil and filter* .....	7-94
Front Power Take-Off (PTO) dropbox oil .....	7-96
Fuel tank breather .....	7-97

## Every 1200 hours or annually

Differential and planetary oil .....	7-98
Engine air filters* .....	7-102

## Every 1500 hours

Transmission oil .....	7-105
Regulated system oil filter* .....	7-108
Main transmission oil filter* .....	7-109
Idler/roller wheel oil .....	7-110
Engine crankcase filter* .....	7-111

## Every 3000 hours

Engine valve adjustment (Note C) .....	7-115
--	-------

---

## Every 4000 hours or every four years

Engine coolant.....	7-116
---------------------	-------

## As required

Vehicle fire prevention.....	7-118
Track inspection and bolt torque .....	7-119
Track rotation .....	7-119
Track drive wheel and idler bolt torque .....	7-119
Track tension release.....	7-120
Track alignment.....	7-122
Cab air filter*.....	7-124
Grille screen and radiator area .....	7-127
Transmission clutch and accumulator .....	7-128
Tire pressure .....	7-129
Fan belt.....	7-130
Remote valve collection bottle.....	7-136
Remote valve couplers .....	7-137
Cab fabric and carpet.....	7-138
Seat belt .....	7-138

## Fuse and relay locations

Electrical component location .....	7-139
-------------------------------------	-------

## STORAGE

Preparing for storage .....	7-145
Removal from storage .....	7-146

## ELECTRICAL SYSTEM

Radio or audio system.....	7-147
Battery removal and installation .....	7-148
Auxiliary battery connections .....	7-150
Headlight .....	7-151
LED work lights.....	7-152
Grille work light .....	7-152
Fender tail light and warning light .....	7-153
Roof warning light .....	7-154
Work light.....	7-155
High intensity work light .....	7-156
Wide transport marker light.....	7-157
Rotating beacon light.....	7-158
Interior light .....	7-159

## 8 TROUBLESHOOTING

### ALARM(S)

Display warnings overview .....	8-1
Display warnings - Level 1 .....	8-2
Display warnings - Level 2 .....	8-4

---

Display warnings - Level 3 .....	8-7
Display warnings - Level 4 .....	8-8

## SYMPTOM(S)

Engine symptoms .....	8-10
Transmission symptoms.....	8-12
Hydraulic symptoms.....	8-13
Hitch symptoms .....	8-14
Brake symptoms.....	8-15
Cab environment symptoms.....	8-15
Electrical power system symptoms.....	8-16

## 9 SPECIFICATIONS

Engine specifications .....	9-1
Power train specifications .....	9-2
Operating speeds - Wheeled tractors .....	9-6
Operating speeds - SmartTrax™ tractors .....	9-7
Maximum angle (tilt) of operation.....	9-9
Vehicle dimensions and shipping weight - Wheeled tractors.....	9-10
Vehicle dimensions and shipping weight - SmartTrax™ tractors .....	9-17
Maximum operating weight.....	9-20

## 10 ACCESSORIES

Farming system displays .....	10-1
Rear view mirrors.....	10-2
Chemical tank mounting.....	10-4
Loader connection and operation .....	10-6
General accessories.....	10-7

---

# 1 - GENERAL INFORMATION

## Note to the owner

This manual contains important information about the safe operation, adjustment and routine maintenance of your T8. or T8. **SmartTrax™** series tractor. The manual is divided into 10 chapters as outlined in the table of contents. Refer to the index at the end of this manual for locating specific items about your tractor.

Do NOT operate or permit anyone to operate or service this machine until you or the other persons have read this manual. Use only trained operators who have demonstrated the ability to operate and service this machine correctly and safely.

All persons who will be operating this machine shall possess a valid local vehicle operating permit and/or other applicable local age work permits.

### Tractors equipped with rear tracks

On **SmartTrax™** models, refer to the information starting on page **Operating speeds - SmartTrax™ tractors** for transport speed weight limitations.

This Operator's Manual is to be stored in the manual compartment behind the operator's seat in the vehicle. Make sure this manual is in good condition. Contact your dealer to obtain additional manuals.

Your NEW HOLLAND dealer will instruct you in the general operation of your new equipment. Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your machine. They will also provide any after-sales service you may need, and genuine NEW HOLLAND parts, your guarantee of quality and match.

See Operator's Manual for  
Transport Speed Weight Guidelines

kph/mph


Kg/lbs

code 00000000A

RAIL14TR03870BA 1

## Engine tampering

The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators, and users is strictly prohibited by law.

fiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!

Failure to comply could result in government fines, rework charges, invalid warranty, legal action, and possible con-

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)