

ORIGINAL INSTRUCTIONS

# OPERATOR'S MANUAL

---

## 266WMM

### Mower Deck

*PIN YJWR00001 and above*

*for Workmaster™ 25 Compact Tractor*

**Part number 51501505**

1<sup>st</sup> edition English

September 2018



# INTRODUCTION

## **TO THE PURCHASER**

All products are designed to give safe, dependable service if they are operated and maintained according to instructions. **Read and understand this manual before operation, and keep it in your files for further reference.**

This manual has been prepared to assist the owner and operators in the safe operation and suitable maintenance of the equipment. The information is applicable to products at the time of manufacture and does not include modifications made afterwards.

Read and understand this operator's manual before attempting to put equipment into service. Familiarize yourself with the operating instructions **AND ALL THE SAFETY RECOMMENDATIONS** contained in this manual and those labeled on the equipment and on the machine. Follow the safety recommendations and make sure that those with whom you work follow them.

## **TO THE DEALER**

Give this manual to the owner upon delivery of the equipment.

## **TO THE PURCHASER AND THE DEALER**

### **Illustrations**

The illustrations may not necessarily reproduce the full detail and the exact shape of the parts or depict the actual models, but are for reference only.

### **Direction Reference**

All references to right and left, forward or rearward are from the operator seat.

### **Serial Decal**

<b>CNH Industrial America LLC</b>	
Racine, WI 53404 U.S.A.	Made In Canada
ATTACHMENT	
THIS IS NOT A PRODUCT IDENTIFICATION NUMBER (PIN) PLATE	
Model / Type / Part Number	
Serial Number	

*To assist your dealer in handling your needs, please record hereafter the model number and serial number of your equipment and machine. It is also advisable to supply them to your insurance company. It will be helpful in the event that equipment or machine is lost or stolen*

**MODEL:** \_\_\_\_\_

**SERIAL NUMBER:** \_\_\_\_\_

**DATE OF PURCHASE:** \_\_\_\_\_

**DEALER NAME:** \_\_\_\_\_


**DEALER TELEPHONE NUMBER:** \_\_\_\_\_


# INTRODUCTION


All products are designed to give safe, dependable service if they are operated and maintained according to instructions. **Read and understand this manual before operation.** It is the owner's responsibility to be certain anyone operating this product reads this manual, and all other applicable manuals, to become familiar with this equipment and all safety precautions. Failure to do so could result in serious personal injury or equipment damage. If you have any questions, consult your dealer.

## SAFETY FIRST

This symbol, the industry's "Safety Alert Symbol", is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to assemble or use this unit.

 **DANGER :** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

 **WARNING :** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

 **CAUTION :** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

**IMPORTANT :** Indicates that equipment or property damage could result if instructions are not followed.

**NOTE :** Gives helpful information.

# TABLE OF CONTENT

INTRODUCTION .....	1
TABLE OF CONTENT .....	3
SAFETY INFORMATION .....	5
GENERAL SAFETY INFORMATION- Pictograms .....	7
SPECIFICATIONS .....	9
SAFETY LABELS .....	10
ESTIMATED ASSEMBLY TIME .....	11
ASSEMBLY.....	12
Mower Assembly .....	12
Tractor 3-point Pins & Lifting Pivots Installation .....	12
Locking mower bracket installation .....	13
Mid-PTO extension Installation on Tractor WITH FRONT LOADER .....	14
Mid-PTO extension Installation on Tractor WITHOUT FRONT LOADER .....	15
Middle Supports Installation on Tractor WITH FRONT LOADER .....	16
Middle Supports Installation on Tractor WITHOUT FRONT LOADER .....	17
Lifting Arms Installation .....	18
Remove Grill Guard .....	19
Front Supports Installation .....	19
Grill Guard Installation .....	19
Installation of "Anti-Scalp" Roller .....	20
Wheels Installation .....	20
Deflectors Installation .....	21
Driveline Installation to Mower .....	21
Front Anchor Installation .....	22
Roll Over Step .....	23
Lifting Arms and Driveline to Tractor Installation.....	24
Front Anchor Rod Installation.....	24
Locking Positioning .....	25
Removing Mower from the Tractor .....	25

# TABLE OF CONTENT

OPERATION .....	26
General Preparation .....	26
Operating Controls .....	26
Engine Speed .....	26
Up and Down Control .....	26
Engaging the Drive Mechanism .....	26
Transport Locking .....	26
MAINTENANCE .....	27
Maintenance .....	27
Sharpening and Balance of blades .....	27
Blade Replacement .....	28
Belt Replacement .....	29
Adjustments .....	30
Cutting Height Adjustment .....	30
Lubrication .....	31
Troubleshooting .....	32
PARTS .....	34
Introduction .....	34
Upper Part of Mower Frame .....	35
Hitch Components .....	36
Drive System .....	38
Under Part of Mower Frame .....	40
Deflector .....	41
Wheels .....	42
Spindle .....	43
Drivelines BER4700249, BER00333 .....	44
TORQUE SPECIFICATION TABLE .....	45



## SAFETY INFORMATION

### Children

Tragic accidents can occur if the operator is not alert to the presence of children. Children are generally attracted to machines and the work being done. Never assume children will remain where you last saw them

1. Keep children out of the operating area and under the watchful eye of another responsible adult.
2. Be alert and turn machine off if children enter the work area.
3. Before and when backing, look behind for small children.
4. Never carry children while operating the machine. They may fall off and be seriously injured or interfere with the safe operation of the machine.
5. Never allow children to play on the machine or attachment even when the machine is turned off.
6. Never allow children to operate the machine even under adult supervision.
7. Use extra care when approaching blind corners, shrubs, trees, or other obstructions that might hide children from sight.

### Before Operation

1. Read and understand both the machine AND implement operator's manual before using the snowblower. Know how to operate all controls and how to stop the unit and disengage the controls quickly. Lack of knowledge can lead to accidents.
2. Park the machine/implement on level ground, set the parking brake, lower the implement to the ground, place all control levers in neutral, shut off the engine and remove the ignition key and allow the rotating parts to stop BEFORE making any implement adjustments, repairs or inspections.
3. Keep clear of all rotating parts. Do not put hands or feet under, or into snowblower and subframe with engine running.

4. For your safety, do not work under any hydraulically supported machine elements, they may creep down, suddenly drop or be accidentally lowered. Do not use loader, quick hitch, or an implement as a jack for servicing.
5. Do not operate the machine/implement that is defective or has missing parts. Make sure that all recommended maintenance procedures are completed before operating the unit.
6. Keep the machine/implement clean. Snow, dirt or ice build-up can lead to malfunction or personal injury from thawing and refreezing in garage. Inspect and clean every rotating parts.
7. Do not modify or alter this implement or any of its components, or any implement function without first consulting your dealer. The manufacturer will not claim responsibility for fitment of unapproved parts and/or accessories and any damages as a result of their use.
8. Verify that all machine/implement safety protective devices are in place. Shields, guards and covers must be correctly installed at all times. When necessary to remove these for servicing, cleaning, or repair work, they must be reinstalled immediately.
9. Always make sure all implement components are properly installed and securely fastened.
10. Check that all machine/implement drivelines are in good working order.
11. Check for moving parts excessive wear regularly. ALWAYS USE GENUINE PARTS WHEN REPLACEMENT PARTS ARE REQUIRED.
12. Prior to operation, clear work area and mark all curbs, pipes, etc. that cannot be moved.
13. Inspect the machine/implement after striking any foreign object to assure that all machine/implement parts are safe and secure and not damaged.
14. Handle fuel with care, as it is highly flammable. Use approved fuel container.
15. Never add fuel to a running engine or a hot engine.
16. Fill fuel tank outdoors with extreme care. Never fill fuel tank indoors. Replace fuel cap securely and wipe up spilled fuel. Always refuel using a properly grounded system.



## SAFETY INFORMATION

17. Check all machine controls regularly and adjust where necessary. Make sure that the brakes are evenly adjusted. Periodically check all nuts and bolts for tightness, especially wheel hub and rim nuts.
18. Make sure the machine is counterweighted and has tire chains for better traction and stability as recommended by your dealer. Weights provide the necessary balance to improve stability, traction and steering. Use only those recommended by your dealer.
19. Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable noises..
8. Park the machine/implement on level ground, place the transmission in neutral, set the parking brake, disengage the driving system, lower the equipment to the ground, place all levers including auxiliary control levers in neutral, shut off the engine and remove the ignition key **BEFORE LEAVING THE MACHINE.**
9. Always drive the machine at speeds compatible with safety, especially when operating over rough ground, crossing ditches, slippery surface or when turning.
10. Operate only with good visibility and during daylight hours, or when the area is well lit with bright artificial light.
11. Do not run the engine indoors except when starting engine and transporting attachment in or out of building. Carbon monoxide gas is colorless, odorless and deadly.












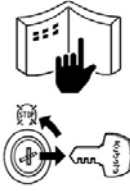


### **During Operation**

1. Never allow anyone to operate the machine and implement until they have read the manuals completely and are thoroughly familiar with their basic operation. Lack of operating knowledge can lead to accidents.
2. Do not allow anyone to ride on the machine/implement at any time. The only one allowed is the operator that **MUST** sit in the driver seat.
3. Never allow anyone near the work area. The debris that can be thrown could cause serious personal injuries.
4. Never stand alongside of the implement while the engine is running.
5. Never operate the implement without safety protective devices in place. All machine/implement shields, guards and covers must be correctly installed at all times.
6. Keep clear of all rotating parts. Do not put hands or feet under, or into the implement with engine running.
7. If the implement starts to vibrate abnormally, disengage the PTO, stop the engine immediately and check for cause. Excessive vibration is generally a sign of trouble.
12. Exercise extreme caution when operating on or crossing a gravel drive, walks, or roads. Stay alert for hidden hazards or traffic.
13. Use extra caution when backing up.
14. Operate up and down (not across) intermediate slopes. Avoid sudden starts and stops. Drive machine backwards up steeper slopes with the implement off. Then operate as you travel down the slope.
15. Never park the machine on a steep slope. Do not attempt to operate on steep slopes. If operating on slopes is necessary, exercise extreme caution when changing direction.
16. Disengage power to implement when transporting or when not in use





# GENERAL SAFETY INFORMATION

	<p><b>BEFORE YOU START SERVICE</b></p> <ul style="list-style-type: none"> <li>• Read all instructions and safety instructions in this manual and on your machine safety decals.</li> <li>• Clean the work area and machine.</li> <li>• Park the machine on a stable and level ground, and set the parking brake.</li> <li>• Lower the implement to the ground.</li> <li>• Stop the engine, then remove the key.</li> <li>• Disconnect the battery negative cable.</li> <li>• Hang a "DO NOT OPERATE" tag in the operator station.</li> </ul>		<p><b>No Smoking or Open Flames while Fueling</b></p> <ul style="list-style-type: none"> <li>• Fuel is extremely flammable and dangerous. Never smoke near fuel. If fuel is spilled on the machine, its engine, or electrical parts, it may cause a fire. If fuel is spilled, wipe it all up immediately.</li> <li>• Never smoke while filling the machine with fuel. And always tighten the fuel cap securely and wipe up any spilled fuel.</li> </ul>
	<ul style="list-style-type: none"> <li>• When performing maintenance on the equipment, hang the DO NOT OPERATE sign where it will be obvious from and around the driver's seat.</li> <li>• When performing maintenance or repairs, always lower attachments to the ground, stop the engine and secure the tracks with blocks.</li> <li>• When performing maintenance on the equipment, always disconnect the negative battery cable.</li> <li>• Before using tools, make sure you understand how to use them correctly and use tools in good condition and of the right size for the job.</li> </ul>		<ul style="list-style-type: none"> <li>• Before getting on/off of the machine, clean off around the steps so there is no mud on them. Always give yourself 3-point support when getting on/off the machine.</li> </ul> <p><b>CAUTION</b></p> <ul style="list-style-type: none"> <li>• 3-point support means using both legs and one hand or both hands and one leg as you climb up/down.</li> </ul>
	<p><b>START SAFELY</b></p> <ul style="list-style-type: none"> <li>• Do not do the procedures below when you start the engine. <ul style="list-style-type: none"> <li>– short across starter terminals</li> <li>– bypass the safety start switch</li> </ul> </li> <li>• Do not alter or remove any part of machine safety system.</li> <li>• Before you start the engine, make sure that all shift levers are in neutral positions or in disengaged positions.</li> <li>• Do not start the engine when you stay on the ground. Start the engine only from operator's seat.</li> </ul>		<ul style="list-style-type: none"> <li>• Do not remove the radiator cap when the engine operates, or immediately after it stops. If not, hot water can spout out from the radiator. Only remove the radiator cap when it is at a sufficiently low temperature to touch with bare hands. Slowly loosen the cap to release the pressure before you remove it fully.</li> </ul>
	<p><b>Starting the Machine Safely</b></p> <ul style="list-style-type: none"> <li>• Before starting the engine, always sit in the driver's seat and make sure the area is safe and clear.</li> <li>• As it is dangerous, never start the engine from anywhere but the driver's seat.</li> <li>• Always check and make sure control lever(s) are not engaged before starting the engine.</li> <li>• Never start the engine by hot-wiring the starter circuit. This is not only dangerous, but may damage the machine.</li> </ul>		<ul style="list-style-type: none"> <li>• The engine, muffler, radiator, hydraulic line, etc., have parts that remain very hot even after the engine has been stopped. Be sure to avoid these parts, as touching them can result in burns. Radiator coolant, hydraulic fluid and oil also remain hot. Therefore, do not attempt to remove caps and plugs, etc., before these fluids have sufficiently cooled.</li> <li>• Make sure the coolant temperature has dropped sufficiently before opening the radiator cap. Also, since the inside of the radiator is pressurized, when removing the cap, first loosen it to release the pressure before removing the cap completely.</li> </ul>
	<ul style="list-style-type: none"> <li>• Wear clothes appropriate for working on equipment. Do not wear loose-fitting clothes as they may catch on the machine controls.</li> <li>• When working on the equipment, use all safety gear, such as a helmet, safety glasses and shoes, that are required by law or regulation.</li> <li>• Never perform maintenance while drowsy or under the influence of alcohol or drugs.</li> </ul>		<ul style="list-style-type: none"> <li>• Grease is under high pressure inside the hydraulic cylinder. It is very dangerous to loosen a grease nipple quickly as it may shoot off. Always loosen grease nipples slowly.</li> <li>• And never face a grease nipple while loosening it.</li> </ul>
	<p><b>Be Ready for an Emergency</b></p> <ul style="list-style-type: none"> <li>• Keep a first-aid kit and fire extinguisher close at hand so you can use it when needed.</li> <li>• Keep emergency contact information for doctors, hospitals and ERs handy.</li> </ul>		<p><b>PREVENT A FIRE</b></p> <ul style="list-style-type: none"> <li>• Fuel is very flammable and explosive under some conditions. Do not smoke or let flames or sparks in your work area.</li> <li>• To prevent sparks from an accidental short circuit, always disconnect the battery negative cable first and connect it last.</li> <li>• The battery gas can cause an explosion. Keep the sparks and open flame away from the top of battery, especially when you charge the battery.</li> <li>• Make sure that you do not spill fuel on the engine.</li> </ul>
	<p><b>KEEP A GOOD AIRFLOW IN THE WORK AREA</b></p> <ul style="list-style-type: none"> <li>• If the engine is in operation, make sure that the area has good airflow. Do not operate the engine in a closed area. The exhaust gas contains poisonous carbon monoxide.</li> </ul>		<p><b>Dispose of Waste Fluids Properly</b></p> <ul style="list-style-type: none"> <li>• Never dispose of waste fluids on the ground, in the gutter, a river, pond or lake. Always dispose of hazardous substances like waste oil, coolant and electrolytic fluid in accordance with the relevant environmental protection regulations.</li> <li>• Keep the safety plates clean so they can be read. If a safety plate is damaged and comes off or becomes illegible, put a plate with the same warnings back in its place.</li> </ul>



Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)