

ORIGINAL INSTRUCTIONS - according to Regulation (EU) 2014/1322, Annex XXII

OPERATOR'S MANUAL

T4.80N

T4.90N

T4.100N

T4.110N

Tractor

*PIN HLRT4**N*HLT00001 and above*

Part number 51601929

4th edition English

March 2019

Replaces part number 51460062



Contents

1 GENERAL INFORMATION

Note to the Owner	1-1
Intended use.....	1-3
Electro-Magnetic Compatibility (EMC)	1-5
Manual scope and required training level	1-6
Metric and imperial units abbreviations.....	1-8
Identification plates	1-10
Approval data plate.....	1-17
Operator's manual storage	1-18
Machine orientation.....	1-19
Exhaust Gas Recirculation (EGR) system	1-20

2 SAFETY INFORMATION

Safety rules and signal word definitions	2-1
Safety rules - General information	2-2
Safety rules – Maintenance	2-3
Safety rules - Wheels and tires	2-4
Safety rules – Explosions and fires	2-5
Safety rules - Fire extinguisher	2-6
Safety rules – Battery	2-7
Safety rules – Operator presence system	2-8
Safety rules - Power Take-Off (PTO)	2-9
Safety rules - Seat belts	2-10
Safety rules - Operator protective structure	2-11
Safety rules - Category 2 cabin (standard)	2-13
Safety rules - Category 4 cabin (if equipped)	2-14
Safety rules - HVAC system	2-16
Safety rules - Personal Protective Equipment (PPE)	2-17
Safety rules - "Do not use" sign	2-18
Safety rules — Application of plant protection products	2-19
Safety rules - Hazardous chemicals	2-21
Safety rules - Near utilities	2-22
Safety rules - In the event of electrical storms	2-23
Safety rules – Mounting and dismounting the machine	2-24
Safety rules - Lifting and overhead loads	2-25
Ecology and the environment	2-26
Safety aspects in accordance with Regulation (EU) 1322/2014 - Annex XXII and subsequent amendments and modifications	2-27
Noise level.....	2-36
Vibration levels	2-37
Machine stability.....	2-38
Decals and plates - Safety signs	2-40
Towing the tractor for recovery	2-62
Tractor jacking points.....	2-63
Burn prevention.....	2-64
Emergency exit	2-65

Wheel chocks.....	2-66
-------------------	------

3 CONTROLS AND INSTRUMENTS

Access to operator's platform

Mounting and dismounting	3-1
Getting to know the internal parts of the cab	3-2
Clock adjustment	3-6

Operator's seat

Mechanical suspension seat	3-7
Air seat	3-8
Air seat – “PREMIUM” model	3-9
Safety belt	3-10

Forward controls

Instrument cluster	3-11
Front controls	3-16
Power shuttle transmission - Operating	3-20

Left-hand side controls

Left-hand side controls	3-21
Left-hand side controls	3-22

Right-hand side controls

Right-hand side controls.....	3-22
-------------------------------	------

Overhead controls

Overhead controls.....	3-25
------------------------	------

Exterior controls

Exterior controls	3-27
-------------------------	------

Display

Programming tractor functions	3-28
Ground speed calibration.....	3-30
Ground speed calibration.....	3-31
Calibrating tool width	3-32
Programming maintenance work	3-33
Activating/deactivating buzzer.....	3-35
Setting units of measurement	3-36
Viewing error codes	3-37
Alarms	3-38
Display warnings overview	3-39

4 OPERATING INSTRUCTIONS

Commissioning the unit

Basic operating safety rules	4-1
Refueling	4-2

Starting the unit

Engine starting system - Start	4-3
--------------------------------------	-----

Stopping the unit

Engine starting system - Stop	4-5
Electronic battery isolator - Overview	4-6

Moving the unit

Machine movement start-up	4-7
Idle speed management	4-8
Transmission with gear reducer and mechanical reversing mechanism	4-9
Transmission with gear reducer and mechanical reversing mechanism	4-10
Transmission with gear reducer and electrohydraulic reversing mechanism	4-11
Transmission with additional gear reducer and mechanical reversing mechanism ...	4-12
Transmission with gear reducer, mechanical reversing mechanism and splitter	4-13
Transmission with gear reducer, electrohydraulic reversing mechanism, HI-LO control and additional reducer	4-14
Transmission with gear reducer, electrohydraulic reversing mechanism, HI-LO control and electrohydraulic clutch	4-15
Transmission with gear reducer, electrohydraulic reversing mechanism, HI-LO control and electrohydraulic clutch	4-18

5 TRANSPORT OPERATIONS

Road transport

Transporting the machine	5-1
--------------------------------	-----

Recovery transport

Towing the tractor	5-1
--------------------------	-----

6 WORKING OPERATIONS

General information

Roll over protective structure (ROPS)	6-1
---	-----

Engine accelerator controls

Hand throttle control lever - Overview	6-2
Foot throttle control - Overview	6-2

Constant engine RPM	
Constant engine RPM	6-3
Clutch pedal	
Clutch pedal	6-4
Brakes	
Brake pedals - Safety rules	6-4
Service brakes	6-6
Parking brake	6-7
Park lock	6-8
Trailer braking systems	
Brakes and controls - Operating	6-9
Hydraulic trailer brakes - Dual-line, compatible with trailers with universal single line	6-10
Brake control switch - Operating	6-12
Four-Wheel Drive (4WD)	
Electro-hydraulic control - Operating	6-13
Differential lock system	
Differential lock	6-14
Air conditioning	
Air-conditioning system	6-15
Cab pressurizing system	
Air filtration system of Category 4 cab - Operating	6-17
Air filter - Operating	6-25
Remote control valves	
Remote control valves - Safety rules	6-27
Rear remotes valves - Overview	6-27
Electrohydraulically controlled rear remote control valves	6-29
Side hydraulic valves – Models with 80 l/min or 64 l/min pump	6-33
Side hydraulic valves – Models with 80 l/min or 64 l/min pump	6-35
Rear Power Take-Off (PTO)	
Two-speed rear Power Take-Off (PTO) - Grouped Safety Message	6-39
Rear Power Take-Off (PTO) - Overview	6-39
Power take-off speeds	6-41
Ground speed Power Take-Off	6-43

Non-synchronised power take-off	6-45
Front Power Take-Off (PTO)	
Front Power Take-Off (PTO) - Safety rules	6-48
Front Power Take-Off (PTO) - Operating	6-49
Rear hydraulic lift	
Safety rules	6-50
Main lift system - Product overview	6-51
Hydraulic lift with mechanical control - Models with cab	6-52
Proportional control lever	6-54
Rear hydraulic lift with mechanical control - Models without cab	6-56
Hydraulic lift with electronic control	
Hydraulic lift with electronic control	6-60
Rear three-point hitch	
Rear three-point hitch - Safety rules	6-64
Rear three-point hitch - Operating	6-65
Rear three-point hitch - Operating Hydraulic adjustment three-point hitch	6-69
Quick hitch - Operating	6-70
Rear three-point hitch - Operating — Tractor setup when towing a trailer with single or multi axles	6-72
Three-point hitch front	
Front hitch - Safety rules	6-73
Front hitch - Operating	6-73
Towbar	
Drawbar - Safety rules	6-75
Towbar	6-76
Rear tow hook	
Safety rules	6-77
Rear tow hook	6-79
Wheels and tires	
Wheels - General specification	6-80
Tires size	6-84
Wheel track adjustment	
Adjustment of the front mudguards	6-86
Adjustment of the front tracks	6-89
Front tracks diagram	6-92

Rear tracks diagram	6-95
---------------------------	------

Ballasting

Ballast	6-97
Liquid ballast	6-99

Power sockets

Power sockets	6-101
---------------------	-------

Rotating beacon

Beacon - Overview	6-101
-------------------------	-------

7 MAINTENANCE

General information

General safety before you service	7-1
Introduction	7-3
Body maintenance	7-4
General specifications - Biodiesel fuels - Biodiesel fuels	7-6
General specification - Diesel fuel	7-8
Recommended engine oil for operating temperature ranges	7-9
Organic Acid Technology (OAT) coolant	7-10
Organic Acid Technology (OAT) coolant	7-12
Consumables	7-13
Capacities	7-14
Opening the engine bonnet	7-15
Removing the engine side shields	7-16

Maintenance planning

Maintenance chart	7-17
-------------------------	------

As required

Windshield washer fluid reservoir - Check	7-19
Road lamps – Adjustment	7-20
Clutch pedal - Adjust	7-21
Parking brake - Adjust	7-22
Oil cooler Transmission - Check	7-23
Radiator and intercooler - Control	7-24
Radiator and intercooler – Cleaning	7-25
Tires — Pressure check and general conditions	7-26
Engine air cleaner outer element - clean	7-27
Engine lubrication system - Replace oil	7-28
Fuel cooler - Cleaning	7-30
Expansion tank - Level make up	7-31
Cab climate control - Check	7-32
Air filter - Check category 2 - Check	7-33
Air filter - Check category 4 - Check	7-34

AT WARNING MESSAGE DISPLAY

Fuel filters - Drain fluid	7-35
Brake fluid - Level make up	7-37
Expansion tank - Check Coolant Level	7-38
Engine lubrication system - Check	7-39
Cab air filter category 4 - Replace	7-40
Air cleaner - Cleaning	7-41

Every 10 hours or daily

Engine lubrication system - Check	7-42
Expansion tank - Check expansion tank fluid level	7-43
Air cleaner - Check	7-44
Brake pedals - Check coupling pin	7-45
Fuel filters - Check glass pre - filter	7-46

Initial 50 hours

Maintenance - Tighten.....	7-47
Maintenance - Check.....	7-47
Maintenance - Replace.....	7-48
Maintenance - Cleaning	7-48
Maintenance - Test	7-48
Maintenance - Grease.....	7-49

Every 50 hours

2WD steering cylinder	7-50
2WD front axle pivot.....	7-50
2WD right and left-hand stub axle.....	7-51
Front axle 4WD (SuperSteer™) - Greasing	7-52
Drive shaft - Grease	7-53
4WD front axle pivot.....	7-54
Drive shaft - Grease (SuperSteer™) - Greasing	7-55
Hydraulic lift and linkage - Greasing	7-56
Front three-point hitch - Greasing	7-56
Radiator and intercooler - Control	7-57

Every 100 hours

Oil cooler and lines - Check drives	7-58
Oil cooler Drive line - Cleaning	7-59
Air conditioner condenser - Cleaning	7-61
Cab air recirculation filter - Cleaning	7-63
Alternator drive belt - Check.....	7-64
Air conditioning compressor belt - Check	7-65
Air filter - Cleaning category 2 - Clean	7-66

Every 300 hours

Hydraulic oil filter - Replace	7-67
--------------------------------------	------

Transmission oil filter - Replace	7-68
Drive line lubrication - Check the oil level	7-69
Engine air filter - Cleaning	7-70
Brake system - Control	7-71
4WD front axle housing (SuperSteer™) - Check the oil level	7-72
4WD front axle housing Check the oil level	7-72
4WD front axle final drives (SuperSteer™) - Check the oil level	7-72
4WD front axle final drives - Oil level check	7-74
4WD front axle steering knuckles (SuperSteer™) - Greasing	7-75
4WD front axle steering knuckles - Greasing	7-75
2WD front wheels.....	7-76

Every 600 hours

Front and rear wheel nuts - Check tightening torque	7-77
Oiling system - Oil and filter replacement (Models without cabs)	7-78
Oiling system - Oil and filter replacement (Models with cabs)	7-81
Fuel filters - Replace	7-83
Fuel filters - Cleaning glass first stage fuel filter	7-86
Air intake lines - Check	7-88
Front Power Take-Off (PTO) - Check.....	7-89
Front Power Take-Off (PTO) - Check Oil breather	7-90
Clutch hydraulic release control - Check - Control	7-91

Every 1200 hours or annually

Cab air filter category 2 - Replace	7-92
Cab air recirculation filter - Replace	7-93
Engine air filters - Replace	7-94
Blowby recirculation filter - Replace	7-95
Rear wheel hub - Greasing	7-96

Every 1200 hours or two years

Front axle housing oil, 4WD replacement	7-97
4WD front axle final drives - Change oil	7-98
Hydraulic system oil – Replacement	7-99
Engine cooling system - Change fluid (normal liquid)	7-100
Front Power Take-Off (PTO) - Change oil	7-105
Alternator drive belt - Replace.....	7-107
Air conditioning compressor belt - Replace	7-108

Every two years

Receiver-dryer - Replace	7-109
Brake fluid reservoir - Check	7-110
Fuel tank - draining	7-111

Every 3600 hours

Engine cooling system - Change fluid (OAT liquid)	7-112
---	-------

Brake fluid reservoir - Change fluid.....	7-117
---	-------

Electrical system

Battery access and service.....	7-118
Battery cut-off switch	7-122

Light adjustments

Road lamps – Replacement	7-123
Road lamps – Adjustment	7-124

Fuse and relay locations

Fuse and relay box - Overview	7-125
Fuse and relay box - Overview	7-126

Storage

Tractor storage	7-136
-----------------------	-------

Calibrations

Dual Command™ transmission - Calibrate	7-136
Electronic lift calibration	7-140

8 TROUBLESHOOTING

Fault code resolution

TRUBLESHOOTING ENGINE	8-1
Electrical system - Troubleshooting ELECTRICAL SYSTEM	8-3
Hydraulic systems - Troubleshooting HYDRAULIC SYSTEM	8-4
Couplers - Troubleshooting.....	8-5
Rear three-point hitch - Troubleshooting	8-6
Hydraulic service brakes - Troubleshooting	8-7
Cab climate control - Troubleshooting.....	8-7

Symptom(s)

SYMPTOM(S)	8-8
------------------	-----

9 SPECIFICATIONS

Dimensions and weights	9-1
Maximum permitted loads on front and rear axle.....	9-6
Maximum permitted loads on towing hitch	9-7
Maximum permitted loads on drawbar	9-8
Maximum permitted loads on three point hitch	9-9
Additional equipment attachment points	9-10
Additional equipment attachment points	9-11
Additional equipment attachment points	9-12
Mid-mounted implement mounting brackets	9-13
Speed table for 16x16 gearbox.....	9-14
Speed table for 28x16 gearbox.....	9-18

Speed table for 32x16 gearbox..... 9-23
Speed table 44x16 gearbox 9-28
Capacities 9-33
Consumables..... 9-34
General specification 9-35

10 ACCESSORIES

Tool box - Overview 10-1
Radio 10-2
Fuel cooler - Overview 10-7



1 - GENERAL INFORMATION

Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

The NEW HOLLAND dealer will provide instructions on the general operation of new equipment. The dealer's staff, assigned to maintenance, is available for any questions related to the operation of the machine.

Your NEW HOLLAND dealer carries a complete line of genuine NEW HOLLAND service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model code and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model :
Product Identification Number (PIN):



Warning symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

⚠ WARNING

**Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.
Replace all shields before operating the machine.
Failure to comply could result in death or serious injury.**

W0012A

The machine has been designed and built according to the highest standards of quality and it complies with all current safety regulations. However, the risk of accidents can never be completely excluded. That is why it is essential to observe elementary safety rules and precautions.

Read this manual carefully, paying particular attention to the instructions concerning safety, operation and maintenance so as to avoid the risk of injury while operating or servicing the machine.

Do not use this machine for any application or purpose other than those described in this manual. If the machine is to be used for work involving the use of special attachments, accessories or equipment, consult your NEW HOLLAND Dealer in order to make sure that any adaptations or modifications made are in keeping with the machine's technical specifications and with prevailing safety requirements.

Any modification or adaptation which is not approved by the manufacturer may invalidate the machine's initial conformity with safety requirements.

The machine must undergo regular inspections, the frequency of which varies according to the type of use. Consult your authorized NEW HOLLAND dealer.

Always keep this manual in the operator's compartment (in the seat back, behind the operator's seat). Make sure it is always complete and in good condition. To receive extra copies of the manual or copies in languages other than that of your country of residence, please contact your NEW HOLLAND dealer.

The manufacturer is committed to the constant improvement of its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

NOTICE: *The information in this manual is provided on the basis of the information that was available at the time the manual was written. Settings, procedures, part numbers, software and other items may change, which may affect the maintenance of the machine. Ensure that you have complete and current information from your dealer before you start any machine operation. All data given in this book is subject to production variations.*

Engine tampering statement:

ATTENTION: *The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply with this prohibition could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com