

**Operator's  
Instruction Book**

**Instructions For The  
Operation And Care  
Of Your**

**CASE  
MODEL "SI" AIR BORNE  
TRACTOR**

**5601**

Reprinted

**CASE III**






*THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.*

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



# WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

16-41

Reference Library


DO NOT REMOVE  
Service & Educational Dept.  
*Operators*

# *Instruction Book*

INSTRUCTIONS FOR THE  
OPERATION AND CARE  
OF YOUR

## **CASE**

### **MODEL "SI" AIR BORNE TRACTOR**

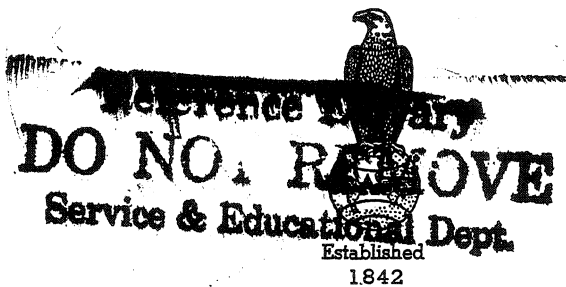

## **J. I. CASE CO.**

RACINE - WISCONSIN - U. S. A.

Form 5601 500 3-43




Second Edition


# Case Model "SI" Air Borne Tractor

## Table of Contents

	Page No.
Air Cleaner, Oil Bath .....	23, 47
Axle, Rear—Bearing Adjustment .....	99
Battery, Storage .....	83
Brakes .....	103
Brakes, Adjusting .....	104
Brake Ring, Replacing Middle .....	105
Brakes, Tractor .....	16, 27
Carburetor .....	21, 39
Chains, Drive .....	101
Clutch .....	25, 87
Clutch, Free Pedal Movement .....	26, 87
Clutch, Installing Assembly .....	90
Clutch, Reassembling After Installing .....	90
Clutch Removing Assembly .....	87
Clutch Brake .....	27, 29
Cooling System .....	11, 24, 58
Cooling System, Cleaning the .....	58
Connecting Rods .....	60
Crankcase Breather .....	17
Crankcase Capacity .....	17
Crankshaft, Removing .....	64
Cylinder Barrels .....	62
Differential Assembly .....	98
Drag Link Adjustment .....	107
Dust, Operation in .....	32
Electrical Equipment .....	13
Electrical System .....	65
Engine .....	39
Engine Lubricating and Oiling System .....	17
Engine Oil Pan, Removing .....	61
Engine Oil Recommendations .....	20
Engine, Removing from Tractor .....	63
Engine, Starting the .....	13
Engine, Stopping .....	15
Fan Belt Adjustment .....	25, 58
Fan Belt, Installing New .....	25, 58
Fuel Filter .....	21
Fuel System .....	11
Generator .....	82
Governor .....	48
King Pins .....	109
Lubrication .....	11, 17
Lubrication Instructions .....	18, 19
Magneto, Field Servicing .....	65
Magneto, Servicing at Base .....	69
Maintenance Instructions .....	39
Oil Pressure .....	17

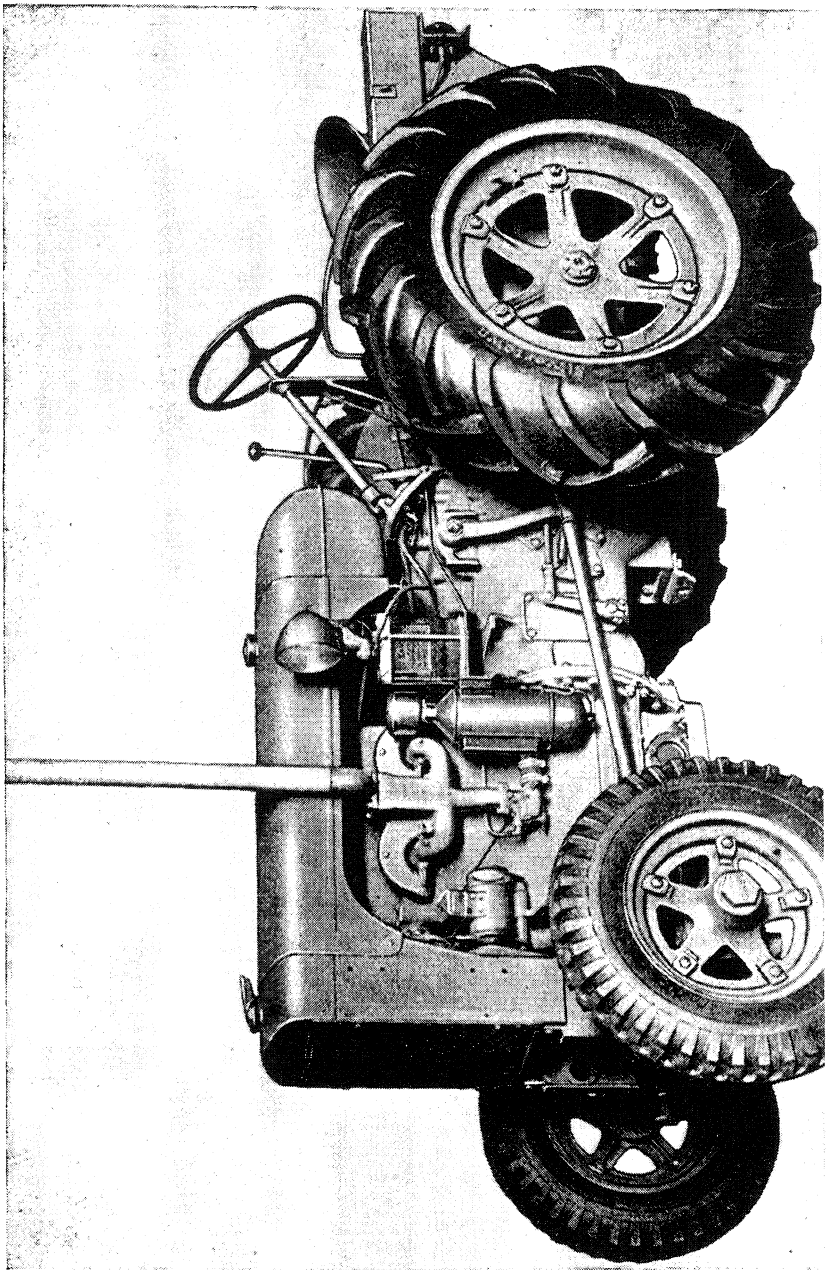

	Page No.
Oil Pump.....	17, 53
Oil Pump and Screen.....	17
Operating Instructions.....	7
Operation, Cold Weather.....	32
Operators Maintenance.....	21
Operator, Suggestions to the.....	35
Pistons and Connecting Rods.....	61
Piston Pins.....	62
Piston and Rings.....	61
Power Take-Off.....	16, 111
Power Take-Off, Installation.....	111
Radiator, Care of for Winter Operation.....	58
Radiator, Removing.....	60
Regulator.....	82
Rubber Tires.....	13, 29
Safety Rules.....	7
Service Suggestions.....	37, 38
Shaft, First Reduction.....	96
Shaft, Sliding Gear or Second Reduction.....	95
Spark Plugs.....	23
Spark Plugs and Ignition Cables.....	12
Specifications and Service Data.....	9
Spiral Bevel Gears, Adjustment of.....	94
Starting and Lighting Equipment.....	82
Starting Motor.....	82
Steering.....	105
Steering Column, Removing.....	107
Steering Gear Adjustment.....	107
Storage or Shipment Procedure.....	33
Table of Clearances and Tolerances.....	35, 36
Tires, Pneumatic.....	13, 29
Tractor, New, Preparing for Use.....	11
Tractor, Driving the.....	15
Tractor, Stopping.....	15
Transmission.....	92
Transmission Top Cover, Removing.....	92
Transmission and Differential.....	20
Transmission Oil Recommendation.....	20
Valves, Adjusting Clearance.....	55
Valves and Rocker Arms.....	55
Valve Seats, Reconditioning.....	56
Valve Springs.....	57
Valves and Valve Seats.....	56
Water Pump, Servicing.....	59
Weight Box and Traction.....	30
Wheel Bearings, Front.....	111

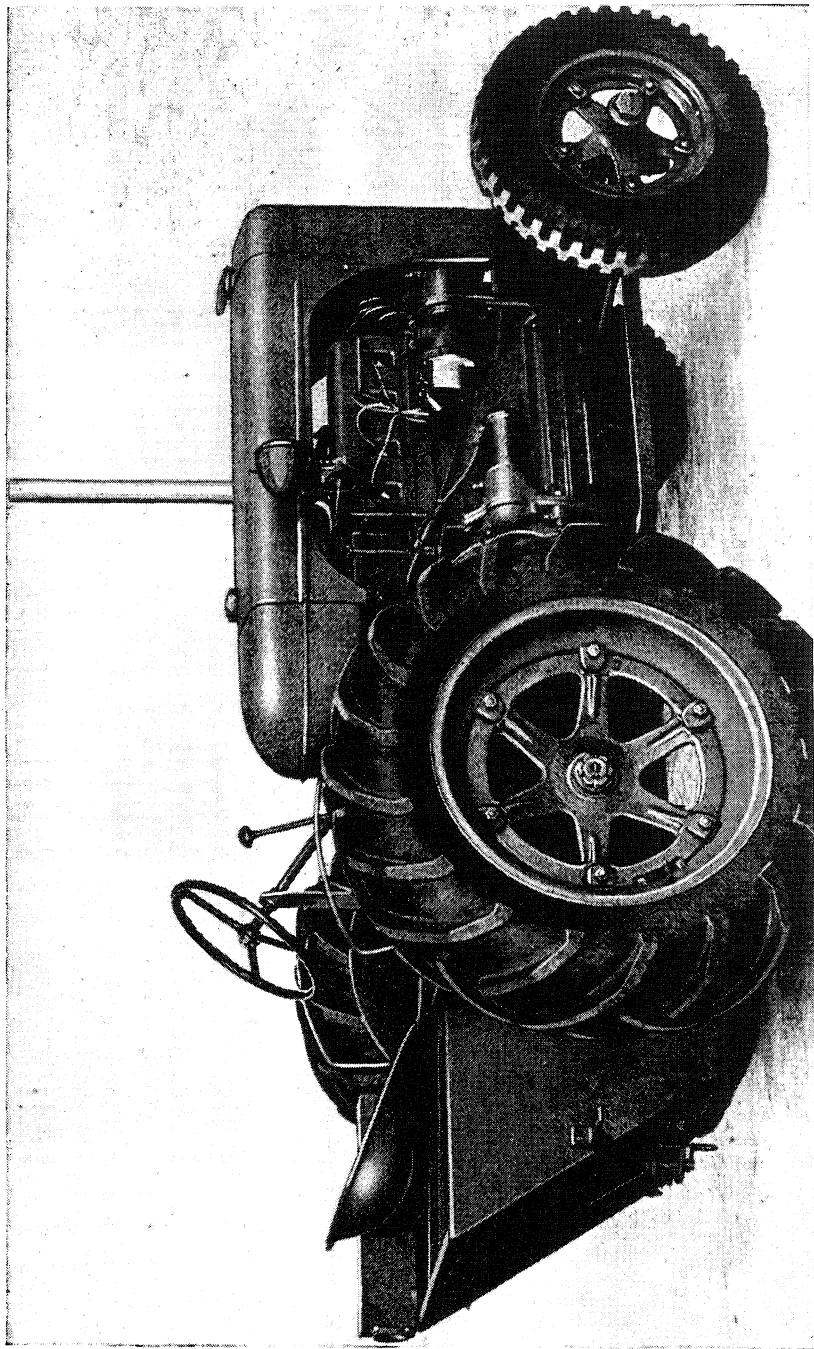

## Case Model "SI" Air Borne Tractor

	Fig. No.	Page No.
Air Cleaner, Details.....	23	47
Air Cleaner, Servicing.....	9	22
Axle and Spindle, Detail of Front.....	91	108
Battery, Storage—Servicing.....	6	14
Bearing Plate, Removing Magneto.....	61	79
Brake, Adjusting.....	13	28
Brakes, Details of.....	86	103
Brake, Removing to Replace Middle Ring.....	87	104
Breaker Arm, Checking for Free Operation.....	46	73
Breaker Arm, Removing.....	48	73
Carburetor Detail.....	20	43
Carburetor Float Level.....	21	44
Carburetor Section.....	19	43
Carburetor Service Tools.....	22	45
Carburetor, Servicing.....	9	22
Center Brush, Driving.....	67	82
Chains, Adjusting Drive.....	85	102
Clutch, Details of.....	69	86
Clutch and Drive Plate Assembly.....	74	92
Clutch Pedal, Free Movement of.....	12	26
Clutch Pedal Rod, Adjustment of.....	11	25
Clutch Brake and Crank.....	73	91
Coil, Pressing in Place.....	53	75
Coil, Pulling Magneto.....	51	75
Coil Bars, Interlocking Preparatory to Driving.....	52	75
Condenser, Removing.....	65	80
Contact Points, Stoning.....	49	74
Controls, Operating.....	5	12
Cylinder Barrels, Pulling.....	33	62
Cylinder Barrel Puller, Inserting.....	32	62
Cylinder Head, Removing.....	29	55
Differential, Removing.....	81	98
Distributor Cap, Removing.....	42	71
Distributor Cap, Removing Screw.....	41	71
Distributor Gear, Removing.....	43	72
Electrical System, Details of.....	68	83
Engine Crankshaft, Connecting Rods and Pistons, Details of.....	18	42
Engine, End View.....	16	40
Engine, Left Side.....	3	8
Engine, Right Side.....	4	10
Engine, Side View.....	17	41
Gear Shift Diagram.....	7	15
Governor and Magneto Assembly.....	24	49
Governor and Magneto Drive, Details.....	25	50
Impulse, Checking on Synchroscope.....	54	75
Impulse Coupling, Checking.....	60	78
Impulse Coupling, Pulling.....	59	78
Impulse Coupling, Removing Nut.....	58	77
Impulse Timing on Stop Pin Plate.....	55	76



**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)