

OPERATOR'S MANUAL

MANURE SPREADER

MS2334



HSMFG1212

5HPMSSD34

CONTENTS

Table of Contents	1
Warranty & Notes	2
Dealer Pre-Delivery Checklist	3
Delivery Checklist	5
Specifications	7
Be Alert Symbol	8
Explanation of Safety Signs	9
Danger - Warning Signs	10-11
Warning - Owner Must Read and Understand	12
Bolt Torque Chart	13
Set-Up & Assembly	14
Transporting	15
Storage	15
Preparing for Operation	16-17
Operation	18-23
Adjustments	24-25
Service	26-27
Optional Features & Accessories	28
Lubrication Guide	29-32
Troubleshooting Guide	33
Decal Location & Identification	34-36
Instructions for Ordering Parts - About Improvements	37
Parts	38-79
Service & Parts Notes	80

WARRANTY:

Warranty coverage is provided by John Deere according to the terms of the Agricultural/Commercial & Consumer Equipment Warranty Statement. Carefully read the warranty statement on the back of your original purchase order for details on coverage and limitations of this warranty.

NOTES

DEALER PRE-DELIVERY CHECK LIST

AFTER COMPLETION, DEALER SHOULD REMOVE AND RETAIN FOR RECORDS

After the Manure Spreader has been completely set-up, check to be certain it is in correct operating order before delivering to the customer. The following is a list of points to inspect. Check off each item as you have made the proper adjustments and found the item operating satisfactorily.

- Manure Spreader was not damaged in shipment. Check for dents and loose or missing parts. Report damage immediately to Frontier.
- All bolts and fasteners are tight.
- Manure Spreader has been correctly assembled according to instructions in this manual. Wheel nuts and all other fasteners are tightly secured.
- All grease fittings have been lubricated. Gearboxes are filled to proper levels if applicable. See Lubrication Chapter of this manual for details.
- Hoses and fittings are properly attached and there are no visible leaks.
- Guards and shields are secure.
- Wheels are properly mounted.
- Tires are inflated to correct pressure.
- Chains tension is properly adjusted. See Adjustment Chapter of this manual.
- Decals are in place and legible.

Connect the Manure Spreader onto a proper horsepower 540 RPM or 1000 RPM (if applicable) tractor and attach the PTO. Connect the lights. Run the Manure Spreader and make sure all components operate properly.

- PTO guard turns freely.
- Discharge door operates smoothly.
- Main Auger operates up and down smoothly.
- Hydraulic system does not leak under pressure.
- Lights and wiring functioning properly.
- Electronic Scale (if provided) operates properly.
- Implement and all components are functioning properly.

Inspection Date _____ Model Number _____

Serial Number _____

Dealer's Name _____

Signature of Pre-Delivery Inspector _____

DEALER DELIVERY CHECK LIST

AFTER COMPLETION, DEALER SHOULD REMOVE AND RETAIN FOR RECORDS

This check list that follows is an important reminder of valuable information that should be passed on to the customer at the time this machine is delivered.

Check off each item as you explain it to the customer.

This delivery check list, when properly filled out and signed assures the customer that the Pre-Delivery Service was satisfactorily performed.

- Explain to the customer that the Pre-Delivery Inspection was made.
- Explain to the customer all the safety precautions they must exercise when operating this unit.
- Explain to customer that regular lubrication is required for proper operation and long life of machine. Show customer the Lubrication Chapter of the Operator's Manual.
- Give the customer the Operator's Manual and make sure they read and understand all operating and service instructions.
- Record model and serial number on this page and page 38 of this Operators Manual.

Date Delivered _____

Dealer's Name _____

By _____

Signature of Original Buyer _____

(Remove Dealer File Copy At Perforation)

Buy Now



Our support email:

ebooklibonline@outlook.com