OPERATOR'S MANUAL

WHEEL RAKE

| <u>WR3108</u> | <u>WR3110</u> | <u>WR3112</u>





WR3108 Ser. #611001> WR3110 Ser. #612003> WR3112 Ser. #613001>

HSMFG01115 Rev. #00 5HPO59743

CONTENTS

Warranty Explanation	
Manufacturers Statement	2
Dealer Pre-Delivery Checklist	3
Delivery Checklist	5
Specifications	
Safety Information - Be Alert Symbol	8
Safety Information - Explanation of Safety Signs	9
Safety Decals	
Safety Information - Warning - Owner Must Read and Understand	12
Cap Screw Torque Value	13
Set-Up & Assembly	14
Transporting	
Preparing for Operation	16
Operation & Adjustments	17-19
Optional Equipment	20
Lubrication Guide	21-22
Decal Location	23-25
Troubleshooting Guide	26

WARRANTY

Warranty coverage is provided by John Deere according to the terms of the Agricultural/Commercial & Consumer Equipment Warranty Statement. Carefully read the statement on the back of your original purchase order for details on coverage and limitations of this warranty.

NOTES

MANUFACTURES STATEMENT

Your new Frontier Rake has been manufactured of the finest quality materials and components. The performance you get from your machine is largely dependent upon how well you read and understand this manual and apply this knowledge. There is a right and a wrong way to do everything. Please do not assume that you know how to operate and maintain your Rake before reading this manual carefully. Keep this manual available for ready reference.



Our support email: ebooklibonline@outlook.com