

Maximum

**MXM120
MXM130
MXM140
TRACTORS**

**SUPPLEMENT TO
OPERATORS MANUAL
PRINT No. 6-32931
(82998836)**

CASE III

Series MXM Operator's Manual Supplement

INTRODUCTION

This Supplement details new features that are available to enhance the specification of tractors in the Case MXM range.

The Supplement should be read in conjunction with the Operators Manual supplied with the tractor.

Read the Supplement carefully and keep it, together with the Operators Manual, in a convenient place for future reference.

If at any time you require advice concerning your tractor, do not hesitate to contact your authorised Case IH dealer. He has factory trained personnel, genuine parts and the necessary equipment to carry out all your service requirements.

The sections within this Supplement are numbered to match those of the Operators Manual. However, only those sections where changes have occurred will appear in the Supplement.

SECTION 2

Subject	Page
Cab and Platform Controls	2-2
Hand Throttle	2-4
Clutch/Inching Pedal	2-4
Analogue Instrument Panel	2-5
Indicator and Warning Lights	2-5
Transmission Display - Two-Speed Powershift	2-6
Groundspeed Calibration	2-7
Malfunction Warning Symbols	2-8
20 x 16 Synchro Shift Transmission	2-9
24 x 12 Two-Speed Powershift Transmission	2-14
Electronic Management Unit	2-22
Front and Rear Differential Lock	2-22
Four Wheel Drive	2-25

SECTION 3

Subject	Page
Starting the Engine	3-2
Stopping the Engine	3-3
Mechanical Lower Link Sensing Hydraulics	3-4
Remote Control Valves, Open Centre Type	3-10
Lift Rods, Lower Links and Top Link	3-17

SECTION 4

Subject	Page
Lubrication and Maintenance Chart	4-2
Recommended Fluids	4-2
When the Warning Lamp Lights	
Check Brake Fluid	4-3
Every 300 Hours	
Check Transmission and Hydraulic Oil Level	4-3
Every 600 Hours	
Change Transmission and Hydraulic Filters	4-4
Every 1200 Hours	
Change Transmission, Hydraulic Oil and Filters	4-5
General Maintenance When Required	
Two-Speed Powershift Transmission Clutch Calibration	4-6

SECTION 5

Subject	Page
Transmissions	
20 x 16 Synchro Shift	5-2
24 x 12 Two-Speed Powershift	5-3

SECTION 8

Subject	Page
Transmission options	
20 x 16 Synchro Shift	8-1
24 x 12 Two-Speed Powershift	8-1
Hydraulic System	
Open Centre System with Mechanical Lower Link Sensing	8-1
3-Speed Ground Drive P.T.O.	8-1
Fluid Capacities, Transmission/Rear Axle and Hydraulic System	8-2

SECTION 9

Subject	Page
Clutch master cylinder fluid level check	9-1, 9-3

SECTION 2

CONTROLS, INSTRUMENTS AND OPERATION

BEFORE OPERATING



Before driving or operating the tractor, study the safety precautions in Section 1 of the Operators Manual.

This supplement updates the information contained in your tractor Operators Manual and should be used in conjunction with that publication.


It may help if you identify the relevant sections and pages in the Operators Manual where the new information applies so you can be sure to consult the supplement wherever necessary.

As far as possible, the order in which the subjects appear in the supplement will follow that of the Operators Manual.

Do not start the engine or attempt to drive or operate the tractor until you are fully accustomed with all the controls. It is too late to learn once the tractor is moving. If in doubt about any aspect of operation of the tractor, consult your authorised dealer.

Subject	Page
Cab and Platform Controls	2-2
Hand Throttle	2-4
Clutch/Inching Pedal	2-4
Analogue Instrument Panel	2-5
Indicator and Warning Lights	2-5
Transmission Display - Two-Speed Powershift	2-6
Groundspeed Calibration	2-7
Malfunction Warning Symbols	2-8
20 x 16 Synchro Shift Transmission	2-9
24 x 12 Two-Speed Powershift Transmission	2-14
Electronic Management Unit	2-22
Front and Rear Differential Lock	2-22
Four Wheel Drive	2-25

CAB AND PLATFORM CONTROLS

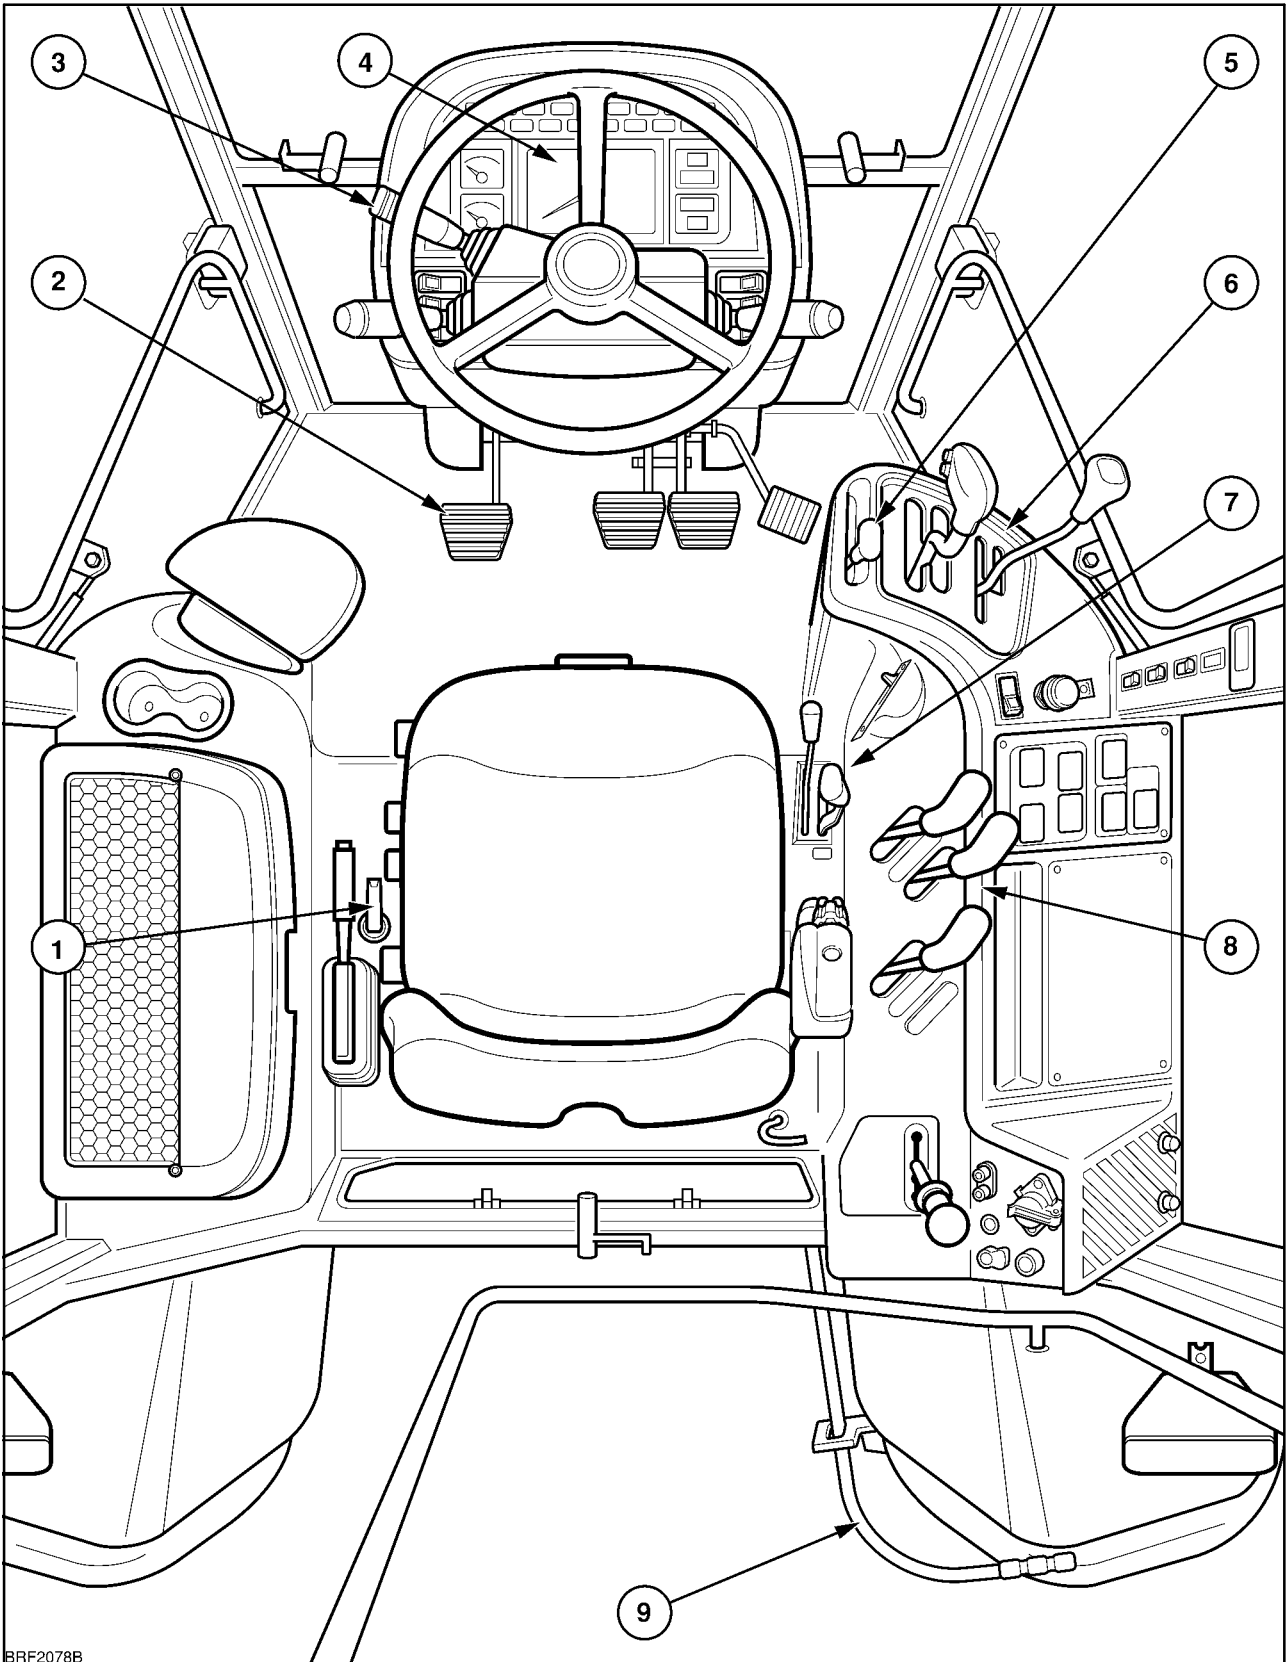

BRF2078B

1

General View of Tractor Controls - MXM120, MXM130 and MXM140

Key to Figure 1	Page Nos. for Reference
1. Creep speed selector	2-11, 2-17
2. Clutch/inching pedal	
Synchro Shift transmission	2-9
Two-Speed powershift transmission	2-14
3. Shuttle lever	
Synchro Shift transmission	2-10
Two-Speed powershift transmission	2-14
4. Instrument panel	
Analogue and analogue/digital instrument panel	2-5
5. Hand throttle	2-4
6. Transmission controls	
Synchro Shift transmission	2-9
Two-Speed powershift transmission	2-14
7. Hydraulics controls	
Mechanical lower link sensing	3-4
8. Remote control valve levers	
Open centre type	3-10
9. External hydraulic power lift control	3-9

Buy Now



Our support email:

ebooklibonline@outlook.com