




## OPERATOR'S MANUAL

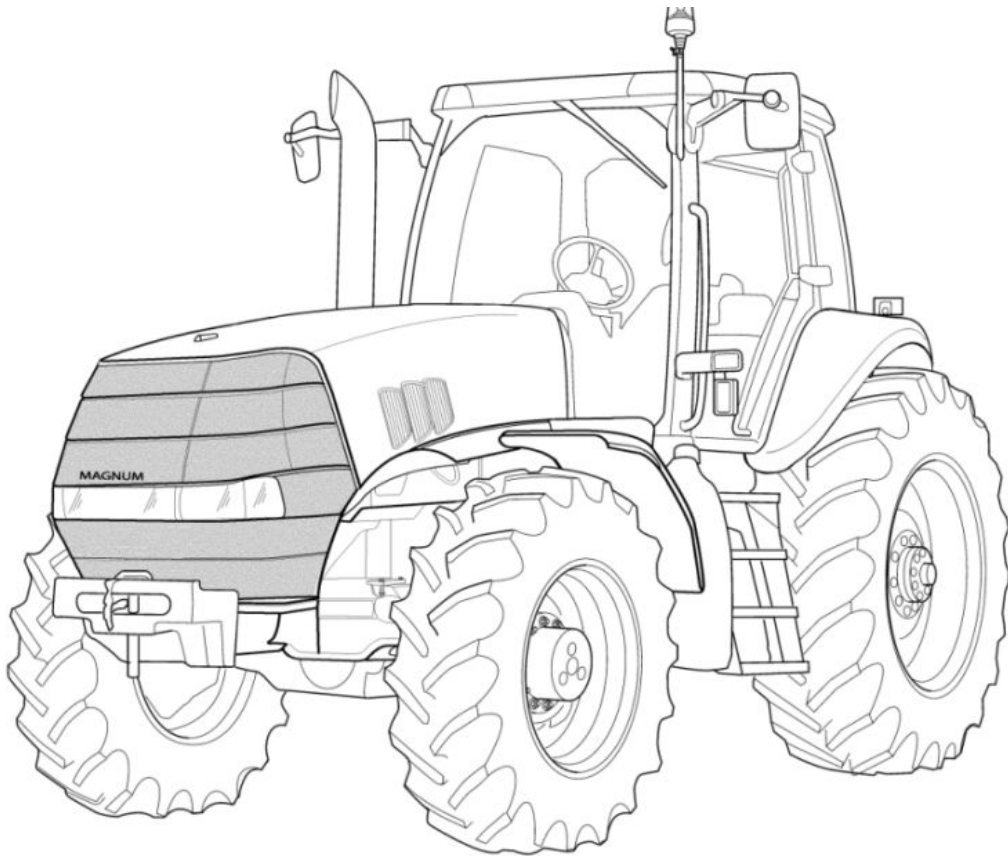

**Magnum 225**  
**Magnum 250**  
**Magnum 280**  
**Magnum 310**  
**Magnum 335**

# Contents

---

## 1 GENERAL INFORMATION

Safety rules .....	1-1
Read the Operators Manual .....	1-2
Product identification .....	1-3
Declaration of conformity .....	1-4
Tractor intended use.....	1-6
CNH America LLC technical manuals.....	1-7
Manual storage .....	1-8
Identification plates .....	1-9
Component location .....	1-11

## 2 SAFETY INFORMATION

Safety rules - General .....	2-1
Safety rules - Air conditioning system .....	2-1
Safety rules - Basic operating .....	2-2
Safety rules - Battery .....	2-2
Safety rules - Driving on public roads .....	2-3
Safety rules - Electrical storm safety .....	2-3
Safety rules - Fire prevention .....	2-4
Safety rules - General maintenance .....	2-4
Safety rules - Hazardous chemicals .....	2-5
Safety rules - Implements, tools and trailers .....	2-6
Safety rules - Instructional seat .....	2-6
Safety rules - Mounting and dismounting .....	2-7
Safety rules - Operator presence system .....	2-7
Safety rules - PTO operation .....	2-7
Safety rules - Roll over and tip over .....	2-8
Safety rules - Utility power lines .....	2-8
Safety rules - Vehicle vibration .....	2-10
Safety rules - Wheels and tires .....	2-11
ROPS and CSF.....	2-12
FOPS .....	2-13
Hazardous substances .....	2-14
Noise levels.....	2-15
Vehicle vibration levels .....	2-16
Fire extinguisher.....	2-17
Emergency exit .....	2-18
Wheel wedges.....	2-19
Safety decals .....	2-20

## 3 CONTROLS/INSTRUMENTS

### ACCESS TO OPERATOR'S PLATFORM

Tractor access.....	3-1
---------------------	-----

### OPERATOR'S SEAT

Overview .....	3-2
----------------	-----

### INSTRUCTOR'S SEAT

Overview .....	3-3
----------------	-----

---

## FORWARD CONTROLS

Steering column .....	3-4
Front console .....	3-7
Pedal controls .....	3-9

## LH SIDE CONTROLS

EMERGENCY BRAKE .....	3-11
-----------------------	------

## RH SIDE CONTROLS

Armrest console .....	3-12
Armrest compartment .....	3-20
Adjusting the armrest console .....	3-23

## REARWARD CONTROLS

Fender console .....	3-24
Automatic temperature controls .....	3-30
Automatic temperature control system .....	3-33
Ventilation .....	3-34

## OVERHEAD CONTROLS

Lamp controls .....	3-36
---------------------	------

## EXTERIOR CONTROLS

Rear fender controls .....	3-37
----------------------------	------

## INSTRUMENT CLUSTER

Overview .....	3-38
Gauges .....	3-39
Upper display .....	3-41
Keypad .....	3-43
Status and warning icons .....	3-45
Lower display .....	3-47
Display settings .....	3-67
Operator preferences .....	3-77
Icon legend .....	3-87

## 4 OPERATING INSTRUCTIONS

### COMMISSIONING THE UNIT

Before starting the engine .....	4-1
----------------------------------	-----

### STARTING THE UNIT

Normal engine starting .....	4-4
Cold temperature operation .....	4-7

### STOPPING THE UNIT

Stopping the engine .....	4-10
---------------------------	------

### MOVING THE UNIT

Powershift transmission .....	4-11
Transmission default gears .....	4-12
Setting default gears .....	4-16
Best practices for prolonged transmission life .....	4-19
Transmission disengages; neutral icon flashes .....	4-20
Automatic productivity management (APM) .....	4-21
Mechanical front drive (MFD) .....	4-28

---

Differential lock system .....	4-32
Suspended axle .....	4-35
Ride control .....	4-43
Constant engine speed .....	4-46
Electronic end of row system .....	4-48

## 5 TRANSPORT OPERATIONS

### ROAD TRANSPORT

Tractor warning lamps .....	5-1
Tractor warning lamps .....	5-2
Safe transport speed .....	5-3

### SHIPPING TRANSPORT

Securing the tractor for shipping .....	5-4
---	-----

### RECOVERY TRANSPORT

Safety rules .....	5-5
Towing the tractor .....	5-6

## 6 WORKING OPERATIONS

### GENERAL INFORMATION

Overview .....	6-1
----------------	-----

### REAR PTO

Safety rules .....	6-2
Connecting the PTO .....	6-6
Interchangeable PTO shaft .....	6-7
Reversible PTO shaft .....	6-13
PTO operation .....	6-15
PTO fender switch operation .....	6-19
Auto PTO operation .....	6-20

### THREE POINT HITCH

Identification .....	6-24
Link adjustment .....	6-25
Hitch high clearance adjustment .....	6-29
Hydraulic links .....	6-32
Sway limiter adjustment .....	6-33
Lower link block adjustment .....	6-34
Mechanical float adjustment .....	6-36
Hitch operation .....	6-37
Hitch remote switch operation .....	6-43
Position control operation .....	6-44
Load control operation .....	6-46
Slip control operation .....	6-48
Hitch set point .....	6-51

### FRONT HITCH

Overview .....	6-54
Hitch operation .....	6-56

### DRAWBARS AND TOWING ATTACHMENTS

Drawbar capacity/position .....	6-59
---------------------------------	------

---

Adjusting the drawbar .....	6-61
-----------------------------	------

## TRAILER HITCHES

Clevis and special drawbars .....	6-63
Automatic trailer hitch .....	6-65
Auto pickup hitch operation .....	6-68
Manual trailer hitch .....	6-70

## AUXILIARY POWER CONNECTIONS

Auxiliary power and lighting .....	6-72
Cab power connections .....	6-74

## HYDRAULIC REMOTE CONTROL VALVES

Valve couplers and connections .....	6-76
Motor return circuit .....	6-79
Power beyond circuit .....	6-80
Overview .....	6-82
Operating the controls .....	6-83
Changing the functional mode .....	6-86
Remote hydraulic auto mode .....	6-90
Auto depth control .....	6-93

## BALLASTING THE TRACTOR

Guidelines .....	6-96
Tire load and inflation charts .....	6-100
Weights, cast metal and liquid .....	6-101
Wheel slip and power hop performance .....	6-108

## MECHANICAL FRONT DRIVE (MFD) AXLES

Tire combinations and tread positions .....	6-111
Steering and oscillation stops .....	6-116
Tread and fender settings - standard MFD axles .....	6-118
Tread and fender settings - saddle suspension axles .....	6-125
Tread and fender settings - heavy duty and 3 meter axles .....	6-133

## REAR AXLE

Rear wheel installation .....	6-141
Rear wheel tread settings .....	6-143

## 7 MAINTENANCE

### GENERAL INFORMATION

Safety rules .....	7-1
Opening the hood .....	7-2
Battery disconnect switch .....	7-4
Battery access and service .....	7-4
Tire and rim service .....	7-5
Tractor jacking points .....	7-7
Capacities .....	7-9
Consumables .....	7-11
Electrical component location .....	7-15
Electrical system specification .....	7-19
Maintenance chart notes .....	7-20

### MAINTENANCE CHART

Maintenance Chart .....	7-20
-------------------------	------

---

## At warning message display

Air filter service icon/message .....	7-23
---------------------------------------	------

## First 10 to 50 hours

Differential and planetary oil .....	7-24
Wheel bolt torque .....	7-24
Weight bolt torque .....	7-24

## Every 10 hours or daily

Engine oil level .....	7-25
Transmission oil level .....	7-26
Engine coolant level .....	7-27
Engine auxiliary fuel filter .....	7-28
Air reservoir - Drain fluid .....	7-28
Rear hitch and front axle .....	7-28

## Every 50 hours

Engine primary fuel filter .....	7-29
----------------------------------	------

## Every 300 hours

Battery water level (Note E) .....	7-30
Engine air intake hoses .....	7-31
Engine coolant level - deaeration tank .....	7-32
Engine oil and filter .....	7-33
Wheel bolt torque .....	7-35
Weight bolt torque .....	7-35
Front axle (Note A) .....	7-36
Rear hitch (Note A) .....	7-43
Fuel tank .....	7-45
Differential and planetary oil level (Note B) .....	7-46
Transmission oil pressure oil pressure .....	7-48
Reversible 1000 RPM PTO shaft (Note D) .....	7-49

## Every 600 hours

Engine coolant antifreeze protection .....	7-50
Engine coolant filter .....	7-51
Engine coolant hoses and clamps .....	7-52
Engine primary fuel filter .....	7-53
Changeable PTO internal splines .....	7-55

## Every 1200 hours or annually

Differential and planetary oil .....	7-56
Engine air filters .....	7-60
Engine air precleaner .....	7-64

## Every 1500 hours

Transmission oil .....	7-65
Transmission oil filter .....	7-67
Regulated transmission filter .....	7-68

## Every 2100 hours

Engine coolant .....	7-69
----------------------	------

---

Fuel injector nozzles (Note C).....	7-72
Engine valve adjustment (Note C).....	7-72

## Every 3000 hours

Engine vibration damper (Note C).....	7-73
Emergency steering system.....	7-74

## As required

Vehicle fire prevention.....	7-76
Cab air filter.....	7-77
Engine primary air filter.....	7-80
Grille screen and radiator area.....	7-83
Fuel tank vent filter.....	7-85
Transmission clutch and accumulator.....	7-85
Tire pressure.....	7-85
Fan belt.....	7-86
Spark arresting muffler.....	7-87
Remote valve collection bottle.....	7-88
Emergency brake lever.....	7-89
Engine auxiliary fuel filter.....	7-90
Cab fabric and carpet.....	7-92
Seat belt.....	7-93

## STORAGE

Tractor storage.....	7-94
Removal from storage.....	7-94

## ELECTRICAL SYSTEM

Radio or audio system.....	7-95
Battery removal and installation.....	7-96
Auxiliary battery connections.....	7-98
Head light - Replace.....	7-99
Flood and work light.....	7-105
Fender tail light and warning light.....	7-107
Roof front warning and work light.....	7-109
Roof rear warning light.....	7-112
High intensity work light.....	7-114
Side turn indicator light.....	7-116
Rotating beacon light.....	7-118
Number plate light.....	7-119
Interior light - Replace.....	7-120

## 8 TROUBLESHOOTING

### ALARM(S)

Display warnings.....	8-1
-----------------------	-----

## 9 SPECIFICATIONS

ENGINE - General specification.....	9-1
POWER TRAIN - General specification.....	9-3
TRAVELLING - Speeds.....	9-6
Vehicle dimensions and shipping weight.....	9-15
Maximum operating weight.....	9-17

---

## 10 ACCESSORIES

Front wheel fenders .....	10-1
Farming system displays .....	10-7
Chemical tank mounting.....	10-10
Loader connection and operation .....	10-12
Trailer brake connections.....	10-13
General accessories.....	10-18

---



# 1 - GENERAL INFORMATION

## Safety rules

### PRECAUTIONARY STATEMENTS

#### Personal Safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

Throughout this manual and on vehicle decals, you will find signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you. Please take the time to read them.



**DANGER** indicates a hazardous situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.

M1169A



**WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.

M1170A



**CAUTION**, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. The color associated with Caution is YELLOW.

M1171A

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION INSTRUCTIONS COULD RESULT IN DEATH OR SERIOUS INJURY.

#### MACHINE SAFETY

**NOTICE:** NOTICE is used to address practices not related to personal safety.

The word NOTICE is intended for machine and property safety. It is used throughout this manual followed by specific instructions to prevent machine or property damage. Failure to follow NOTICE messages could result in machine or property damage.

#### INFORMATION

**NOTE:** Instructions that clarify steps, procedures, or other information in this manual.

## Read the Operators Manual




Improper operation of this vehicle can cause death or serious injury. Before using the vehicle, make certain that every operator:

- Is instructed in safe and proper use of the machine.
- Reads and understands the manual(s) pertaining to the machine.
- Reads and understands all safety decals on the machine.

- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow CNH America LLC instructions on machine operation and maintenance.

## Product identification

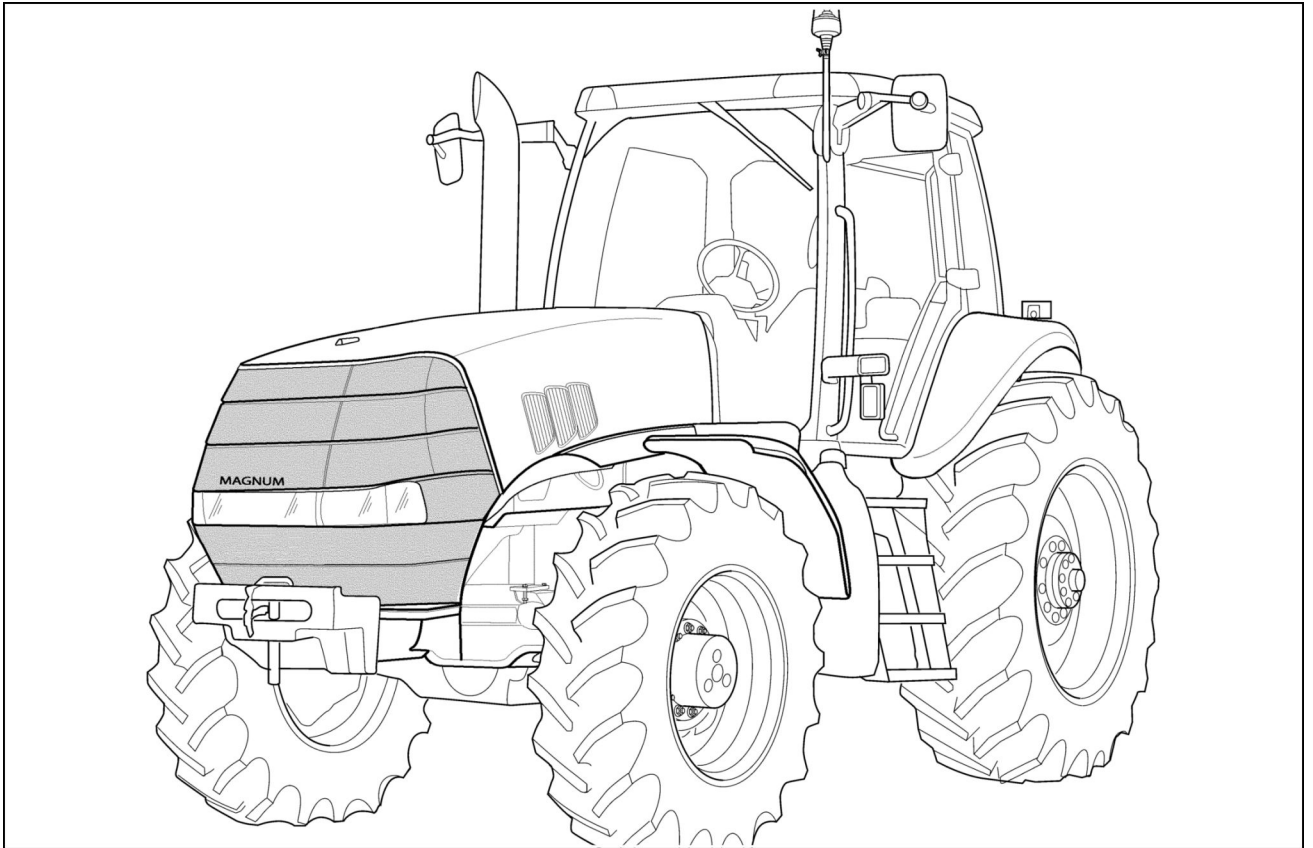


RCPH08CCH006FAB 1





CNH America LLC  
Racine, WI  
U.S.A.

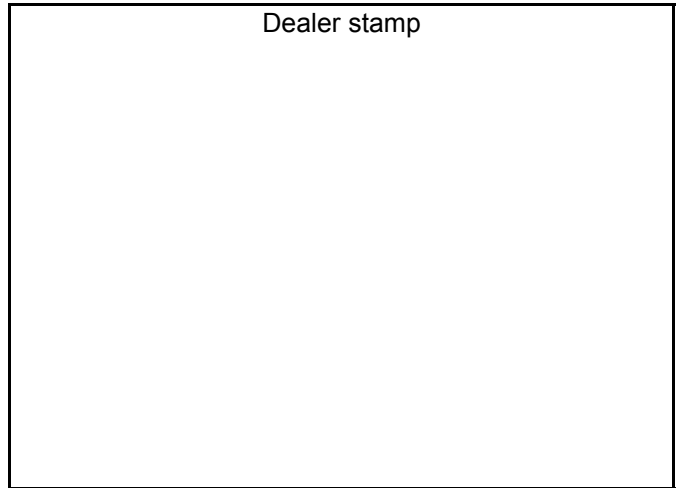Dealer stamp





<p>Clause of 2006/42/EC Annex II</p>	<p align="center"><b>EC Declaration of conformity</b> According to Directive 2006/42/EC.</p>	<p align="right">                   CNH America LLC                  Racine WI 53404                  (U.S.A.)             </p>
<p>1.A.1</p>	<p>We, [1]</p>	<p>[2] CASE IH.....</p>
<p>1.A.2</p>	<p>Represented by Giuseppe Gavioli, CNH Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg</p>	<p>[3] .....</p> <p>[4] .....</p> <p>[5] .....</p>
<p>1.A.3</p>	<p>declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]</p>	
<p>1.A.4</p>	<p>to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6].</p>	<p>[6] .....</p>
<p>1.A.7</p>	<p>For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied:</p> <ul style="list-style-type: none"> <li>• ISO 26322-1 part 1 or 2</li> </ul> <p>Other standards: see Operators Manual.</p>	<p>[7] Luxembourg.....</p>
<p>1.A.9</p>	<p>Place and date of the declaration: [7]</p>	
<p>1.A.10</p>	<p>Name and signature of the authorised person: [8]</p>	<p>[8]  Giuseppe Gavioli</p>

RCIL09CCH801HAA 2

The original text of the declaration is reproduced here with some notes to assist your understanding. The health and safety related standards which apply to your vehicle are summarized below:

- Tractor safety is compliant with ISO 26322-1.
- The cab ROPS (rollover protection system) is certified to EN 15694.
- The cab FOPS (falling object protection system) is certified to OECD code 10.

- Cab is certified category 2 according to EN 15695-1.
- Noise emission levels are rated according to 77/311/EEC and 74/151/EEC.

**NOTE:** Refer to the relevant sections in chapter 2 for additional information.

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)