

PUMA 130 CVX
PUMA 145 CVX
PUMA 160 CVX
Tractors

OPERATOR'S MANUAL

Part Number 84345369

1st edition English
November 2010

CASE II
AGRICULTURE

ORIGINAL INSTRUCTIONS

- according to Directives 2006/42/EC, Annex I 1.7.4.1

PUMA 130 CVX **PUMA 145 CVX** **PUMA 160 CVX** Tractors

OPERATOR'S MANUAL

Part Number 84345369

1st edition English
November 2010



Contents

1 GENERAL INFORMATION

CE DECLARATION OF CONFORMITY	1-1
METRIC AND IMPERIAL UNITS ABBREVIATIONS	1-3
TO THE OWNER	1-5
PRODUCT IDENTIFICATION	1-7
ENGINE IDENTIFICATION	1-8
DRIVELINE IDENTIFICATION	1-9
CAB IDENTIFICATION	1-9
PRODUCT IDENTIFICATION PLATE	1-9
ECOLOGY AND THE ENVIRONMENT	1-10
NOISE LEVEL	1-11
PROGRAMMING TRACTOR FUNCTIONS	1-11
BEFORE OPERATING THE TRACTOR	1-12
INTERNATIONAL SYMBOLS	1-13
VIBRATION LEVEL INFORMATION SHEET	1-14
MACHINE STABILITY	1-15
INSTRUCTOR'S SEAT	1-19
SELECTIVE CATALYTIC REDUCTION (SCR) SYSTEM	1-20

2 SAFETY INFORMATION

SAFETY DECALS	2-1
SAFETY PRECAUTIONS	2-9
BEFORE DRIVING THE TRACTOR	2-10
DRIVING THE TRACTOR	2-11
OPERATING THE TRACTOR	2-12
OPERATING THE P.T.O.	2-14
OPERATING THE EXTERNAL CONTROLS	2-14
SERVICING THE TRACTOR	2-15
DIESEL FUEL	2-17
PREVENTION OF FIRE OR EXPLOSION	2-18
FIRE EXTINGUISHER	2-19
PROTECTION OFFERED BY THE TRACTOR	2-20
INTENDED USE STATEMENT	2-23

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

INTRODUCTION	3-1
CAB AIR FILTERS	3-5
IN CAB STORAGE (where fitted)	3-6
CABLE AND WIRING ROUTING	3-7
MOBILE TELEPHONE USAGE	3-7
IMPLEMENT MONITOR INSTALLATION	3-8
CAB AIR PRESSURISATION MONITOR (where fitted)	3-8

OPERATOR'S SEAT

AIR SUSPENSION SEAT DELUXE	3-10
SEAT BELT	3-15

INSTRUCTOR'S SEAT

INSTRUCTIONAL SEAT (where fitted)	3-16
---	------

FORWARD CONTROLS

KEY- START SWITCH	3-17
HAZARD WARNING LIGHT SWITCH	3-17
LIGHT-/ TURN LEVER	3-18
FOLLOW ME HOME LIGHTS	3-18
WINDSHIELD WIPER AND WASHER CONTROLS	3-19
ELECTRONIC PARK BRAKE	3-20
CLUTCH/ INCHING PEDAL	3-24
FOOT BRAKES	3-24
EXHAUST BRAKE (where fitted)	3-25
STEERING COLUMN	3-26

LEFT-HAND SIDE CONTROLS

HANDBRAKE	3-27
-----------------	------

RIGHT-HAND SIDE CONTROLS

INTEGRATED CONTROL PANEL	3-28
--------------------------------	------

REARWARD CONTROLS

SWITCH PANEL C- PILLAR	3-29
HYDRAULIC MASTER SWITCH	3-30
HEATED SCREENS (where fitted)	3-31
FAST STEERING SYSTEM (where fitted)	3-32
BATTERY ISOLATOR SWITCH	3-34
CLIMATE CONTROLS	3-35
MANUAL TEMPERATURE CONTROL	3-37
AUTOMATIC TEMPERATURE CONTROL (ATC)	3-38

OVERHEAD CONTROLS

SWITCH PANEL WORKLIGHTS	3-40
RADIO/CASSETTE/CD PLAYER (where fitted)	3-40
INTERIOR LIGHT	3-41

INSTRUMENT CLUSTER

INTEGRATED CONTROL UNIT	3-42
GAUGES	3-42
INDICATOR AND WARNING LIGHTS	3-43
DISPLAYS	3-46
KEYPAD BASIC	3-47
KEYPAD ENHANCED	3-48
SELECTING OR CHANGING THE DISPLAY SETTINGS	3-50
ADJUST MENU	3-51
CONFIGURE MENU	3-53
PERFORMANCE MONITOR	3-57
ARMREST COLOUR DISPLAY	3-61
POP- UP SCREENS ON COLOUR DISPLAY	3-63
PERFORMANCE MONITOR ON COLOUR DISPLAY	3-69
PROGRAMMING THE DISPLAYS	3-72
ALARM FUNCTIONS	3-75
ACCESSING STORED ERROR CODES	3-77

WARNING AND ADVISORY SYMBOLS	3-78
------------------------------------	------

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

TRACTOR REFUELLING	4-1
--------------------------	-----

STARTING THE UNIT

STARTING THE ENGINE	4-3
GRID HEATER COLD START AID (where fitted)	4-4
FUEL HEATER (where fitted)	4-4
COOLANT IMMERSION HEATER (where fitted)	4-5
TRANSMISSION OIL HEATER (where fitted).....	4-6
BOOSTING THE BATTERY	4-7

STOPPING THE UNIT

STOPPING THE ENGINE.....	4-8
AUTOMATIC ENGINE SHUTDOWN	4-8
AUTOMATIC ENGINE SHUTDOWN WITH ENHANCED KEYPAD (where fitted)	4-9

MOVING THE UNIT

OPERATING IN COLD TEMPERATURES	4-10
REVERSIBLE ENGINE FAN	4-11

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

CARRYING THE TRACTOR ON A TRANSPORTER	5-1
SECURE THE HIGH VISIBILITY ROOF PANEL	5-1

RECOVERY TRANSPORT

TOWING THE TRACTOR	5-2
--------------------------	-----

6 WORKING OPERATIONS

GENERAL INFORMATION

VARIABLE ENGINE POWER MANAGEMENT	6-1
CONSTANT ENGINE SPEED	6-3
DIFFERENTIAL LOCK	6-6
FOUR WHEEL DRIVE	6-8
FRONT AXLE SUSPENSION (where fitted)	6-10
AUTOMATED HEADLAND FUNCTIONS	6-11
QUICK GUIDE.....	6-11
RECORDING AND RE-PLAYING	6-13
EXPLANATION OF SYMBOLS.....	6-16
RECORDING A SEQUENCE	6-17
RE-PLAYING A SEQUENCE.....	6-22
DELETING A SEQUENCE	6-26

TRANSMISSION

TRANSMISSION OPERATION.....	6-27
DRIVE PEDAL.....	6-27
ENGINE SPEED CONTROL.....	6-28
SHUTTLE LEVER.....	6-30
SPEED MATCHING.....	6-31
TRANSMISSION CONTROLS.....	6-32
PROGRAMME THE MAXIMUM SPEED.....	6-34
STATIONARY CONTROL.....	6-35
ANTI JACK KNIFE.....	6-36
TRANSMISSION DISPLAY.....	6-37
MANUAL MODE.....	6-38
AUTOMATIC MODE.....	6-39
ERROR CODES.....	6-40

REAR POWER TAKE-OFF

P.T.O. OPERATING PRECAUTIONS.....	6-41
CHANGING THE P.T.O. OUTPUT SHAFT.....	6-41
ATTACHING P.T.O. DRIVEN EQUIPMENT.....	6-42
P.T.O. OPERATION.....	6-43
THREE-SPEED P.T.O. SYSTEM.....	6-48
GROUND DRIVE P.T.O. (where fitted).....	6-49
EXTERNAL P.T.O. CONTROLS.....	6-50
AUTO P.T.O. OPERATION.....	6-52

FRONT POWER TAKE OFF

P.T.O. OPERATION.....	6-55
-----------------------	------

REAR HITCH

ELECTRONIC DRAFT CONTROL.....	6-57
SETTINGS AND DISPLAY.....	6-61
ELECTRONIC DRAFT CONTROL OPERATION.....	6-63
EXTERNAL HITCH CONTROLS.....	6-69

FRONT HITCH

SETTINGS AND ADJUSTMENTS.....	6-71
HITCH OPERATION.....	6-74
AUXILIARY FRONT COUPLERS (where fitted).....	6-79
EXTERNAL HITCH CONTROLS.....	6-81

HYDRAULIC REMOTE CONTROL VALVES

REMOTE CONTROL VALVES.....	6-82
OPERATING WITH REMOTE VALVES.....	6-84
CONNECTING REMOTE CYLINDERS.....	6-88
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT.....	6-90

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

REMOTE CONTROL VALVES.....	6-92
SETTINGS AND ADJUSTMENTS.....	6-99
SETTING THE REMOTE VALVE PRIORITY.....	6-105

CREATING TIMER PROGRAMMES	6-107
CONNECTING REMOTE CYLINDERS	6-114
OPERATING WITH REMOTE VALVES	6-116
JOYSTICK OPERATION WITH A FRONT LOADER.....	6-118
MID MOUNT REMOTE VALVES	6-120
EXTERNAL EHR CONTROLS	6-122
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT	6-123

HYDRAULIC POWER BEYOND PORT

HYDRAULIC POWER BEYOND FOR EXTERNAL SERVICES	6-125
--	-------

THREE POINT HITCH

ATTACHING THREE-POINT HITCH EQUIPMENT	6-128
LIFT ROD ADJUSTMENT	6-130
TOP LINK ADJUSTMENT	6-132
FLEXIBLE LINK END ADJUSTMENT	6-133
QUICK HITCH	6-134
LINKAGE STABILISER ADJUSTMENT	6-136

DRAWBARS AND TOWING ATTACHMENTS

DRAWBARS AND TOWING ATTACHMENTS	6-139
SWINGING DRAWBARS.....	6-142
AUTOMATIC PICK-UP HITCH	6-145
REAR TOW HITCH.....	6-147

TRAILER BRAKING SYSTEMS

AIR-OPERATED TRAILER BRAKES	6-153
AIR-OPERATED TRAILER BRAKES (Italy only).....	6-156
TRAILER BRAKE BIAS CONTROL	6-157
AUXILIARY AIR SUPPLY CONNECTOR (where fitted).....	6-157
HYDRAULIC TRAILER BRAKES	6-158
HYDRAULIC TRAILER BRAKES (Italy only).....	6-159

WHEEL TRACK ADJUSTMENT

FRONT WHEEL TRACK ADJUSTMENT	6-160
FRONT WHEEL ALIGNMENT	6-163
STEERING STOPS	6-164
FRONT AXLE OSCILLATION STOPS	6-164
FRONT FENDER.....	6-165
REAR WHEEL TRACK ADJUSTMENT	6-167
FLANGE TYPE AXLE (where fitted)	6-167
BAR TYPE AXLE (where fitted)	6-170

BALLASTING AND TYRES

BALLASTING AND TYRES	6-174
IRON WEIGHTS (where fitted)	6-177
LIQUID BALLAST	6-180
TYRE INFLATION	6-182
TYRE PRESSURES AND PERMISSIBLE LOADS	6-183

AUXILIARY POWER CONNECTIONS

DIAGNOSTIC SOCKET	6-185
TRAILER SOCKET ELECTRICAL	6-185
ELECTRICAL POWER CONNECTORS	6-186
INTERNAL POWER CONNECTORS	6-186
EXTERNAL POWER CONNECTORS	6-188

7 MAINTENANCE

GENERAL INFORMATION

INTRODUCTION	7-1
FUEL REQUIREMENT	7-2
BIODIESEL FUEL	7-4
ENGINE OIL CHANGE	7-6
PROTECTIVE DEVICES	7-7
LUBRICANTS AND COOLANTS Lubrications and Coolants	7-9
General specification	7-11
CAPACITIES	7-12

MAINTENANCE CHART

Maintenance Chart	7-13
-------------------------	------

WHEN THE WARNING LAMP LIGHTS

CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT	7-15
DRAIN FUEL SYSTEM WATER SEPARATOR	7-16
CHECK BRAKE FLUID LEVEL	7-17

EVERY 10 HOURS OR EACH DAY

CHECK ENGINE COOLANT LEVEL	7-18
CHECK ENGINE OIL LEVEL	7-19
CHECK REMOTE CONTROL VALVE DRAIN BOTTLES	7-19
CHECK WINDSCREEN WASHER RESERVOIR	7-20
DRAIN AIR RESERVOIR ON AIR OPERATED TRAILER BRAKE	7-20

FIRST 50 HOURS

SERVICE OPERATIONS	7-21
--------------------------	------

EVERY 50 HOURS

CLEAN THE CAB AIR FILTER	7-22
CLEAN THE COOLER SECTION	7-24
ALL GREASE FITTINGS	7-25
CHECK FRONT AND REAR WHEEL NUTS	7-31
CHECK TYRE PRESSURES AND TYRE CONDITION	7-31

EVERY 100 HOURS

INSPECT POLY V-BELT	7-32
INSPECT COMPRESSOR DRIVE BELT	7-32

EVERY 300 HOURS

CHECK BATTERY FLUID LEVEL.....	7-33
ADJUST HANDBRAKE.....	7-34
CHECK TRANSMISSION/REAR AXLE AND HYDRAULIC OIL LEVEL.....	7-35
CHECK 4WD FRONT AXLE DIFFERENTIAL AND HUBS OIL LEVEL.....	7-36
CHECK FRONT P.T.O. GEARBOX OIL LEVEL.....	7-36

EVERY 600 HOURS

CHANGE ENGINE OIL AND FILTER.....	7-37
CHANGE FUEL PRE-FILTER AND FUEL FILTER ELEMENT.....	7-39
CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT.....	7-40
CHANGE CHARGE PUMP AND GEAR PUMP OIL FILTER.....	7-41
CHECK ENGINE AIR INTAKE CONNECTIONS.....	7-42
CHECK TRANSMISSION OIL COOLER PIPE COUPLINGS.....	7-43
CHANGE DEF/ AdBlue FILTER.....	7-43

EVERY 1200 HOURS OR ANNUALLY

CHANGE CAB AIR FILTERS.....	7-44
CHANGE MAIN OIL FILTER CARTRIDGE.....	7-45
CHANGE TRANSMISSION/ REAR AXLE AND HYDRAULIC OIL.....	7-46
CHANGE 4WD DIFFERENTIAL OIL.....	7-47
CHANGE 4WD PLANETARY HUB OIL.....	7-48
CHANGE FRONT P.T.O. GEARBOX OIL.....	7-48

EVERY 1200 HOURS OR EVERY 2 YEARS

CHECK BATTERY FLUID LEVEL.....	7-49
CHANGE DEF/ AdBlue FILTER.....	7-50
CHANGE ENGINE AIR CLEANER INNER ELEMENT.....	7-51
CHANGE ENGINE BREATHER FILTER.....	7-52
CHECK VALVE TAPPET CLEARANCE.....	7-52
CHANGE ENGINE COOLANT FLUID.....	7-53
CHANGE AIR BRAKE DRIER RESERVOIR.....	7-57
CHANGE POLY V-BELTS.....	7-58

EVERY 36 MONTHS

SERVICE THE AIR CONDITIONER SYSTEM.....	7-60
CHECK BATTERY FLUID LEVEL.....	7-61

GENERAL MAINTENANCE

CLEANING THE TRACTOR.....	7-63
FUEL SYSTEM PRE- FILTER AND WATER TRAP.....	7-65
BLEEDING THE FUEL INJECTION SYSTEM.....	7-65
CHECK BRAKE PEDAL LATCHING/UNLATCHING.....	7-66
ADJUST CAB SUSPENSION (where fitted).....	7-67
ADJUST AUTOMATIC PICK- UP HITCH.....	7-68
HEADLIGHT AND WORKLAMP ADJUSTMENT.....	7-69
BULB REPLACEMENT.....	7-70
FUSES AND RELAYS.....	7-74
PROTECTING THE ELECTRONIC AND ELECTRICAL SYSTEMS DURING BATTERY CHARGING OR WELDING.....	7-79
BATTERY REMOVAL AND INSTALLATION.....	7-80

STORAGE

TRACTOR STORAGE.....	7-81
PREPARATION FOR USE AFTER STORAGE	7-81

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

INTRODUCTION	8-1
--------------------	-----

ALARM(S)

FAULT CODES AND SYMBOLS	8-2
-------------------------------	-----

SYMPTOM(S)

ENGINE	8-4
TRANSMISSION	8-5
HYDRAULICS	8-5
THREE POINT HITCH	8-6
BRAKES.....	8-6
CAB.....	8-7
ELECTRICAL SYSTEM	8-7

9 SPECIFICATIONS

GENERAL DIMENSIONS	9-1
MAXIMUM OPERATING ANGLE	9-4
TYPICAL OPERATING WEIGHTS	9-5
CAPACITIES	9-6
ENGINE	9-7
FUEL SYSTEM.....	9-7
AIR CLEANER SYSTEM	9-8
COOLING SYSTEM.....	9-8
TRANSMISSION	9-8
REAR POWER TAKE-OFF.....	9-9
FRONT POWER TAKE OFF	9-9
HYDRAULIC SYSTEM	9-10
THREE POINT HITCH	9-10
REMOTE CONTROL VALVES	9-12
THREE POINT HITCH FRONT	9-12
FRONT REMOTE VALVE COUPLERS	9-12
BRAKES.....	9-13
STEERING	9-13
ELECTRICAL EQUIPMENT.....	9-14
MINIMUM HARDWARE TIGHTENING TORQUES	9-15

10 ACCESSORIES

EXTERNAL REAR VIEW MIRRORS.....	10-1
AUXILIARY HEADLIGHTS	10-1

11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy	11-1
--	------

Service record 1st 50 hour, Dealer copy 11-3



For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes.

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, [1]
1.A.2	Represented by Guiseppe Gavioli CNH Europe Holding S.A. 13, Rue Aldringen L- 1118 Luxembourg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6]
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: [7]
1.A.10	Name and signature of the authorised person: [8]

HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- ROPS PROTECTION is certified according to **EN 15694**.
- FOPS level on your tractor cab is certified according to **OECD Code 10**.
- HVAC (Heating, ventilation Air Conditioning) CAB is certified Category 1 according to **EN 15695-1**.
- HV (Heating, ventilation) cab is certified Category 1 according to **EN 15695-1**.
- NOISE EMISSION LEVELS are rated according to **77/311/EC**.
- VIBRATION LEVELS are rated according to **78/764/EEC**.

NOTE: See safety section 2 in this manual for further explanation and details on above mentioned standards and specific terminology.

Buy Now



Our support email:

ebooklibonline@outlook.com