

ORIGINAL INSTRUCTIONS - according to Directives 2006/42/EC, Annex I 1.7.4.1

OPERATOR'S MANUAL

T7.170


T7.185

T7.200

T7.210

Sidewinder II™

Range Command / Power Command Tractors

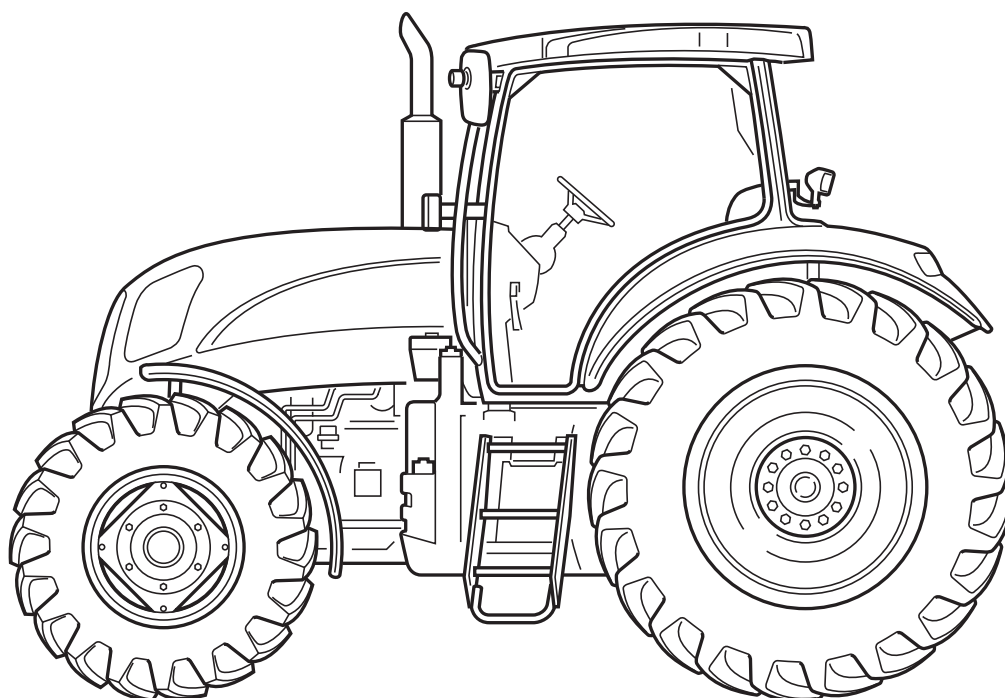

Part Number 84411301

1st edition English
March 2011



Contents

1 GENERAL INFORMATION

CE DECLARATION OF CONFORMITY	1-1
METRIC AND IMPERIAL UNITS ABBREVIATIONS	1-3
TO THE OWNER	1-5
PRODUCT IDENTIFICATION	1-7
ENGINE IDENTIFICATION	1-8
DRIVELINE IDENTIFICATION	1-9
CAB IDENTIFICATION	1-10
PRODUCT IDENTIFICATION PLATE	1-10
ECOLOGY AND THE ENVIRONMENT	1-11
NOISE LEVEL	1-12
PROGRAMMING TRACTOR FUNCTIONS	1-12
BEFORE OPERATING THE TRACTOR	1-13
INTERNATIONAL SYMBOLS	1-14
VIBRATION LEVEL INFORMATION SHEET	1-15
MACHINE STABILITY	1-16
INSTRUCTOR'S SEAT	1-20
SELECTIVE CATALYTIC REDUCTION (SCR) SYSTEM	1-21

2 SAFETY INFORMATION

SAFETY DECALS	2-1
SAFETY PRECAUTIONS	2-9
BEFORE DRIVING THE TRACTOR	2-10
DRIVING THE TRACTOR	2-11
OPERATING THE TRACTOR	2-12
OPERATING THE P.T.O.	2-14
OPERATING THE EXTERNAL CONTROLS	2-14
SERVICING THE TRACTOR	2-15
DIESEL FUEL	2-17
PREVENTION OF FIRE OR EXPLOSION	2-18
FIRE EXTINGUISHER	2-19
PROTECTION OFFERED BY THE TRACTOR	2-20
INTENDED USE STATEMENT	2-23

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

INTRODUCTION	3-1
CAB AIR FILTERS	3-5
IN CAB STORAGE (where fitted)	3-6
CABLE AND WIRING ROUTING	3-7
MOBILE TELEPHONE USAGE	3-7
IMPLEMENT MONITOR INSTALLATION	3-8
CAB AIR PRESSURISATION MONITOR (where fitted)	3-8

OPERATOR'S SEAT

AIR SUSPENSION SEAT DELUXE	3-10
SEAT BELT	3-15

INSTRUCTOR'S SEAT

INSTRUCTIONAL SEAT (where fitted)	3-16
---	------

FORWARD CONTROLS

KEY- START SWITCH	3-17
HAZARD WARNING LIGHT SWITCH	3-17
LIGHT-/ TURN LEVER	3-18
FOLLOW ME HOME LIGHTS	3-18
WINDSHIELD WIPER AND WASHER CONTROLS	3-19
ELECTRONIC PARK BRAKE	3-20
CLUTCH/ INCHING PEDAL	3-24
FOOT BRAKES	3-24
EXHAUST BRAKE (where fitted)	3-25
STEERING COLUMN	3-26

LEFT-HAND SIDE CONTROLS

HANDBRAKE	3-27
-----------------	------

RIGHT-HAND SIDE CONTROLS

INTEGRATED CONTROL PANEL	3-28
--------------------------------	------

REARWARD CONTROLS

SWITCH PANEL C- PILLAR	3-29
HYDRAULIC MASTER SWITCH	3-30
HEATED SCREENS (where fitted)	3-31
FAST STEERING SYSTEM (where fitted)	3-32
BATTERY ISOLATOR SWITCH	3-34
CLIMATE CONTROLS	3-35
MANUAL TEMPERATURE CONTROL	3-36
AUTOMATIC TEMPERATURE CONTROL (ATC)	3-37

OVERHEAD CONTROLS

SWITCH PANEL WORKLIGHTS	3-38
RADIO/CASSETTE/CD PLAYER (where fitted)	3-38
INTERIOR LIGHT	3-39

INSTRUMENT CLUSTER

ANALOGUE/ DIGITAL INSTRUMENT CLUSTER	3-40
GAUGES	3-40
INDICATOR AND WARNING LIGHTS	3-41
DISPLAYS	3-43
TRANSMISSION DISPLAY	3-45
KEYPAD ENHANCED	3-46
SELECTING OR CHANGING THE DISPLAY SETTINGS	3-48
GROUND SPEED CALIBRATION	3-49
PERFORMANCE MONITOR	3-52
ARMREST COLOUR DISPLAY	3-57
POP- UP SCREENS ON COLOUR DISPLAY	3-59
PERFORMANCE MONITOR ON COLOUR DISPLAY	3-65
PROGRAMMING THE DISPLAYS	3-68
ALARM FUNCTIONS	3-71
ACCESSING STORED ERROR CODES	3-73
WARNING AND ADVISORY SYMBOLS	3-74

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

TRACTOR REFUELLING	4-1
--------------------------	-----

STARTING THE UNIT

STARTING THE ENGINE	4-3
GRID HEATER COLD START AID (where fitted)	4-4
FUEL HEATER (where fitted)	4-4
COOLANT IMMERSION HEATER (where fitted)	4-4
TRANSMISSION OIL HEATER (where fitted).....	4-6
BOOSTING THE BATTERY	4-7

STOPPING THE UNIT

STOPPING THE ENGINE.....	4-8
AUTOMATIC ENGINE SHUTDOWN	4-8
AUTOMATIC ENGINE SHUTDOWN WITH ENHANCED KEYPAD (where fitted)	4-9

MOVING THE UNIT

OPERATING IN COLD TEMPERATURES	4-10
REVERSIBLE ENGINE FAN	4-10

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

CARRYING THE TRACTOR ON A TRANSPORTER.....	5-1
SECURE THE HIGH VISIBILITY ROOF PANEL.....	5-1

RECOVERY TRANSPORT

TOWING THE TRACTOR.....	5-2
-------------------------	-----

6 WORKING OPERATIONS

GENERAL INFORMATION

VARIABLE ENGINE POWER MANAGEMENT	6-1
CONSTANT ENGINE SPEED	6-3
DIFFERENTIAL LOCK	6-6
FOUR WHEEL DRIVE	6-8
FRONT AXLE SUSPENSION (where fitted)	6-10
AUTOMATED HEADLAND FUNCTIONS	6-11
QUICK GUIDE.....	6-11
RECORDING AND RE-PLAYING	6-13
EXPLANATION OF SYMBOLS.....	6-16
RECORDING A SEQUENCE	6-17
RE-PLAYING A SEQUENCE.....	6-22
DELETING A SEQUENCE	6-26

TRANSMISSION

FOOT THROTTLE PEDAL	6-27
HAND THROTTLE	6-27
SHUTTLE LEVER	6-28
RANGECOMMAND TRANSMISSION	6-31
TRANSMISSION OPERATION.....	6-31
SPEED MATCHING	6-32
POWERSHIFT CONTROL LEVER.....	6-32
DRIVING THE TRACTOR.....	6-34
AUTO SHIFT FUNCTION	6-37
AUTO SHIFTING IN FIELD MODE.....	6-38
AUTO SHIFTING IN ROAD MODE	6-39
START OFF GEAR.....	6-40
CHANGING THE GEAR SPAN.....	6-41
CHANGING GEAR SHIFT THRESHOLD	6-43
CHANGING THE FIELD MODE AUTO SHIFT POINT	6-44
PROGRAMMING REVERSE GEAR RATIOS	6-45
SETTING THE SHARP SHUTTLE FUNCTION	6-47
CREEPER GEARS (where fitted)	6-48
POWERCOMMAND TRANSMISSION	6-49
TRANSMISSION OPERATION.....	6-49
SPEED MATCHING	6-50
POWERSHIFT CONTROL LEVER.....	6-51
DRIVING THE TRACTOR.....	6-52
AUTO SHIFT FUNCTION	6-54
AUTO SHIFTING IN FIELD MODE.....	6-55
AUTO SHIFTING IN ROAD MODE	6-56
AUTO SHIFTING AND 'GO TO' MODES	6-58
CHANGING THE GEAR SPAN.....	6-59
STANDBY IN FIELD AND ROAD MODE.....	6-60
PROGRAMMING REVERSE GEAR RATIOS	6-61
CREEPER GEARS (where fitted)	6-63
ERROR CODES.....	6-64

REAR POWER TAKE-OFF

P.T.O. OPERATING PRECAUTIONS.....	6-65
CHANGING THE P.T.O. OUTPUT SHAFT	6-65
ATTACHING P.T.O. DRIVEN EQUIPMENT	6-66
P.T.O. OPERATION.....	6-67
THREE-SPEED P.T.O. SYSTEM.....	6-72
GROUND DRIVE P.T.O. (where fitted)	6-73
EXTERNAL P.T.O. CONTROLS.....	6-74
AUTO P.T.O. OPERATION	6-76

FRONT POWER TAKE OFF

P.T.O. OPERATION.....	6-79
AUTO P.T.O. OPERATION	6-81

REAR HITCH

ELECTRONIC DRAFT CONTROL	6-83
SETTINGS AND DISPLAY	6-87
ELECTRONIC DRAFT CONTROL OPERATION	6-89
EXTERNAL HITCH CONTROLS.....	6-94

FRONT HITCH

SETTINGS AND ADJUSTMENTS	6-96
HITCH OPERATION	6-99
AUXILIARY FRONT COUPLERS (where fitted).....	6-104
EXTERNAL HITCH CONTROLS	6-106

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

REMOTE CONTROL VALVES	6-107
SETTINGS AND ADJUSTMENTS	6-114
SETTING THE REMOTE VALVE PRIORITY.....	6-119
CREATING TIMER PROGRAMMES	6-120
CONNECTING REMOTE CYLINDERS	6-127
OPERATING WITH REMOTE VALVES	6-129
JOYSTICK OPERATION WITH A FRONT LOADER.....	6-131
MID MOUNT REMOTE VALVES	6-133
EXTERNAL EHR CONTROLS	6-134
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT	6-135

HYDRAULIC POWER BEYOND PORT

HYDRAULIC POWER BEYOND FOR EXTERNAL SERVICES	6-137
--	-------

THREE POINT HITCH

ATTACHING THREE-POINT HITCH EQUIPMENT	6-140
LIFT ROD ADJUSTMENT	6-142
TOP LINK ADJUSTMENT	6-144
FLEXIBLE LINK END ADJUSTMENT	6-145
QUICK HITCH	6-146
LINKAGE STABILISER ADJUSTMENT	6-148

DRAWBARS AND TOWING ATTACHMENTS

DRAWBARS AND TOWING ATTACHMENTS	6-151
SWINGING DRAWBARS.....	6-154
AUTOMATIC PICK-UP HITCH	6-157
REAR TOW HITCH.....	6-159

TRAILER BRAKING SYSTEMS

AIR-OPERATED TRAILER BRAKES	6-165
AIR-OPERATED TRAILER BRAKES (Italy only).....	6-168
TRAILER BRAKE BIAS CONTROL	6-169
AUXILIARY AIR SUPPLY CONNECTOR (where fitted).....	6-169
HYDRAULIC TRAILER BRAKES	6-170
HYDRAULIC TRAILER BRAKES (Italy only).....	6-171

WHEEL TRACK ADJUSTMENT

FRONT WHEEL TRACK ADJUSTMENT	6-172
FRONT WHEEL ALIGNMENT	6-175
STEERING STOPS	6-176
FRONT AXLE OSCILLATION STOPS	6-176
FRONT FENDER.....	6-177
REAR WHEEL TRACK ADJUSTMENT	6-179

FLANGE TYPE AXLE (where fitted)	6-179
BAR TYPE AXLE (where fitted)	6-182

BALLASTING AND TYRES

BALLASTING AND TYRES	6-186
IRON WEIGHTS (where fitted)	6-189
LIQUID BALLAST	6-192
TYRE INFLATION	6-194
TYRE PRESSURES AND PERMISSIBLE LOADS	6-195

AUXILIARY POWER CONNECTIONS

DIAGNOSTIC SOCKET	6-197
TRAILER SOCKET ELECTRICAL	6-197
ELECTRICAL POWER CONNECTORS	6-198
INTERNAL POWER CONNECTORS	6-198
EXTERNAL POWER CONNECTORS	6-200

7 MAINTENANCE

GENERAL INFORMATION

INTRODUCTION	7-1
FUEL REQUIREMENT	7-2
BIODIESEL FUEL	7-4
ENGINE OIL CHANGE	7-5
PROTECTIVE DEVICES	7-6
LUBRICANTS AND COOLANTS Lubrications and Coolants	7-8
General specification	7-10
CAPACITIES	7-11

MAINTENANCE CHART

Maintenance Chart	7-12
-------------------------	------

WHEN THE WARNING LAMP LIGHTS

CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT	7-14
DRAIN FUEL SYSTEM WATER SEPARATOR	7-15
CHECK BRAKE FLUID LEVEL	7-16

EVERY 10 HOURS OR EACH DAY

CHECK ENGINE COOLANT LEVEL	7-17
CHECK ENGINE OIL LEVEL	7-18
CHECK REMOTE CONTROL VALVE DRAIN BOTTLES	7-18
CHECK WINDSCREEN WASHER RESERVOIR	7-19
DRAIN AIR RESERVOIR ON AIR OPERATED TRAILER BRAKE	7-19

FIRST 50 HOURS

SERVICE OPERATIONS	7-20
--------------------------	------

EVERY 50 HOURS

CLEAN THE CAB AIR FILTER	7-21
--------------------------------	------

CLEAN THE COOLER SECTION.....	7-23
ALL GREASE FITTINGS.....	7-24
CHECK FRONT AND REAR WHEEL NUTS.....	7-30
CHECK TYRE PRESSURES AND TYRE CONDITION.....	7-30

EVERY 100 HOURS

INSPECT POLY V-BELT.....	7-31
INSPECT COMPRESSOR DRIVE BELT.....	7-31

EVERY 300 HOURS

CHECK BATTERY FLUID LEVEL.....	7-32
ADJUST HANDBRAKE.....	7-33
CHECK TRANSMISSION/REAR AXLE AND HYDRAULIC OIL LEVEL.....	7-34
CHECK 4WD FRONT AXLE DIFFERENTIAL AND HUBS OIL LEVEL.....	7-35
CHECK FRONT P.T.O. GEARBOX OIL LEVEL.....	7-35

EVERY 600 HOURS

CHANGE ENGINE OIL AND FILTER.....	7-36
CHANGE FUEL PRE-FILTER AND FUEL FILTER ELEMENT.....	7-38
CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT.....	7-39
CHANGE CHARGE PUMP OIL FILTER.....	7-40
CHECK ENGINE AIR INTAKE CONNECTIONS.....	7-41
CHECK TRANSMISSION OIL COOLER PIPE COUPLINGS.....	7-42
CLEAN DEF/ AdBlue INLINE FILTER.....	7-42

EVERY 1200 HOURS OR ANNUALLY

CHANGE CAB AIR FILTERS.....	7-43
CHANGE MAIN OIL FILTER CARTRIDGE.....	7-44
CHANGE TRANSMISSION/ REAR AXLE AND HYDRAULIC OIL.....	7-45
CHANGE 4WD DIFFERENTIAL OIL.....	7-46
CHANGE 4WD PLANETARY HUB OIL.....	7-47
CHANGE FRONT P.T.O. GEARBOX OIL.....	7-47

EVERY 1200 HOURS OR EVERY 2 YEARS

CHECK BATTERY FLUID LEVEL.....	7-48
CHANGE DEF/ AdBlue INLINE FILTER.....	7-49
CHANGE ENGINE AIR CLEANER INNER ELEMENT.....	7-50
CHANGE ENGINE BREATHER FILTER.....	7-51
CHECK VALVE TAPPET CLEARANCE.....	7-51
CHANGE ENGINE COOLANT FLUID.....	7-52
CHANGE AIR BRAKE DRIER RESERVOIR.....	7-56
CHANGE POLY V-BELTS.....	7-57

EVERY 3600 HOURS OR EVERY 2 YEARS

CHANGE DEF/ AdBlue MAIN FILTER.....	7-59
-------------------------------------	------

EVERY 36 MONTHS

SERVICE THE AIR CONDITIONER SYSTEM.....	7-60
CHECK BATTERY FLUID LEVEL.....	7-61

GENERAL MAINTENANCE

CLEANING THE TRACTOR.....	7-63
FUEL SYSTEM PRE- FILTER AND WATER TRAP	7-65
BLEEDING THE FUEL INJECTION SYSTEM	7-65
CHECK BRAKE PEDAL LATCHING/UNLATCHING	7-66
ADJUST CAB SUSPENSION (where fitted)	7-67
ADJUST AUTOMATICK PICK- UP HITCH	7-68
TRANSMISSION CLUTCH CALIBRATION	7-69
HEADLIGHT AND WORKLAMP ADJUSTMENT.....	7-74
BULB REPLACEMENT.....	7-75
FUSES AND RELAYS.....	7-79
PROTECTING THE ELECTRONIC AND ELECTRICAL SYSTEMS DURING BATTERY CHARGING OR WELDING	7-84
BATTERY REMOVAL AND INSTALLATION	7-85

STORAGE

TRACTOR STORAGE.....	7-86
PREPARATION FOR USE AFTER STORAGE	7-86

8 TROUBLESHOOTING

FAULT CODE RESOLUTION

INTRODUCTION	8-1
--------------------	-----

ALARM(S)

FAULT CODES AND SYMBOLS	8-2
-------------------------------	-----

SYMPTOM(S)

ENGINE	8-4
TRANSMISSION	8-5
HYDRAULICS	8-5
THREE POINT HITCH	8-6
BRAKES.....	8-6
CAB.....	8-7
ELECTRICAL SYSTEM	8-7

9 SPECIFICATIONS

GENERAL DIMENSIONS	9-1
MAXIMUM OPERATING ANGLE	9-4
TYPICAL OPERATING WEIGHTS	9-5
CAPACITIES	9-6
ENGINE	9-7
FUEL SYSTEM.....	9-7
AIR CLEANER SYSTEM	9-8
COOLING SYSTEM.....	9-8
TRANSMISSION	9-8
REAR POWER TAKE-OFF.....	9-9
FRONT POWER TAKE OFF	9-9
HYDRAULIC SYSTEM	9-10
THREE POINT HITCH	9-10
REMOTE CONTROL VALVES	9-12
THREE POINT HITCH FRONT	9-12

FRONT REMOTE VALVE COUPLERS	9-12
BRAKES.....	9-13
STEERING	9-13
ELECTRICAL EQUIPMENT.....	9-14
GROUND SPEED CHART SEMI POWERSHIFT TRANSMISSION.....	9-15
GROUND SPEED CHART FULL POWERSHIFT TRANSMISSION.....	9-18
MINIMUM HARDWARE TIGHTENING TORQUES	9-21

10 ACCESSORIES

EXTERNAL REAR VIEW MIRRORS.....	10-1
AUXILIARY HEADLIGHTS	10-1


11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy	11-1
Service record 1st 50 hour, Dealer copy	11-3

1 - GENERAL INFORMATION

CE DECLARATION OF CONFORMITY

Class of 2006/42/EC Annex II	BG	CZ	DA	DE	EL	EN	ES	ET	FI	FR	GA	GR	HR	HU	IT	LT	LV	MT	NL	NO	PL	PT	RO	SI	SK	SL	SV	TR		
	Декларация ЕС за съответствие Stwierdzenie zgodności z Dyrektywą 2006/42/EC	Prohlášení o shodě ES Prohlášení o shodě ES	EÜ-överensstemmelserklæring Anmeldelse af direktivet 2006/42/EF	EG-Konformitätserklärung laut Richtlinie 2006/42/EG	ΑΔείκση Συμμόρφωσης ΕΚ Στην Οδηγία με αριθμό 2006/42/ΕΚ	EC Declaration of conformity According to Directive 2006/42/EC	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	EÜ vastavõtteavaldatus Vastavõtteavaldatus	EY-vaatamustenmukaistus direktiivin 2006/42/EY mukaan	Déclaration CE de conformité selon la directive 2006/42/CE	EC Declaration of conformity According to Directive 2006/42/EC	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE	Declaración CE de conformidad de acuerdo con la Directiva 2006/42/CE
1.A.1	№1; [1]	№1; [1]	№1; [1]	№1; [1]	Επίτ. [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	№1; [1]	
1.A.2	Представител на Глоубеп Гариол, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	Zastupovatel Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	repræsentant af Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	vertreten durch Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	απορροπαγωγός της Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representative for Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	Eestiühendus Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	edustajajamenn Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	vertwoordende Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	representante de Gvoeurope Gariol, CNH Europe Holding S.A., 13, Rue Aldinger, L-1118 Luxembourg	
1.A.3	Декларацията, подписана от лицето отговорно, не пречи за Съюзния тип одобряване на машината. Земеделияски трактор Типове: [2] Модел: [3] Тип: [4] Серия: [5]	Prohlášení je vzhľadom na vyhlásenie zodpovedajúce, ne bráni prehlasovaniu stroja. Zemelohospodársky traktor Typ: [4] Výrobné číslo: [5]	erklæring på eget ansvar af produktet: Landbrugstraktor Handeltagsmateriale Model: [3] Type: [4] Serienummer: [5]	erklæring auf unser altesste Verantwortung, dass das Produkt Landwirtschaftliche Zugmaschine Handeltagsmaschine; Model: [3] Type: [4] Serienummer: [5]	Αδείκση είναι σύμφωνα με τον κανόνα, που απαιτείται να εκδοθεί (συμμόρφωση) μηχανήματος. Γεωργικό Εξοπλιστικό Συμπλήρωμα (συμμόρφωση) μηχανήματος. Model: [3] Type: [4] Serienummer: [5]	Agreement under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Deklaratsioon ei takista vastavõtteavalduse esitamist, kuna kohaldati ühenduse standardi: • ISO 3632/2-1 osa 1 ja 2	Erklärung ist unser alleinige Verantwortung, dass das Produkt landwirtschaftliche Zugmaschine ist. Harmonisierungsstandards wurden angewandt: • EN 3632/2-1 Teil 1 und 2	Agreement under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2	Declaración no impide la conformidad de la Directiva de la Unión (armonización) estándares han sido aplicados: • ISO 3632/2-1 parte 1 e 2
1.A.4	La fecha de la declaración es: [7]	La fecha de la declaración es: [7]	Sted og dato for erklæringen: [7]	Ort und Datum der Erklärung: [7]	Ημερομηνία της δήλωσης: [7]	Place and date of the declaration: [7]	Lugar y fecha de la declaración: [7]	Valmistus ja deklaratsioonikuupäev: [7]	Väljastamise ja deklaratsiooni kuupäev: [7]	Ort und Datum der Erklärung: [7]	Place and date of the declaration: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]	Lugar y fecha de la declaración: [7]
1.A.9	Име и подпис на упълномощеното лице: [8]	Име и подпис повеленото лице: [8]	Bemyndigedes navn og underskrift: [8]	Name und Unterschrift des Belegten: [8]	Όνομα και υπογραφή του εξουσιοδοτημένου προσώπου: [8]	Name and signature of the authorized person: [8]	Nombre y firma de la persona autorizada: [8]	Nimi ja isikunime ja allkiri: [8]	Väljastajate nimi ja allkiri: [8]	Name und Unterschrift der Belegten: [8]	Name and signature of the authorized person: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]	Nombre y firma de la persona autorizada: [8]

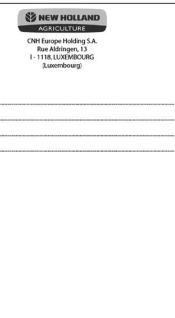

Here above is provided a copy of the "EC" Declaration of Conformity (EC Declaration of Conformity acc to 2006/42/EC).
 The EC Declaration of Conformity is the manufacturer's declaration about equipment compliance to relevant EU provisions.
 Please keep the original document in a safe place. Local authorities may require you to show this document in order to assure compliance of your equipment.
 Translation of this declaration in your own country language is provided on the original document.

For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes.

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, [1]
1.A.2	Represented by Guiseppe Gavioli CNH Europe Holding S.A. 13, Rue Aldringen L- 1118 Luxembourg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: [2] Model: [3] Type: [4] Serial Number: [5]
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by [6]
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: [7]
1.A.10	Name and signature of the authorised person: [8]

HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- ROPS PROTECTION is certified according to **EN 15694**.
- FOPS level on your tractor cab is certified according to **OECD Code 10**.
- HVAC (Heating, ventilation Air Conditioning) CAB is certified Category 1 according to **EN 15695-1**.
- HV (Heating, ventilation) cab is certified Category 1 according to **EN 15695-1**.
- NOISE EMISSION LEVELS are rated according to **77/311/EC**.
- VIBRATION LEVELS are rated according to **78/764/EEC**.

NOTE: See safety section 2 in this manual for further explanation and details on above mentioned standards and specific terminology.

METRIC AND IMPERIAL UNITS ABBREVIATIONS

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m²	square foot	ft²
	square millimeter	mm²	square inch	in²
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	μF	microfarad	μF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency - Rotational				
	revolution per minute	r/min	revolution per minute	r/min^a
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	μm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per Mass				
	milligram per kilogram	mg/ kg		
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH₂O
	megapascal	MPa	pound per square inch	psi

1 - GENERAL INFORMATION

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Temperature (other than Thermodynamic)				
	degrees Celsius	°C	degrees Fahrenheit	°F
Time				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
Torque (includes Bending moment, Moment of force, and Moment of a couple)				
	newton meter	N m	pound foot	lb ft
			pound foot	lb in
Velocity				
	kilometer per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimeter per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
Volume (includes Capacity)				
	cubic meter	m³	cubic yard	yd³
				cu yd
	liter	l	cubic inch	in³
	liter	l	US gallon	US gal
			UK gallon	UK gal
			US quart	US qt
			UK quart	UK qt
	milliliter	ml	fluid ounce	fl oz
Volume per time (includes Discharge and Flow rate)				
	cubic meter per minute	m³/min	cubic foot per minute	ft³/min
	liter per minute	l/min	US gallon per minute	US gal/min
	milliliter per minute	ml/min	UK gallon per minute	UK gal/min
Sound power level and Sound pressure level				
	decibel	dB	decibel	dB

Glossary

Acronym	Definition
DEF	Diesel Exhaust Fluid
ISO	International Organization for Standardization
MSDS	Material Safety Data Sheet
NOx	Nitrogen Oxide
PPE	Personal Protective Equipment
SCR	Selective Catalytic Reduction
ULSD	Ultra Low Sulfur Diesel
%	Percent
<	Less than
>	Greater than

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com