

ORIGINAL INSTRUCTIONS - according to Directive 2006/42/EC, Annex I 1.7.4.1

# OPERATOR'S MANUAL

---

**T5030**


**T5040**

**T5050**

**T5060**

**T5070**

Tractors

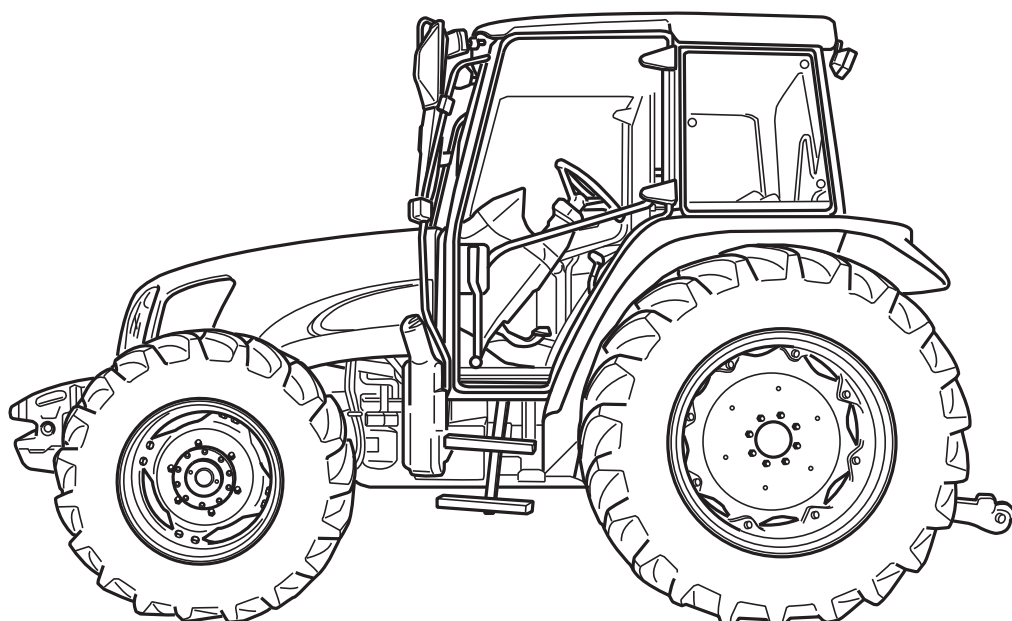

**Part Number 84474632**

1st edition English

April 2011

Replaces part number 84266416



# Contents

---

## 1 GENERAL INFORMATION

Note to the Owner .....	1-1
Declaration of conformity .....	1-2
Noise levels .....	1-4
Electro-magnetic interference (EMC) .....	1-5
Metric and Imperial units abbreviations .....	1-6
Introduction .....	1-8
Tractor intended use .....	1-9
Ecology and the Environment .....	1-11
Product Identification .....	1-12
Component Identification .....	1-14

## 2 SAFETY INFORMATION

Safety rules and signal word definitions .....	2-1
SAFETY INFORMATION .....	2-3
SAFETY AIR CONDITIONING .....	2-7
SAFETY DECALS .....	2-8
Vehicle vibration levels .....	2-12
PROTECTION OFFERED BY THE TRACTOR .....	2-13
ROLL-OVER PROTECTIVE STRUCTURE .....	2-15
MACHINE STABILITY .....	2-16
FIRE OR EXPLOSION PREVENTION .....	2-18

## 3 CONTROLS/INSTRUMENTS

### ACCESS TO OPERATOR'S PLATFORM

GENERAL INFORMATION .....	3-1
CAB .....	3-2
AIR CONDITIONED CAB .....	3-9

### OPERATOR'S SEAT

USER CONTROLS AND SEAT Operator seat - Adjust .....	3-11
---	------

### FORWARD CONTROLS

CONTROLS/INSTRUMENTS .....	3-15
KEYPAD .....	3-20
FORWARD CONTROLS .....	3-21

### RIGHT-HAND SIDE CONTROLS

USER CONTROLS AND SEAT - Control identification .....	3-26
---	------

### REARWARD CONTROLS

USER CONTROLS AND SEAT - Control identification .....	3-30
---	------

### EXTERIOR CONTROLS

BATTERY ISOLATOR SWITCH .....	3-32
-------------------------------	------

---

## DISPLAY SETTINGS

Instrument panel - Adjust .....	3-32
Display settings .....	3-34
Odometer .....	3-44
Programming maintenance work .....	3-46
Aggressiveness .....	3-48

## TRANSMISSION

TRANSMISSION WITH RANGE GEAR AND SHUTTLE .....	3-49
TRANSMISSION WITH RANGE GEAR AND HYDRAULIC POWER SHUTTLE .....	3-52
TRANSMISSION WITH CREEPER AND SHUTTLE .....	3-57
TRANSMISSION WITH CREEPER AND SHUTTLE .....	3-60
TRANSMISSION WITH ELECTRO-HYDRAULIC DUAL COMMAND .....	3-63
TRANSMISSION WITH ELECTRO-HYDRAULIC DUAL COMMAND .....	3-64
SPEED AT MAXIMUM POWER .....	3-69

## 4 OPERATING INSTRUCTIONS

### COMMISSIONING THE UNIT

GENERAL SAFETY BEFORE YOU SERVICE .....	4-1
---	-----

### STARTING THE UNIT

STARTING SYSTEM - Start .....	4-2
-------------------------------	-----

### STOPPING THE UNIT

STARTING SYSTEM - Stop .....	4-4
------------------------------	-----

## 5 TRANSPORT OPERATIONS

### ROAD TRANSPORT

WHEELS AND TIRES .....	5-1
TYRE SIZES .....	5-4

### PREPARING FOR ROAD TRANSPORT

WHEEL TRACK ADJUSTMENT .....	5-7
WHEEL TRACKS DIAGRAM .....	5-11
AXLES, BRAKES AND STEERING - Ballast .....	5-16
MAXIMUM PERMITTED WEIGHTS .....	5-20

## 6 WORKING OPERATIONS

### 2WD-4WD SYSTEM

ELECTRO-HYDRAULICALLY OPERATED FOUR-WHEEL DRIVE .....	6-1
---	-----

Differential lock command

---

Differential lock command - Operating .....	6-2
---	-----

## Control valve

REMOTE CONTROL AUXILIARY CONTROL VALVES.....	6-3
--	-----

## REAR PTO

REAR PTO - Personal safety.....	6-10
GENERAL SPECIFICATIONS.....	6-11
POWER TAKE-OFF OPERATION .....	6-12

## HYDRAULIC COMMAND SYSTEM

HYDRAULIC LIFT .....	6-17
----------------------	------

## HYDRAULIC COMMAND SYSTEM

ELECTRONICALLY CONTROLLED HYDRAULIC LIFT .....	6-20
ELECTRONIC LIFT CONTROLS .....	6-21
ELECTRONICALLY CONTROLLED HYDRAULIC LIFT .....	6-27

## HITCH

THREE POINT HITCH .....	6-31
Quick coupling three point linkage .....	6-35
IMPLEMENT HITCH POINTS.....	6-37

## TRAVELLING Towing

AXLES, BRAKES AND STEERING - Safety rules .....	6-38
TOWING EQUIPMENT.....	6-39

## 7 MAINTENANCE

### GENERAL INFORMATION

Introduction .....	7-1
MISCELLANEOUS CHECKS .....	7-3
RUNNING-IN PERIOD .....	7-4
TRACTOR REFUELLING .....	7-5
ACCESS FOR INSPECTION AND MAINTENANCE.....	7-7

### MAINTENANCE CHART

Maintenance Chart .....	7-8
-------------------------	-----

### As required

Radiator expansion tank.....	7-10
Windscreen washer system - Level make up .....	7-10
Air conditioning - Dehydration filter.....	7-10
Handbrake.....	7-11
Control valve oil recovery cup .....	7-11
Radiator - Check .....	7-12
Brake - Adjust .....	7-12

---

Clutch adjustment .....	7-12
Compressor belt .....	7-13
Lights .....	7-13
Tyre pressure .....	7-13

## At warning message display

Main cartridge, dry air filter .....	7-15
Brake fluid level .....	7-15
Fuel filter water drain .....	7-16

## Every 10 hours or daily

Engine oil level .....	7-17
Engine oil level .....	7-17
Compressed air brake .....	7-17

## Every 50 hours

Rear wheel hub .....	7-19
Lift and linkage .....	7-19
4WD steering cylinders .....	7-19
4WD front axle rear pivot .....	7-20
2WD steering cylinder .....	7-20
2WD steering cylinder and right hand stub axle .....	7-20
2WD left hand stub axle .....	7-21
2WD front axle pivot .....	7-21

## Every 100 hours

Condenser - Cleaning .....	7-22
Oil cooler - Cleaning WITH HYDRAULIC TRANSMISSIONS ONLY .....	7-22
Intercooler .....	7-22
Air filter - Cleaning .....	7-23

## Every 300 hours

Hydraulic circuit oil filter .....	7-24
Oil filter models with power shuttle/dual command .....	7-24
AIR INTAKE SYSTEM - Cleaning .....	7-24
Inspect V-belt .....	7-25
Transmission and hydraulic lift .....	7-25
Transmission and hydraulic lift .....	7-25
4WD front axle housing .....	7-26
4WD front axle final drives .....	7-26
2WD front wheels .....	7-26
4WD front axles stub .....	7-27
Towing hitch .....	7-27
Hydraulic towing hook .....	7-27
Battery - Check .....	7-28

---

## Every 600 hours

Engine oil and filter .....	7-29
Fuel filter system Fuel filter - Replace .....	7-29
Fuel pre-filter .....	7-31

## Every 1200 hours or annually

Cab air filter .....	7-32
Main cartridge, dry air filter .....	7-32
Fuel tank - Cleaning .....	7-32

## Every 1200 hours or two years

4WD front axle housing .....	7-33
4WD front axle final drives .....	7-33
Engine valve adjustment .....	7-33
Transmission oil .....	7-34
Washing cooling system .....	7-35

## 1800 hours Service

Fuel injector - Check .....	7-38
-----------------------------	------

## STORAGE

TRACTOR STORAGE .....	7-39
-----------------------	------

## General Maintenance

Battery - Check .....	7-39
Fuse and relay box - Check .....	7-42
Fuses and Relays .....	7-43
Fuses and Relays .....	7-45
Fuses and Relays .....	7-47
Fuses and Relays .....	7-49
Fuses and Relays .....	7-51
Head light - Adjust .....	7-53
Head light - Replace .....	7-53
Tail, brake and direction indicator lightt .....	7-54
Front side and direction indicator lamp .....	7-54
Side work light - Check .....	7-54
Upper cab work lights .....	7-55

## FLUIDS AND LUBRICANTS

LUBRICATION SYSTEM - Change fluid .....	7-56
---	------

## 8 TROUBLESHOOTING

### FAULT CODE RESOLUTION

Fault code of digital instrument .....	8-1
--	-----

---

Transmission - Fault codes .....	8-2
Four-wheel drive - Fault codes .....	8-2
Differential - Fault codes .....	8-3
Power take-off - Fault codes .....	8-3
Hydraulic lift - Fault codes .....	8-4
TROUBLESHOOTING ENGINE .....	8-5
ELECTRICAL POWER SYSTEM - Troubleshooting ELECTRICAL SYSTEM ....	8-7
PRIMARY HYDRAULIC POWER SYSTEM - Troubleshooting HYDRAULIC SYSTEM .....	8-8
HITCH - Troubleshooting HYDRAULIC LIFT AND 3-POINT LINKAGE .....	8-9
SERVICE BRAKE - Troubleshooting .....	8-10
ENVIRONMENT CONTROL - Troubleshooting .....	8-11

## ALARM(S)

Alarms .....	8-12
Display warnings .....	8-15

## 9 SPECIFICATIONS

SPECIFICATIONS AND DATA .....	9-1
-------------------------------	-----

## 10 ACCESSORIES

JOYSTICK FOR AUXILIARY CONTROL VALVES .....	10-1
FRONT LOADER PREARRANGEMENT .....	10-3
CONTROL VALVE FOR TRAILER HYDRAULIC BRAKES .....	10-4
AIR-OPERATED TRAILER BRAKES .....	10-6

---

# 1 - GENERAL INFORMATION

## Note to the Owner

This manual contains information concerning the adjustment and maintenance of your new equipment. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this equipment. Please have all operators read this manual carefully and keep it available for ready reference.

Your NEW HOLLAND dealer will instruct you in the general operation of your new equipment. Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your machine.

Your NEW HOLLAND dealer carries a complete line of genuine NEW HOLLAND service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of your new equipment when ordering parts. Locate these numbers now and record them below. Refer to the 'General Information' section of this manual for the location of the model and product identification numbers of your machine.

PLEASE RECORD THE FOLLOWING INFORMATION
Model:
Product Identification Number (PIN):



This is the safety alert symbol. It is used with and without signal words to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

### **▲ WARNING**

**Illustrations in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.  
Replace all shields before operating the machine.  
Failure to comply could result in death or serious injury.**

W0012A

### Engine tampering statement:

**ATTENTION:** *The fuel system and engine on your machine are designed and built to government emissions standards. Tampering by dealers, customers, operators and users is strictly prohibited by law. Failure to comply could result in government fines, rework charges, invalid warranty, legal action and possible confiscation of the machine until rework to original condition is completed. Engine service and/or repairs must be done by a certified technician only!*





For your better and easier understanding of the document you'll find original text reproduced hereafter together with some notes

Clause of 2006/42/EC Annex II	EN EC Declaration of conformity According to Directive 2006/42/EC.
1.A.1	We, <b>[1]</b>
1.A.2	Represented by Giuseppe Gavioli, CNH Europe Holding S.A. 13, Rue Aldringen L-1118 Luxembourg
1.A.3	declare under our sole responsibility, that the product: Agricultural tractor Trade Name: <b>[2]</b> Model: <b>[3]</b> Type: <b>[4]</b> Serial Number: <b>[5]</b>
1.A.4	to which this declaration relates, fulfils all the relevant provisions of the Directive 2006/42/EC, amended by <b>[6]</b> .
1.A.7	For the relevant implementation of the provisions of the Directive, the following (harmonised) standards have been applied: • ISO 26322-1 part 1 or 2 Other standards: see Operators Manual
1.A.9	Place and date of the declaration: <b>[7]</b>
1.A.10	Name and signature of the authorised person: <b>[8]</b>

## HEALTH AND SAFETY RELATED STANDARDS APPLIED TO YOUR TRACTOR

- FOPS level on your tractor cab is certified according to OECD Code 10.
- BLUE CAB is certified Category 2 according to EN 15695-1.
- HVAC (Heating, ventilation Air Conditioning ) CAB is certified Category 1 according to EN 15695-1.
- HV (Heating, ventilation) cab is certified Category 1 according to EN 15695-1.
- NOISE EMISSION LEVELS are rated according to 77/311/EEC.
- VIBRATION LEVELS are rated according to 78/764/EEC.
- ROPS PROTECTION is certified according to EN 15694.

**NOTE:** See safety section 1 in this manual for further explanation and details on above mentioned standards and specific terminology.

## Noise levels

In compliance with EU standards, 77/311/EEC, the noise levels for tractors described in manual are as specified below.

### **NOISE LEVEL MEASURABLE AT OPERATOR'S EAR dB (A)**

#### Tractors with roll bars

<b>Noise level</b>
<b>84 dB</b>

#### Tractors with closed cab - Doors closed, rear window closed

<b>Noise level</b>
<b>75 dB</b>

#### Tractors with closed cab - Doors closed, rear window open

<b>Noise level</b>
<b>79 dB</b>

## Electro-magnetic interference (EMC)

This machine complies strictly with the European Regulations on electro-magnetic emissions. However, interference may arise as a result of add-on equipment which may not necessarily meet the required standards. As such interference can result in serious malfunction of the unit and/or create unsafe situations, you must observe the following:

- Ensure that each piece of non- NEW HOLLAND equipment fitted to the machine bears the CE mark.
- The maximum power of emission equipment (radio, telephones, etc.) must not exceed the limits imposed by the national authorities of the country where you use the machine.
- The electro-magnetic field generated by the add-on system should not exceed **24 V/m** at any time and at any location in the proximity of electronic components.

Failure to comply with these rules will render the NEW HOLLAND warranty null and void.

## Metric and Imperial units abbreviations

TYPICAL APPLICATIONS	RECOMMENDED SI (METRIC) UNITS		IMPERIAL UNIT	
	NAME	SYMBOL	NAME	SYMBOL
<b>AREA (Land area)</b>				
	hectare	ha	acre	ha
	square meter	m <sup>2</sup>	square foot	ft <sup>2</sup>
			square inch	in <sup>2</sup>
	square millimetre	mm <sup>2</sup>	square inch	in <sup>2</sup>
<b>ELECTRICITY</b>				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	μF	microfarad	μF
	ohm	Ω	ohm	Ω
<b>FORCE</b>				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
<b>FORCE PER LENGTH</b>				
	newton per metre	N/m	pound per inch	lb/in
<b>FREQUENCY</b>				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
<b>FREQUENCY - ROTATIONAL</b>				
	revolution per minute	r/min	revolution per minute	r/min <sup>a</sup>
		rpm		rpm
<b>LENGTH</b>				
	kilometre	km	mile	mi
	meter	m	foot	ft
	centimetre	cm	inch	in
	millimetre	mm	inch	in
	micrometer	μm		
<b>MASS</b>				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
<b>POWER</b>				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
<b>PRESSURE or STRESS (FORCE PER AREA)</b>				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH <sub>2</sub> O
	megapascal	MPa	pound per square inch	psi

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)