

OPERATOR'S MANUAL

T7.220

T7.235


T7.250

T7.260

T7.270

Sidewinder II™

Auto Command - Power Command Tractors

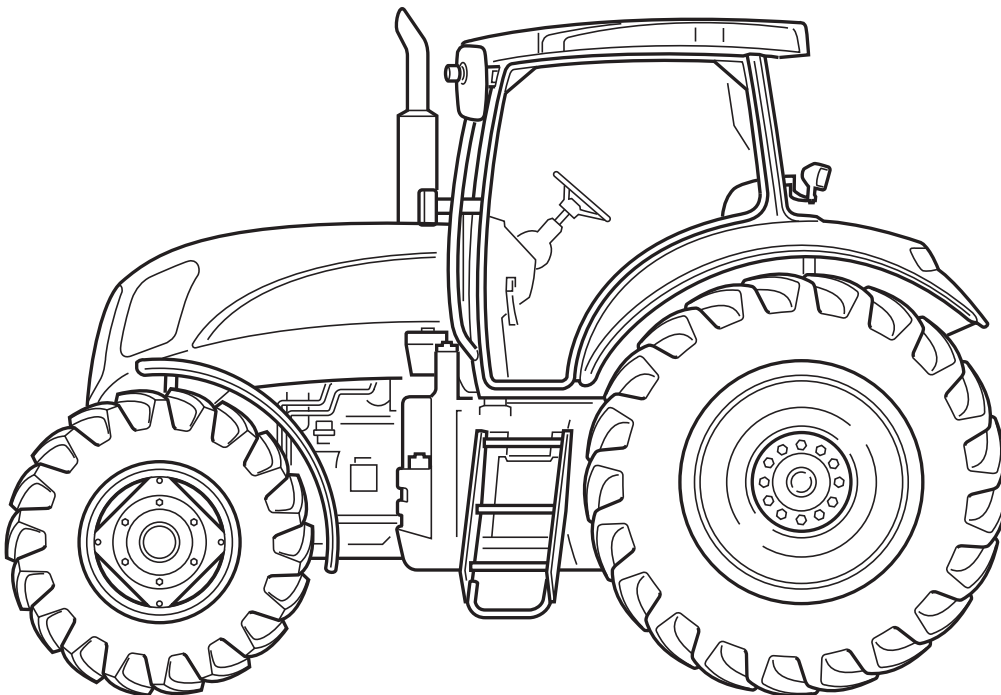

Part Number 84601599

4th edition English
June 2012





OPERATOR'S MANUAL



**T7.220 AutoCommand , T7.220 Power Command , T7.235 AutoCommand ,
T7.235 Power Command , T7.250 AutoCommand , T7.250 Power Command ,
T7.260 AutoCommand , T7.260 Power Command , T7.270 AutoCommand**

Contents

1 GENERAL INFORMATION

METRIC AND IMPERIAL UNITS ABBREVIATIONS	1-1
Note to the Owner	1-3
PRODUCT IDENTIFICATION	1-5
ENGINE IDENTIFICATION	1-6
DRIVELINE IDENTIFICATION	1-7
Part identification	1-7
CAB IDENTIFICATION	1-8
ECOLOGY AND THE ENVIRONMENT	1-9
NOISE LEVEL	1-10
PROGRAMMING TRACTOR FUNCTIONS	1-10
BEFORE OPERATING THE TRACTOR	1-11
INTERNATIONAL SYMBOLS	1-12
VIBRATION LEVEL INFORMATION SHEET	1-13
MACHINE STABILITY	1-14
INSTRUCTOR'S SEAT	1-18
SELECTIVE CATALYTIC REDUCTION (SCR) SYSTEM	1-19

2 SAFETY INFORMATION

SAFETY DECALS	2-1
SAFETY PRECAUTIONS	2-8
BEFORE DRIVING THE TRACTOR	2-9
DRIVING THE TRACTOR	2-10
OPERATING THE TRACTOR	2-11
OPERATING THE P.T.O.	2-13
OPERATING THE EXTERNAL CONTROLS	2-13
SERVICING THE TRACTOR	2-14
PREVENTION OF FIRE OR EXPLOSION	2-17
DIESEL FUEL	2-18
FIRE EXTINGUISHER	2-19
PROTECTION OFFERED BY THE TRACTOR	2-20
INTENDED USE STATEMENT	2-23
SAFETY ASPECTS	2-25

3 CONTROLS/INSTRUMENTS

ACCESS TO OPERATOR'S PLATFORM

INTRODUCTION	3-1
Cab - Localisation overview	3-5
CAB AIR FILTERS	3-7
IN CAB STORAGE (where fitted)	3-8
CABLE AND WIRING ROUTING	3-9
MOBILE TELEPHONE USAGE	3-10
IMPLEMENT MONITOR INSTALLATION	3-11
CAB AIR PRESSURISATION MONITOR (where fitted)	3-11

OPERATOR'S SEAT

AIR SUSPENSION SEAT	3-13
AIR SUSPENSION SEAT DELUXE	3-15
ARMREST CONTROLS	3-20
SEAT BELT	3-21

INSTRUCTOR'S SEAT	
INSTRUCTIONAL SEAT (where fitted).....	3-22

FORWARD CONTROLS

KEY- START SWITCH	3-23
HAZARD WARNING LIGHT SWITCH.....	3-23
LIGHT-/ TURN LEVER	3-24
FOLLOW ME HOME LIGHTS.....	3-24
WINDSHIELD WIPER AND WASHER CONTROLS	3-25
ELECTRONIC PARK BRAKE	3-26
ANTI-LOCK BRAKING SYSTEM ABS Operation	3-30
FOOT BRAKES	3-38
EXHAUST BRAKE (where fitted).....	3-39
STEERING COLUMN	3-40
ADJUSTABLE AIR VENTS	3-40

LEFT-HAND SIDE CONTROLS

HANDBRAKE.....	3-41
----------------	------

RIGHT-HAND SIDE CONTROLS

INTEGRATED CONTROL PANEL	3-42
INTEGRATED CONTROL PANEL	3-43
HAND THROTTLE	3-44
MULTI FUNCTION HANDLE	3-44

REARWARD CONTROLS

SWITCHES ON C-PILLAR	3-45
HYDRAULIC MASTER SWITCH	3-46
HEATED SCREENS (where fitted).....	3-47
FAST STEERING SYSTEM (where fitted)	3-48
BATTERY ISOLATOR SWITCH	3-50
CLIMATE CONTROLS	3-51
MANUAL TEMPERATURE CONTROL	3-53
AUTOMATIC TEMPERATURE CONTROL (ATC).....	3-54

OVERHEAD CONTROLS

SWITCH PANEL WORKLIGHTS	3-55
RADIO/CASSETTE/CD PLAYER (where fitted).....	3-56
INTERIOR LIGHT	3-57

INSTRUMENT CLUSTER

ANALOGUE/ DIGITAL INSTRUMENT CLUSTER	3-58
GAUGES	3-58
INDICATOR AND WARNING LIGHTS	3-59
DISPLAYS.....	3-61
KEYPAD ENHANCED.....	3-63
SELECTING OR CHANGING THE DISPLAY SETTINGS	3-65
GROUND SPEED CALIBRATION.....	3-66
PERFORMANCE MONITOR.....	3-69

ARMREST COLOUR DISPLAY	3-76
POP- UP SCREENS ON COLOUR DISPLAY.....	3-78
PERFORMANCE MONITOR ON COLOUR DISPLAY	3-84
PROGRAMMING THE DISPLAYS	3-87
ALARM FUNCTIONS.....	3-90
ACCESSING STORED ERROR CODES	3-92
WARNING AND ADVISORY SYMBOLS	3-93
WARNING AND ADVISORY SYMBOLS	3-103

4 OPERATING INSTRUCTIONS

COMMISSIONING THE UNIT

TRACTOR REFUELLING	4-1
--------------------------	-----

STARTING THE UNIT

STARTING THE ENGINE	4-3
GRID HEATER COLD START AID (where fitted)	4-5
FUEL HEATER (where fitted)	4-5
COOLANT IMMERSION HEATER (where fitted)	4-5
TRANSMISSION OIL HEATER (where fitted).....	4-7
Transmission - Operating Cold weather	4-8
BOOSTING THE BATTERY	4-9

STOPPING THE UNIT

STOPPING THE ENGINE.....	4-10
AUTOMATIC ENGINE SHUTDOWN	4-10
AUTOMATIC ENGINE SHUTDOWN WITH ENHANCED KEYPAD (where fitted)	4-11

MOVING THE UNIT

OPERATING IN COLD TEMPERATURES	4-12
REVERSIBLE ENGINE FAN	4-14

5 TRANSPORT OPERATIONS

PREPARING FOR ROAD TRANSPORT

CARRYING THE TRACTOR ON A TRANSPORTER.....	5-1
SECURE THE HIGH VISIBILITY ROOF PANEL.....	5-1

RECOVERY TRANSPORT

TOWING THE TRACTOR.....	5-2
-------------------------	-----

6 WORKING OPERATIONS

GENERAL INFORMATION

VARIABLE ENGINE POWER MANAGEMENT	6-1
CONSTANT ENGINE SPEED	6-3
DIFFERENTIAL LOCK	6-7
FOUR WHEEL DRIVE	6-9

FRONT AXLE SUSPENSION (where fitted)	6-11
AUTOMATED HEADLAND FUNCTIONS	6-12
QUICK GUIDE.....	6-12
RECORDING AND RE-PLAYING	6-14
EXPLANATION OF SYMBOLS.....	6-18
RECORDING A SEQUENCE	6-19
RE-PLAYING A SEQUENCE.....	6-21
HEADLAND FUNCTION AND COLOUR DISPLAY SCREENS.....	6-25
DELETING A SEQUENCE WITH COLOUR DISPLAY.....	6-28

TRANSMISSION

FULL POWERSHIFT TRANSMISSION	6-29
CLUTCH/ INCHING PEDAL.....	6-29
FOOT THROTTLE PEDAL	6-29
TRANSMISSION OPERATION.....	6-30
POWERSHIFT CONTROL	6-31
SHUTTLE LEVER	6-32
TRANSMISSION DISPLAY.....	6-35
DRIVING THE TRACTOR.....	6-36
AUTO SHIFT FUNCTION	6-38
SPEED MATCHING	6-42
PROGRAMMING REVERSE GEAR RATIOS	6-43
CREEPER GEARS (where fitted)	6-44
ERROR CODES.....	6-45
GROUND SPEED CHART POWERSHIFT TRANSMISSION Ground speeds ...	6-46
CONTINUOUSLY VARIABLE TRANSMISSION (CVT)	6-51
TRANSMISSION OPERATION.....	6-51
ANTI JACK KNIFE	6-52
STATIONARY CONTROL	6-53
ENGINE SPEED CONTROL	6-54
SHUTTLE LEVER	6-55
TRANSMISSION CONTROLS	6-57
DRIVE PEDAL.....	6-59
PROGRAMME THE MAXIMUM SPEED	6-60
TRANSMISSION DISPLAY.....	6-63
MANUAL MODE.....	6-65
AUTOMATIC MODE.....	6-66
CRUISE MODE.....	6-68
P.T.O. MODE	6-71
SPEED MATCHING	6-71
ERROR CODES.....	6-72

REAR POWER TAKE-OFF

P.T.O. OPERATING PRECAUTIONS.....	6-73
CHANGING THE P.T.O. OUTPUT SHAFT	6-73
ATTACHING P.T.O. DRIVEN EQUIPMENT	6-74
P.T.O. OPERATION.....	6-75
TWO-SPEED P.T.O. SYSTEM	6-80
MULTI-SPEED, SHIFTABLE P.T.O.	6-82
EXTERNAL P.T.O. CONTROLS.....	6-84
Auto PTO operation	6-86

FRONT POWER TAKE OFF

P.T.O. OPERATION.....	6-89
-----------------------	------

AUTO P.T.O. OPERATION	6-91
FRONT HITCH FRONT HITCH MANAGEMENT	6-93

REAR HITCH

ELECTRONIC DRAFT CONTROL	6-97
SETTINGS AND DISPLAY	6-101
ELECTRONIC DRAFT CONTROL OPERATION	6-103
EXTERNAL HITCH CONTROLS	6-108

FRONT HITCH

SETTINGS AND ADJUSTMENTS	6-110
HITCH OPERATION.....	6-113
AUXILIARY FRONT COUPLERS (where fitted).....	6-119
EXTERNAL HITCH CONTROLS	6-121

ELECTRO-HYDRAULIC REMOTE CONTROL VALVES (where fitted)

REMOTE CONTROL VALVES	6-122
SETTINGS AND ADJUSTMENTS	6-129
SETTING THE REMOTE VALVE PRIORITY.....	6-134
CREATING TIMER PROGRAMMES.....	6-135
CONNECTING REMOTE CYLINDERS	6-142
OPERATING WITH REMOTE VALVES	6-144
JOYSTICK OPERATION WITH A FRONT LOADER.....	6-146
MID MOUNT REMOTE VALVES	6-149
EXTERNAL EHR CONTROLS	6-150
HYDRAULIC OIL LEVEL WHEN USING REMOTE HYDRAULIC EQUIPMENT	6-151

HYDRAULIC POWER BEYOND PORT

HYDRAULIC POWER BEYOND PORT FOR EXTERNAL SERVICES	6-153
Power beyond valve - Static description	6-153
ISO POWER BEYOND COUPLINGS	6-155

THREE POINT HITCH

ATTACHING THREE-POINT HITCH EQUIPMENT	6-156
LIFT ROD ADJUSTMENT	6-158
TOP LINK ADJUSTMENT	6-160
FLEXIBLE LINK END ADJUSTMENT	6-162
QUICK HITCH	6-163
LINKAGE STABILISER ADJUSTMENT	6-165

DRAWBARS AND TOWING ATTACHMENTS

DRAWBARS AND TOWING ATTACHMENTS	6-169
SWINGING DRAWBARS.....	6-171

TRAILER BRAKING SYSTEMS

AIR-OPERATED TRAILER BRAKES	6-174
TRAILER BRAKE BIAS CONTROL	6-178
AUXILIARY AIR SUPPLY CONNECTOR (where fitted).....	6-178
HYDRAULIC TRAILER BRAKES	6-179

WHEEL TRACK ADJUSTMENT

FRONT WHEEL TRACK ADJUSTMENT	6-180
FRONT WHEEL ALIGNMENT	6-183
STEERING STOPS	6-184
FRONT AXLE OSCILLATION STOPS	6-184
FRONT FENDER.....	6-185
REAR WHEEL TRACK ADJUSTMENT	6-187
FLANGE TYPE AXLE (where fitted)	6-187
BAR TYPE AXLE (where fitted)	6-191
DUAL REAR WHEELS (where fitted)	6-197

BALLASTING AND TYRES

BALLASTING AND TYRES	6-200
IRON WEIGHTS (where fitted)	6-203
LIQUID BALLAST	6-205
TYRE INFLATION	6-207
TYRE PRESSURES AND PERMISSIBLE LOADS	6-208

AUXILIARY POWER CONNECTIONS

DIAGNOSTIC SOCKET	6-210
TRAILER SOCKET ELECTRICAL	6-211
ELECTRICAL POWER CONNECTORS	6-212
INTERNAL POWER CONNECTORS	6-212
EXTERNAL POWER CONNECTORS	6-214

7 MAINTENANCE

GENERAL INFORMATION

INTRODUCTION	7-1
FUEL REQUIREMENT	7-2
BIODIESEL FUEL - Biodiesel fuels	7-4
ENGINE OIL CHANGE	7-6
PROTECTIVE DEVICES	7-7
LUBRICANTS AND COOLANTS	7-9
TRACTOR JACKING POINTS	7-11
GENERAL SPECIFICATIONS.....	7-12
CAPACITIES	7-13

MAINTENANCE CHART

Maintenance Chart	7-14
-------------------------	------

WHEN THE WARNING LAMP LIGHTS

CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT	7-16
DRAIN FUEL SYSTEM WATER SEPARATOR.....	7-17
CHECK BRAKE FLUID LEVEL.....	7-18

EVERY 10 HOURS OR EACH DAY

CHECK ENGINE COOLANT LEVEL.....	7-19
CHECK ENGINE OIL LEVEL.....	7-20
CHECK REMOTE CONTROL VALVE DRAIN BOTTLES	7-20

CHECK WINDSCREEN WASHER RESERVOIR	7-21
DRAIN AIR RESERVOIR ON AIR OPERATED TRAILER BRAKE	7-21

FIRST 50 HOURS

SERVICE OPERATIONS	7-22
--------------------------	------

EVERY 50 HOURS

CLEAN THE CAB AIR FILTER	7-24
CLEAN THE SCR COVER AIR DUCTS	7-26
CLEAN THE COOLER SECTION	7-27
ALL GREASE FITTINGS	7-28
CHECK FRONT AND REAR WHEEL NUTS	7-35
CHECK TYRE PRESSURES AND TYRE CONDITION	7-35

EVERY 100 HOURS

INSPECT POLY V-BELT	7-36
INSPECT COMPRESSOR DRIVE BELT	7-36

EVERY 300 HOURS

CHECK BATTERY FLUID LEVEL	7-37
CHECK TRANSMISSION/REAR AXLE AND HYDRAULIC OIL LEVEL	7-39
ADJUST HANDBRAKE	7-40
CHECK FRONT P.T.O. GEARBOX OIL LEVEL	7-40
CHECK 4WD FRONT AXLE DIFFERENTIAL AND HUBS OIL LEVEL	7-41

EVERY 600 HOURS

CHANGE ENGINE OIL AND FILTER	7-42
CHANGE FUEL PRE-FILTER AND FUEL FILTER ELEMENT	7-44
CHANGE THE ENGINE AIR CLEANER OUTER ELEMENT	7-45
CHANGE CHARGE PUMP OIL FILTER	7-46
CHANGE CHARGE PUMP AND GEAR PUMP OIL FILTER	7-47
CHECK ENGINE AIR INTAKE CONNECTIONS	7-48
CHECK TRANSMISSION OIL COOLER PIPE COUPLINGS	7-49
CLEAN DEF/ AdBlue INLINE FILTER	7-49

EVERY 1200 HOURS OR ANNUALLY

CHANGE CAB AIR FILTERS	7-50
CHANGE MAIN OIL FILTER CARTRIDGE	7-51
CHANGE TRANSMISSION/ REAR AXLE AND HYDRAULIC OIL	7-52
CHANGE 4WD DIFFERENTIAL OIL	7-53
CHANGE 4WD PLANETARY HUB OIL	7-54
CHANGE FRONT P.T.O. GEARBOX OIL	7-54
GREASE REAR AXLE SHAFT BEARING	7-55

EVERY 1200 HOURS OR EVERY 2 YEARS

CHECK BATTERY FLUID LEVEL	7-56
CHANGE DEF/ AdBlue INLINE FILTER	7-57
CHANGE ENGINE AIR CLEANER INNER ELEMENT	7-58
CHECK VALVE TAPPET CLEARANCE	7-59
CHANGE ENGINE COOLANT FLUID	7-60
CHANGE AIR BRAKE DRIER RESERVOIR	7-64
CHANGE POLY V-BELTS	7-65

EVERY 1800 HOURS OR EVERY 2 YEARS	
CHANGE ENGINE BREATHER FILTER	7-66

EVERY 3600 HOURS OR EVERY 2 YEARS	
CHANGE DEF/ AdBlue MAIN FILTER	7-67

EVERY 36 MONTHS	
SERVICE THE AIR CONDITIONER SYSTEM	7-67
CHECK BATTERY FLUID LEVEL	7-69

GENERAL MAINTENANCE	
CLEANING THE TRACTOR	7-71
FUEL SYSTEM PRE- FILTER AND WATER TRAP	7-73
BLEEDING THE FUEL INJECTION SYSTEM	7-73
CHECK BRAKE PEDAL LATCHING/UNLATCHING	7-74
ADJUST CAB SUSPENSION (where fitted)	7-75
TRANSMISSION CLUTCH CALIBRATION	7-76
Transmission - Check	7-77
HEADLIGHT AND WORKLAMP ADJUSTMENT	7-82
BULB REPLACEMENT	7-83
FUSES AND RELAYS	7-87
PROTECTING THE ELECTRONIC AND ELECTRICAL SYSTEMS DURING BATTERY CHARGING OR WELDING	7-92
BATTERY REMOVAL AND INSTALLATION	7-93

STORAGE	
TRACTOR STORAGE	7-94
PREPARATION FOR USE AFTER STORAGE	7-95

8 TROUBLESHOOTING

FAULT CODE RESOLUTION	
INTRODUCTION	8-1

ALARM(S)	
FAULT CODES AND SYMBOLS	8-2

SYMPTOM(S)	
ENGINE	8-4
TRANSMISSION	8-5
HYDRAULICS	8-5
THREE POINT HITCH	8-6
BRAKES	8-6
CAB	8-7
ELECTRICAL SYSTEM	8-7

9 SPECIFICATIONS

GENERAL DIMENSIONS	9-1
Frame - General specification	9-1
CAPACITIES	9-4
Transmission - Capacity	9-5
Front axle system - Capacity	9-5
ENGINE	9-6
TRANSMISSION	9-7
REAR POWER TAKE-OFF	9-8
FRONT POWER TAKE OFF	9-8
HYDRAULIC SYSTEM	9-9
THREE POINT HITCH	9-12
REMOTE CONTROL VALVES	9-13
THREE POINT HITCH FRONT	9-13
BRAKES.....	9-14
STEERING	9-14
ELECTRICAL EQUIPMENT	9-15
MINIMUM HARDWARE TIGHTENING TORQUES	9-16

10 ACCESSORIES

EXTERNAL REAR VIEW MIRRORS.....	10-1
AUXILIARY HEADLIGHTS	10-2
ROTATING BEACON.....	10-3
FRONT- END LOADER FIXATION POINTS	10-4

11 FORMS AND DECLARATIONS

Service record 1st 50 hour, Owner copy	11-3
Service record 1st 50 hour, Dealer copy	11-5

1 - GENERAL INFORMATION

METRIC AND IMPERIAL UNITS ABBREVIATIONS

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Area (Land area)				
	hectare	ha	acre	ac
	square meter	m²	square foot	ft²
	square millimeter	mm²	square inch	in²
Electricity				
	ampere	A	ampere	A
	volt	V	volt	V
	microfarad	μF	microfarad	μF
	ohm	Ω	ohm	Ω
Force				
	kilonewton	kN	pound	lb
	newton	N	pound	lb
Force per length				
	newton per meter	N/m	pound per foot	lb/ft
			pound per inch	lb/in
Frequency				
	megahertz	MHz	megahertz	MHz
	kilohertz	kHz	kilohertz	kHz
	hertz	Hz	hertz	Hz
Frequency - Rotational				
	revolution per minute	r/min	revolution per minute	r/min^a
		rpm		rpm
Length				
	kilometer	km	mile	mi
	meter	m	foot	ft
	centimeter	cm	inch	in
	millimeter	mm	inch	in
	micrometer	μm		
Mass				
	kilogram	kg	pound	lb
	gram	g	ounce	oz
	milligram	mg		
Mass per Mass				
	milligram per kilogram	mg/ kg		
Power				
	kilowatt	kW	horsepower	Hp
	watt	W	Btu per hour	Btu/hr
			Btu per minute	Btu/min
Pressure or stress (Force per area)				
	kilopascal	kPa	pound per square inch	psi
			inch of mercury	inHg
	pascal	Pa	inch of water	inH₂O
	megapascal	MPa	pound per square inch	psi

1 - GENERAL INFORMATION

Typical applications	Metric unit		Imperial unit	
	Name	Symbol	Name	Symbol
Temperature (other than Thermodynamic)				
	degrees Celsius	°C	degrees Fahrenheit	°F
Time				
	hour	h	hour	h
	minute	min	minute	min
	second	s	second	s
Torque (includes Bending moment, Moment of force, and Moment of a couple)				
	newton meter	N m	pound foot	lb ft
			pound foot	lb in
Velocity				
	kilometer per hour	km/h	mile per hour	mph
	meter per second	m/s	foot per second	ft/s
	millimeter per second	mm/s	inch per second	in/s
	meter per minute	m/min	foot per minute	ft/min
Volume (includes Capacity)				
	cubic meter	m³	cubic yard	yd³
				cu yd
	liter	l	cubic inch	in³
	liter	l	US gallon	US gal
			UK gallon	UK gal
			US quart	US qt
			UK quart	UK qt
	milliliter	ml	fluid ounce	fl oz
Volume per time (includes Discharge and Flow rate)				
	cubic meter per minute	m³/min	cubic foot per minute	ft³/min
	liter per minute	l/min	US gallon per minute	US gal/min
	milliliter per minute	ml/min	UK gallon per minute	UK gal/min
Sound power level and Sound pressure level				
	decibel	dB	decibel	dB

Glossary

Acronym	Definition
DEF	Diesel Exhaust Fluid
ISO	International Organization for Standardization
MSDS	Material Safety Data Sheet
NOx	Nitrogen Oxide
PPE	Personal Protective Equipment
SCR	Selective Catalytic Reduction
ULSD	Ultra Low Sulfur Diesel
%	Percent
<	Less than
>	Greater than

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com