 


NEW HOLLAND TC30

86631783 8/01

OPERATOR'S MANUAL

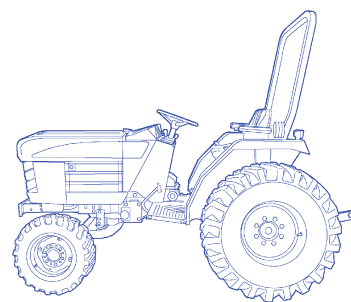

NEW HOLLAND

TO THE OWNER

This manual contains information concerning the adjustment and maintenance of your New Holland TC30 tractor. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this tractor. Please have all operators read this manual carefully and keep it available for ready reference.

This machine was designed to power and propel itself. It is intended to pull or carry tractor attachments or load and move materials when equipped with a front end loader with a variety of buckets. Only attachments recommended or approved by New Holland should be used with your tractor.

Your New Holland dealer will instruct you in the general operation of your tractor. (Refer to the "Delivery Report" at the back of this manual.) Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your tractor.

Your New Holland dealer carries a complete line of genuine New Holland service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and serial number of the engine and tractor, when ordering parts. Locate these numbers now and record them below. Refer to the "General Information" section of this manual for the location of the model and serial numbers of your tractor.

Model _____

Serial Number _____



CAUTION



This safety alert symbol indicates important safety messages in this manual. When you see this symbol, carefully read the message that follows and be alert to the possibility of personal injury or death.



CAUTION



Pictures in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.

Be certain, however, to close or replace all shielding before operating the machine.

IMPROVEMENTS

New Holland North America, Inc. is continually striving to improve its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring an obligation to make changes or additions to the equipment sold previously.

CONTENTS

SAFETY	0-5
SECTION 1 - GENERAL INFORMATION	1-1
SECTION 2 - OPERATION	2-1
SECTION 3 - LUBRICATION AND MAINTENANCE	3-1
SECTION 4 - SPECIFICATIONS	4-1
INDEX	4-11
DELIVERY SERVICE	4-13

FEDERAL EMISSIONS WARRANTY

(North America Only)

(California owner's emissions warranty is covered elsewhere)

New Holland warrants that your new 1996 and later heavy-duty off-road diesel engine was designed, built, and equipped to conform to applicable U.S. Environmental Protection Agency regulations for a period of use of five years or 3,000 hours of operation, whichever occurs first.

The new model year, class of diesel engine, and emission application determination for your engine are identified on the emission control information label affixed to the top of your engine's rocker arm cover. The warranty period begins on the date the new equipment is sold to the first retail purchaser.

Any emission control system parts which are proven defective during normal use will be repaired or replaced during the warranty period. The warranty repairs and service will be performed by any authorized New Holland dealer at the dealer's place of business, with no charge for parts or labor (including diagnosis).

As the engine owner, you are responsible to perform all the required maintenance listed in your owner's manual. New Holland will not deny an emission warranty claim solely because you have no record of maintenance; however, a claim may be denied if your failure to perform maintenance resulted in the failure of a warranted part. Receipts covering regular maintenance should be retained in the event of questions and these receipts should be passed on to each subsequent owner of the engine.

It is recommended replacement parts used for maintenance or repairs be New Holland Service Parts to maintain the quality originally designed into your emission certified engine. The use of non-New Holland parts does not invalidate the warranty on other components unless the use of such parts causes damage to warranted parts.

New Holland wishes to assure the emission control systems warranty is being properly administered. If you believe you have not received the service entitled to under this warranty, you should contact the nearest New Holland Branch Office for assistance. The address and phone number of each Branch Office is in your vehicle owner's manual. If additional assistance or information is needed, contact:

Service Department
New Holland North America, Inc.
500 Diller Avenue
New Holland, PA 17557
(717) 355-1121

Please note that the Emission Warranty does not cover:

1. Systems and parts that were not first installed on the new equipment or engine as original equipment by New Holland.
2. Part malfunctions caused by abuse, misuse, improper adjustment, modification, alteration, tampering, disconnection, improper or inadequate maintenance, or use of non-recommended fuels and lubricating oils.
3. Accident caused damage, acts of nature, or other events beyond New Holland's control.
4. Replacement of expendable items made in connection with scheduled maintenance.
5. Parts requiring replacement, inspection or adjustment maintenance intervals for reasons other than being defective.
6. Parts which are not New Holland Service Parts.
7. Loss of time, inconvenience, loss of use of equipment/engine or commercial loss.
8. Equipment with altered or disconnected hourmeter where the hours cannot be determined.
9. Equipment normally operated outside the United States.
10. Non-defective parts replaced by other than New Holland dealers.

Coverage

This emission control system warranty applies to the following emission control parts.

Fuel Injection Pump
Fuel Injectors
Turbocharger
Intake Manifold
Exhaust Manifold
Boost Pressure Tubing-connection to Aneroid Device ON F.I.P.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

PRECAUTIONARY STATEMENTS

PERSONAL SAFETY

Throughout this manual and on machine decals, you will find precautionary statements (“**DANGER**”, “**WARNING**”, and “**CAUTION**”) followed by specific instructions. These precautions are intended for the personal safety of you and those working with you. Please take the time to read them.



DANGER



This word “**DANGER**” indicates an immediate hazardous situation that, if not avoided, will result in death or serious injury. The color associated with Danger is RED.



WARNING



This word “**WARNING**” indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.



CAUTION



This word “**CAUTION**” indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

FAILURE TO FOLLOW THE “DANGER”, “WARNING”, AND “CAUTION” INSTRUCTIONS MAY RESULT IN SERIOUS BODILY INJURY OR DEATH.

MACHINE SAFETY

The precautionary statement (“**IMPORTANT**”) is followed by specific instructions. This statement is intended for machine safety.

IMPORTANT: *The word “IMPORTANT” is used to inform the reader of something he needs to know to prevent minor machine damage if a certain procedure is not followed.*

INFORMATION

NOTE: *Instructions used to identify and present supplementary information.*

SAFETY

PRECAUTIONARY STATEMENTS

A careful operator is the best operator. Most accidents can be avoided by observing certain precautions. To help prevent accidents, read and take the following precautions before operating this equipment. Equipment should be operated only by those who are responsible and instructed to do so.

Carefully review the procedures given in this manual with all operators. It is important that all operators be familiar with and Follow safety precautions.

THE TRACTOR

1. Read the Operator's Manual carefully before using the tractor. Lack of operating knowledge can lead to accidents.
2. Use an approved roll bar and seat belt for safe operation. Overturning a tractor without a roll bar can result in death or injury. If your tractor is not equipped with a roll bar and seat belt, see your New Holland Dealer.
3. Always use the seat belt. The only instance when the seat belt should not be used is if the roll bar has been removed from the tractor.
4. If a front end loader is to be installed, always use a FOPS (Falling Object Protective Structure) canopy to avoid injury from falling objects.
5. Use the handholds and step plates when getting on and off the tractor to prevent falls. Keep steps and platform cleared of mud and debris.
6. Do not permit anyone but the operator to ride on the tractor. There is no safe place for extra riders.
7. Keep all safety decals clean of dirt and grime, and replace all missing, illegible, or damaged safety decals. See the list of decals in the Decal section of this manual.
3. Keep the tractor and equipment, particularly brakes and steering, maintained in a reliable and satisfactory condition to ensure your safety and comply with legal requirements.
4. Keep open flame or cold weather starting aids away from the battery to prevent fires or explosions. Use jumper cables according to instructions to prevent sparks which could cause explosion.
5. Stop the engine before performing any service on the tractor.
6. Escaping hydraulic/diesel fluid under pressure can penetrate the skin causing serious injury. If fluid is injected into the skin, obtain medical attention immediately or gangrene may result.
 - DO NOT use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks.
 - Stop the engine and relieve pressure before connecting or disconnecting lines.
 - Tighten all connections before starting the engine or pressurizing lines.
7. Do not modify or permit anyone else to modify or alter this tractor or any of its components or functions without first consulting a New Holland Dealer.

SERVICING THE TRACTOR

1. The cooling system operates under pressure which is controlled by the radiator cap. It is dangerous to remove the cap while the system is hot. Always turn the cap slowly to the first stop and allow pressure to escape before removing the cap entirely.
2. Keep any type of open flame away from the tractor and do not smoke while refueling. Wait for the engine to cool before refueling.
8. The fuel oil in the injection system is under high pressure and can penetrate the skin. Unqualified persons should not remove or attempt to adjust a pump, injector, nozzle, or any other part of the fuel injection system. Failure to follow these instructions can result in serious injury.
9. Continuous long-term contact with used engine oil may cause skin cancer. Avoid prolonged contact with used engine oil. Wash skin promptly with soap and water.

10. Some components of your tractor, such as gaskets and friction surfaces (brake linings, clutch linings, etc.) may contain asbestos. Breathing asbestos dust is dangerous to your health. You are advised to have any maintenance or repair on such components carried out by an authorized New Holland Dealer. However, if service operations are to be undertaken on parts that contain asbestos, the essential precautions listed below must be observed:

- Work out of doors or in a well ventilated area.
- Dust found on the tractor or produced during work on the tractor should be removed by extraction, not by blowing.
- Dust waste should be dampened, placed in a sealed container, and marked to ensure safe disposal.
- If any cutting, drilling, etc. is attempted on materials containing asbestos, the item should be dampened and only hand tools or low speed power tools used.

OPERATING THE TRACTOR

1. Before starting the tractor, apply the parking brake, place the PTO lever in the "OFF" position, the lift control lever in the down position, the remote control valve levers in the neutral position, and the transmission in neutral.
2. Always sit in the tractor seat when starting the engine or operating controls. Do not start the engine or operate controls while standing beside the tractor.
3. Do not bypass the neutral start switches. Consult your New Holland Dealer if your neutral start controls malfunction. Use jumper cables only in the recommended manner. Improper use can result in tractor runaway.
4. Avoid accidental contact with the gear shift lever while the engine is running, as this can cause unexpected tractor movement.
5. Before getting off the tractor, disengage the PTO, turn the engine off, and apply the parking brake. Never get off the tractor while it is in motion.
6. Do not park the tractor on a steep incline.
7. Do not operate the tractor engine in an enclosed building without adequate ventilation. Exhaust fumes can cause death or illness.
8. If the power steering or engine ceases operating, stop the tractor immediately.

9. Pull only from the drawbar or the lower link drawbar in the down position. Use only a drawbar pin that locks in place. Pulling from the tractor rear axle or any point above the axle may cause the tractor to upset.

10. If the front end of the tractor tends to rise when heavy implements are attached to the three-point hitch, install front end or front wheel weights. Do not operate the tractor with a light front end.
11. Always set the hydraulic selector lever in position control when attaching or transporting equipment. Ensure hydraulic couplers are properly mounted and will disconnect safely in case of accidental detachment of implement.
12. Do not leave equipment in the raised position.
13. Use the flasher/turn signal lights and SMV signs when traveling on public roads both day and night (unless prohibited by law).
14. When operating at night, adjust lights to prevent blinding oncoming drivers.

DRIVING THE TRACTOR

1. Watch where you are going, especially at row ends, on roads, around trees and low hanging obstacles.
2. To avoid upsets, drive the tractor with care and at a safe speed. Use extra caution when operating over rough ground, when crossing ditches or slopes, and when turning corners.
3. To provide two-wheel braking, lock tractor brake pedals together when transporting on roads.
4. Do not coast or free wheel down hills. Use the same gear when going downhill as is used when going uphill.
5. Any towed vehicle with a total weight exceeding that of the towing tractor should be equipped with brakes for safe operation.
6. If the tractor becomes stuck or the tires become frozen to the ground, back up the tractor to prevent upset.
7. Always check overhead clearance, especially when transporting the tractor.
8. When operating at night, adjust lights to prevent blinding oncoming drivers.

OPERATING THE PTO

1. When operating PTO driven equipment, shut off the engine and wait until the PTO stops before getting off the tractor and disconnecting the equipment.
2. Do not wear loose clothing when operating the power take-off or when near rotating equipment.
3. When operating stationary PTO driven equipment, always place both gear shift levers in neutral, apply the tractor parking brake, and block the rear wheels front and back.
4. To avoid injury, do not clean, adjust, unclog, or service PTO driven equipment when the tractor engine is running.
5. Ensure the PTO master shield is installed at all times. Always replace the PTO shield cap when the PTO is not in use.

DIESEL FUEL

1. UNDER NO CIRCUMSTANCES should gasoline, alcohol, or blended fuels be added to diesel fuel. These combinations can create an increased fire or explosive hazard. Such blends are more explosive than pure gasoline in a closed container such as a fuel tank. **DO NOT USE THESE BLENDS.**
2. Never remove the fuel cap or refuel with the engine running or hot.
3. Do not smoke while refueling or when standing near fuel.
4. Maintain control of the fuel filler pipe nozzle when filling the tank.
5. Do not fill the fuel tank to capacity. Allow room for expansion.

6. Wipe up spilled fuel immediately.
7. Always tighten the fuel tank cap securely.
8. If the original fuel tank cap is lost, replace it with a New Holland approved cap. A non-approved, proprietary cap may not be safe.
9. Keep equipment clean and properly maintained.
10. Do not drive equipment near open fires.
11. Never use fuel for cleaning purposes.
12. Arrange fuel purchases so that winter grade fuels are not held over and used in the spring.

SAFETY FRAME (ROPS)

Your New Holland tractor is equipped with a safety frame. It must be maintained in a serviceable condition. Be careful when driving through doorways or working in confined spaces with low headroom.

UNDER NO CIRCUMSTANCES should you:

- modify, drill, or alter the safety frame in any way. Doing so may render you liable to legal prosecution.
- attempt to straighten or weld any part of the main frame or retaining brackets which have suffered damage. Doing so may weaken the structure and endanger your safety.
- secure any parts on the main frame or attach your safety frame with anything other than the special high tensile bolts and nuts specified.
- attach chains or ropes to the main frame for pulling purposes.
- take unnecessary risks even though your safety frame affords you the maximum protection possible.



WHEN YOU SEE THIS SYMBOL

IT MEANS:

ATTENTION!

BECOME ALERT!

YOUR SAFETY IS INVOLVED!

 
SAFETY DECALS

The following safety decals have been placed on your machine in the areas indicated. They are intended for your personal safety and for those working with you. Please take this manual and walk


around your machine to note the content and location of these warning signs. Review these warning signs and the operating instructions detailed in this manual with your machine operators.




DANGER: Explosive/Acid - Poison
PART NO: SBA390197660
LOCATION: Top of Battery

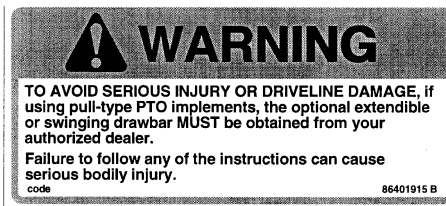

 
WARNING: Drawbar
PART NO: 86401915
LOCATION: Top PTO Shield

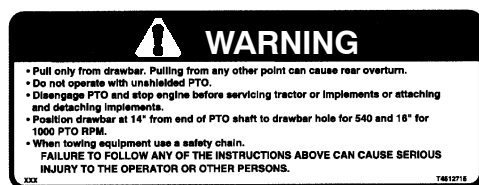

 
WARNING: Pull Only From Drawbar
PART NO: SBA390192292
LOCATION: Right Side of PTO Shield

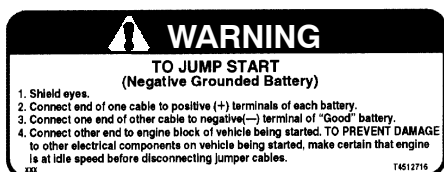

 
WARNING: To Jump Start
PART NO: SBA490990571
LOCATION: Left Side of Radiator Screen

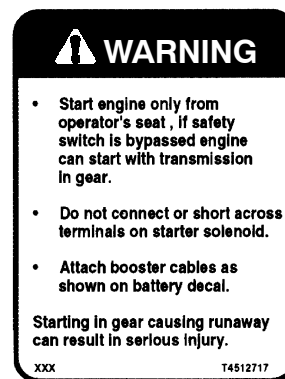

 WARNING: Start Engine Only
 From Operator's Seat
PART NO: SBA190196682
LOCATION: On Starting Motor

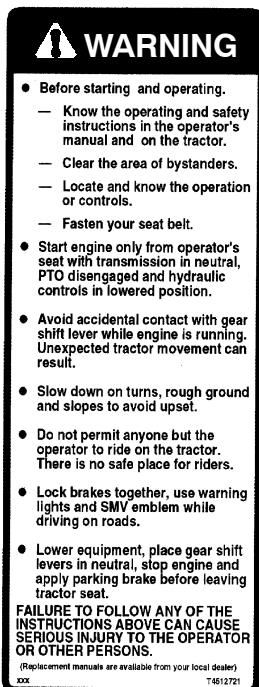

 WARNING: Before Starting and Operating
PART NO: SBA390198380
LOCATION: Center of Right Fender

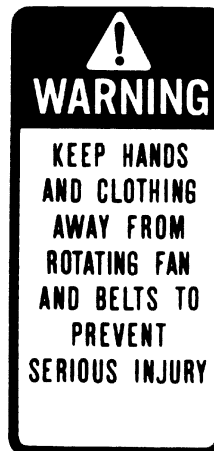

WARNING: Rotating Fan and Belts
PART NO: SBA390191352
LOCATION: Both Sides of Radiator

INSTRUCTION DECALS

 
 
Range Selector
Lever
(Manual)
PART NO:
SBA390173900
LOCATION:
Left Side Quadrant



Range Selector Lever
- Hydrostatic
PART NO:
SBA390173910
LOCATION:
On the Lever Guide




Front-Wheel
Drive Control
Lever
PART NO:
SBA390173870
LOCATION:
Below Seat Pan
Back of Lever

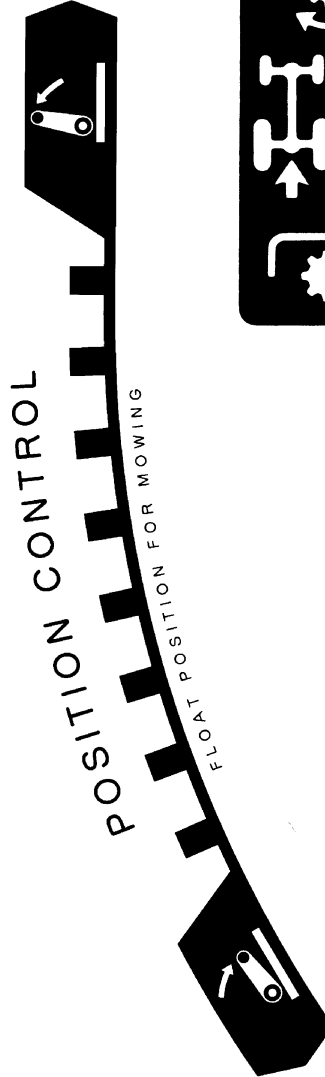
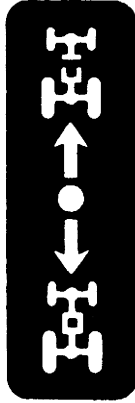


Position Control
Lever
PART NO:
SBA390372490
LOCATION:
Right Side Fender

 
PTO Control
Lever (Rear)
PART NO:
SBA390173880
LOCATION:
Inside of Left Fender

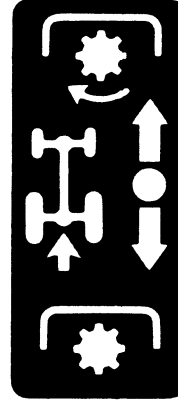

  
PTO Control
Lever (Mid)
PART NO:
SBA390173890
LOCATION:
Inside of Left Fender

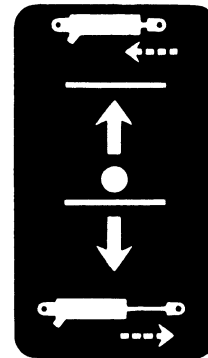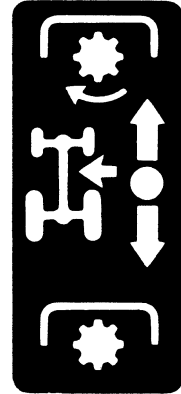

 Operating Remote
Control
Valve-Single
Spool (optional)
PART NO:
SBA390372500
LOCATION:
Right Side Quadrant

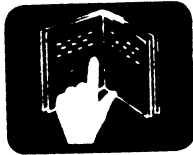

 
Hyd. Manifold Operation
 (See Operator's Manual)
 PART NO: SBA390198320
 LOCATION:
 Right-Hand Side of Hyd.
 Manifold/Air Filter Cap

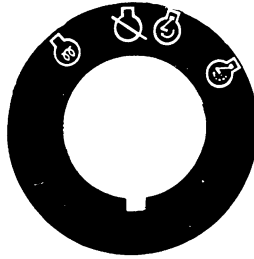

Starter Switch
 PART NO: SBA390194290
 LOCATION: Starter Switch,
 Right Side of Instrument Panel



 Engine Oil
 PART NO: SBA390230220
 LOCATION: Engine Oil
 Filler Cap

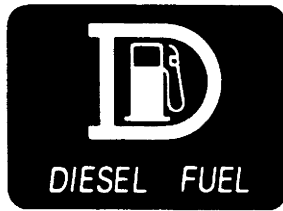

Diesel Fuel
 PART NO: SBA390198340
 LOCATION: Under the Fuel Fill Lid



Coupler-Extending
 (With double spool control valve)
 PART NO: 86532920



 
Coupler-Retracting
 (With double spool control valve)
 PART NO: 86532919



Coupler-Extending
 (With double spool control valve)
 PART NO: 86532921



Coupler-Retracting
 (With double spool control valve)
 PART NO: 86532922

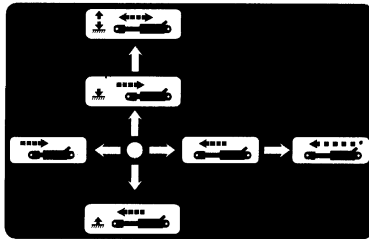

Operating Remote
 Control Valve-
 Double Spool (optional)
 PART NO:
 86532911
 LOCATION:
 Cover of 2-Spool
 Remote Valve



Power Steering Fluid
 PART NO:
 SBA390230230
 LOCATION:
 Top of P.S. Reservoir


Lubrication and
 Maintenance Intervals
 PART NO:
 SBA390198350
 LOCATION:
 Underside of Hood

WATCH YOUR PROOF METER HOURS LUBRICATION AND MAINTENANCE SERVICE INTERVALS						
LUBRICATION AND MAINTENANCE ITEM	CHECK	CLEAN	LUBE	CHANGE	ADJUST	SERVICE INTERVAL
Radiator Coolant	•					Every 10 Hours or Daily
Engine Oil Level	•					
Air Cleaner	•					
Transmission Oil Level	•					
Power Steering Oil Level	•					
Front Diff Oil Level	•					
Front Axle Oil Level	•					
Tires						
Clutch Pedal				•		
Battery					•	
Lubrication Fittings						
Steering Linkage				•		Every 50 Hours
2-Wheel Drive King Pins				•		
3-Point Linkage				•		
Pivot Shaft				•		
Pedal Shaft				•		
Brake Pedal				•		
Drive Shaft Cover				•		
H.S.T Foot Pedal Shaft				•		
Power Steering				•		
Engine Oil					•	Every 100 Hours
Engine Oil Filter					•	
Fuel Filter				•		
Air Cleaner				•		
Fuel Filter					•	Every 200 Hours
Fan Belt				•		
Brakes					•	
H.S.T Cartridge Filter					•	Every 300 Hours
Front Axle Oil					•	
Front Diff Oil					•	
Hydraulic Filter					•	
Transmission Oil					•	
Fuel Injectors					•	Every 600 Hours
Valve Clearance					•	
Front Wheel Bearings					•	
Power Steering Oil					•	
Radiator Coolant					•	Seasonal
Air Cleaner Element					•	

Refer to your Operator's Manual for additional information



 Differential Lock
PART NO: SBA390198300
LOCATION: Above Pedal

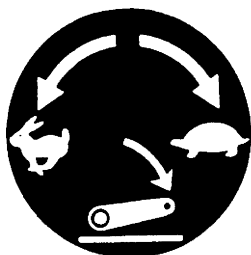

Flow Control Valve
PART NO: SBA390372470
LOCATION: Top of Flow Control Knob

IMPORTANT

- For normal operation on firm soil, hard surfaces and roading the unit, front wheel drive should be disengaged to maximize tire and driveline life and fuel economy
- Only use front wheel drive when additional traction is required while operating in loose soil, wet, slippery conditions or on slopes

IMPORTANT - For Normal Operation
PART NO: SBA390198310
LOCATION: Center Panel of Steering Column Console



 
Parking Brake
PART NO: SBA390198360
LOCATION: Center of Instrument Panel

DIESEL ENGINE OIL INFORMATION

Service Grade CD
SAE 10W30, 10W40 for year around use
OR
SAE 10W in severe cold below 32° F
SAE 20W for winter use 32° to 50° F
SAE 30W for summer use above 50° F
Change interval every 100 hours

Diesel Engine Oil Information
PART NO: SBA390198370
LOCATION: On Engine Filler Neck

SPEED SET CONTROL INSTRUCTIONS




- Before starting engine, be sure speed set control is unlocked.
- To engage speed set control
 - Attain desired speed with forward pedal.
 - Move control to "LOCK" position.
 - Tractor will maintain set speed even if pedal is released.
- Speed may be increased with forward pedal.
- To cancel speed setting or stop tractor, move control to "UNLOCK" position.
- Speed can not be locked in reverse.

Speed Set Control Instructions (optional)
PART NO: SBA390198330
LOCATION: Top of L. H. Fender

USAGE

Tractors that are to be stored for an extended period should have this part between clutch pedal and platform to prevent clutch from adhering.

 USAGE - Tractors That Are to Be Stored
PART NO: SBA390194690
LOCATION: On Clutch Pedal Spacer Block

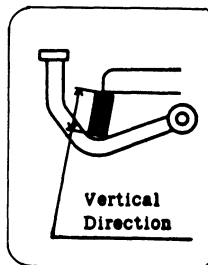

Installing Pedal Spacer
PART NO: SBA390194700
LOCATION: On Clutch Pedal Spacer Block

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com