

LX146 Loader for Value Series Tractors

MFD Axle MXM130 & MXM140

Operator's Manual

87060798

CASE *III*

TO THE OWNER

This manual contains information concerning the adjustment and maintenance of your Case IH Model LX146 Loader. You have purchased a dependable machine, but only by proper care and operation can you expect to receive the performance and long service built into this loader. Please have all operators read this manual carefully and keep it available for ready reference.

This loader was designed to be used with MXM130 & MXM140 Value Series tractors. It is intended to load and move materials with a variety of buckets and attachments.

Your Case IH dealer will instruct you in the general operation of your loader. (Refer to the "Delivery Report" at the back of this manual.) Your dealer's staff of factory-trained service technicians will be glad to answer any questions that may arise regarding the operation of your loader.

Your Case IH dealer carries a complete line of genuine Case IH service parts. These parts are manufactured and carefully inspected to insure high quality and accurate fitting of any necessary replacement parts. Be prepared to give your dealer the model and product identification number of the loader when ordering parts. Locate these numbers now and record them below. Refer to the "General Information" section of this manual for the location of the model and product identification numbers of your loader.

Model _____ Tractor Model _____

Product Identification Number _____ Tractor Product Identification Number _____



CAUTION



This safety alert symbol indicates important safety messages in this manual. When you see this symbol, carefully read the message that follows and be alert to the possibility of personal injury or death.



CAUTION



Pictures in this manual may show protective shielding open or removed to better illustrate a particular feature or adjustment.

Be certain, however, to close or replace all shielding before operating the machine.

IMPROVEMENTS

Case IH is continually striving to improve its products. We reserve the right to make improvements or changes when it becomes practical and possible to do so, without incurring any obligation to make changes or additions to the equipment sold previously.

CONTENTS

SAFETY	0-5
GENERAL INFORMATION	1-1
OPERATION.....	2-1
MAINTENANCE AND LUBRICATION	3-1
TROUBLESHOOTING	4-1
SPECIFICATIONS	5-1
INDEX	6-1
DELIVERY REPORT	7-1

CALIFORNIA
Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

PRECAUTIONARY STATEMENTS

PERSONAL SAFETY

Throughout this manual and on machine decals, you will find precautionary statements (“**DANGER**”, “**WARNING**”, and “**CAUTION**”) followed by specific instructions. These precautions are intended for the personal safety of you and those working with you. Please take the time to read them.



DANGER



This word “**DANGER**” indicates an immediate hazardous situation that, if not avoided, will result in death or serious injury. The color associated with Danger is RED.



WARNING



This word “**WARNING**” indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.



CAUTION



This word “**CAUTION**” indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

FAILURE TO FOLLOW THE “DANGER”, “WARNING”, AND “CAUTION” INSTRUCTIONS MAY RESULT IN SERIOUS BODILY INJURY OR DEATH.

MACHINE SAFETY

The precautionary statement (“**IMPORTANT**”) is followed by specific instructions. This statement is intended for machine safety.

IMPORTANT: *The word “IMPORTANT” is used to inform The reader of something he needs to know to prevent minor machine damage if a certain procedure is not followed.*

INFORMATION

NOTE: *Instructions used to identify and present supplementary information.*

SAFETY

PRECAUTIONARY STATEMENTS

A careful operator is the best operator. Most accidents can be avoided by observing certain precautions. To help prevent accidents, read the following precautions before operating this equipment. Equipment should be operated only by those who are responsible and instructed to do so.

Carefully review the procedures given in this manual with all operators. It is important that all operators be familiar with and follow safety precautions.

GENERAL

1. Read the Operator's Manual completely and thoroughly before using the tractor or loader. Lack of operating knowledge can lead to serious accidents.
2. Operate the tractor only from the operator's seat.
3. Replace damaged, missing or illegible safety decals. See the "Safety Decal" section in this manual for proper location of all safety decals.

THE TRACTOR

1. Use approved rollover protection and seat belt for safe operation. Overturning a tractor without an approved roll bar could result in serious injury or death. If the tractor is not equipped with the proper rollover protection, see your tractor dealer to obtain the proper parts. If the tractor is equipped with a cab, make certain the cab is approved for rollover protection.
2. Equip tractor with a FOPS (Falling Object Protective Structure) and seat belt before installing or operating a loader.
3. Always use the seat belt on tractors equipped with a roll bar or cab. Do not use a seat belt if operating the tractor without a roll bar or cab.
4. Add the recommended wheel ballast and/or rear weight as recommended in the tractor Operator's Manual to provide adequate stability when using a loader.
5. Position the wheels to the tractor manufacturer's widest recommended settings to increase stability.
6. Move and turn the tractor at low speeds.
7. Before starting the engine, be sure all operating controls are in the neutral or park position. This will eliminate accidental movement of the machine or start up of power driven equipment.

8. Before leaving the tractor, stop the engine, put all controls in neutral, engage the park brake and remove the key from the key switch.
9. When transporting the loader, engage the loader control neutral lock to prevent accidental cycling of the loader.

THE LOADER

1. Improper use of a loader can cause serious injury or death.
2. NEVER use the loader to lift or carry anyone with the bucket, frame, or attachment. Serious injury or death could result from falling off the tractor, loader, or attachment during transport or operation.
3. NEVER allow anyone to get under the loader bucket or attachment or to reach through the lift arms or attachment when the loader is in the raised position.
4. Do not walk or work under a raised loader, bucket or attachment unless it is securely blocked or held in position. Accidental movement of a control lever or a leak in the hydraulic system could cause the main frame to drop or attachment to dump, causing severe injury or death.
5. Make sure all dismounted loaders on park stands are on a hard level surface with a bucket or similar heavy attachment mounted (bale spear or pallet fork alone do not provide enough weight) to prevent the parked loader from falling and injuring someone or causing damage.
6. Do not repair, remove or replace any parts of the loader while in the dismounted, parked position.
7. Avoid overhead wires and obstacles when the loader is raised. Contacting overhead electrical lines can cause severe electrical burns or death from electrocution. Make certain sufficient clearance is available before raising the loader.

OPERATING THE LOADER

1. The equipment owner is responsible to make certain that all operators read this manual thoroughly and understand all safety precautions and proper operating procedures. Be certain all operators are qualified before allowing operation.
2. Always check with proper authorities for underground utilities before digging.
3. Exercise caution when operating a loader with a raised bucket or attachment.
4. Avoid loose fill, rocks and holes. These are dangerous conditions for loader operation or transport.
5. Use caution when operating on steep grades. Always carry the bucket or attachment in the lowest possible position to maintain maximum stability. Select the proper gear BEFORE attempting to travel on a steep grade. Avoid shifting on grades and never "free wheel."
6. Be sure to allow for the length of the loader when making turns or working in confined areas.
7. Stop the loader arms gradually when raising or lowering the loader.
8. Carry the bucket or attachment as low as possible to increase visibility during transport.
9. When parked or during servicing of the loader, lower the bucket or attachment to the ground, stop tractor engine, set park brake and remove the key from the key switch. Take special care to park or store attachments with sharp points or edges in a safe manner.
10. Do not operate loader controls unless properly seated in operator's seat.
11. NEVER attempt to handle large, heavy objects such as large round or rectangle bales, logs or oil drums unless specific special attachments are used. Handling such objects is not recommended without special equipment.
12. Handling large heavy objects can be dangerous due to the following:
 - danger of overturning the tractor
 - danger of upending the tractor
 - danger of the object rolling or sliding down the loader arms onto the operator

13. If the type of work in precaution #12 must be performed adhere to the following:

- always use the proper loader attachment
- never lift the load higher than necessary to clear the ground while moving
- ballast rear of tractor to compensate for weight of load
- never lift large or heavy objects with equipment that does not have an anti-rollback device
- move slowly and carefully, avoiding rough or uneven terrain

14. Loader lift capacity and break-away capacity diminish as the loader height is increased. Use care not to grasp more material than the loader is designed to handle.

MAINTENANCE

1. Always wear eye protection when servicing or repairing the loader.
2. Do not modify, alter or permit anyone else to modify or alter the loader or any of its components or functions without first consulting your dealer. Contact your dealer with questions about the loader.
3. Escaping hydraulic fluid or diesel fuel under pressure can penetrate the skin causing serious injury. To prevent serious personal injury:
 - DO NOT use your hand to check for suspected leaks under pressure
 - use a piece of cardboard or heavy paper to search for leaks
 - stop engine and relieve the pressure in the system before connecting or disconnecting hydraulic or diesel lines and fittings
 - tighten all lines and fittings before starting the engine and pressurizing system
 - if any fluid is injected into the skin, obtain medical attention IMMEDIATELY to avoid the onset of gangrene
4. DO NOT tamper with or change the relief valve settings. The relief valve is preset at manufacturer for optimum performance and safety. Changing the settings may cause overloading of the tractor hydraulic system resulting in equipment failure and/or serious operator injury.
5. When servicing or replacing the pins in the cylinder ends, bucket, etc., always use a brass drift. Failure to do so could result in equipment damage and/or personal injury due to flying metal fragments.


SAFETY DECALS

The following safety decals have been placed on your machine at the locations indicated. They are intended for your personal safety and safety of those working with you. Please take this manual and walk around your machine to note the content and location of these safety decals. Review these safety decals and the operating instructions detailed in this manual with your machine operators.

Keep all safety decals legible. If they become damaged or illegible, obtain replacements from your authorized dealer. Decal replacement part numbers are listed with each decal.



④ DANGER Decal
Part No. 86583639
Location: Backside Loader
Left Side Frame Upright

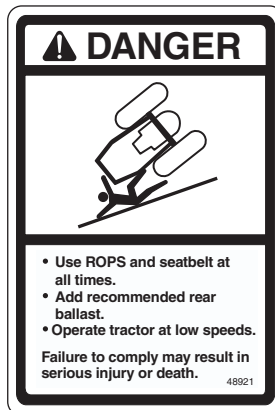


⑥ DANGER Decal
Part No. SML48921
Location: Loader Left
Side Frame Upright




③ DANGER Decal
Part No. 86581705
Location: Both Lower
Side Boom Arms



⑤ WARNING Decal
Part No. 86581706
Location: Loader Left
Side Frame Upright

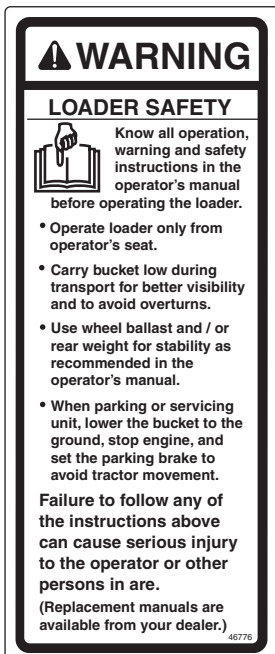

① WARNING Decal
Part No. 86581703
Location: Loader Left Side
Frame Upright

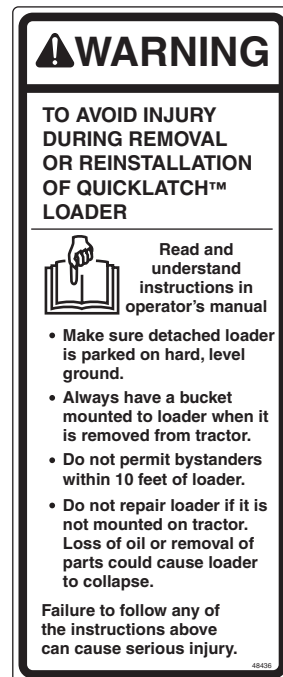

② WARNING Decal
Part No. 86583563
Location: Both Lower
Side Boom Arms

Buy Now



Our support email:

ebooklibonline@outlook.com