

Case 2096 Tractor

Operator's Manual

9-11120

Reprinted

The CASE logo is located in the bottom right corner of the page. It consists of the word "CASE" in a bold, italicized, sans-serif font, with a horizontal line underneath the letters.






THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.



2096 Tractor Operators Manual

Rac 9-11120

Written In *Clear
And
Simple
English*

J I Case
A Tenneco Company





THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

IMPORTANT

If This Machine Is Used By An Employee Or Is Loaned Or Rented, Make Certain That The Operator (s), Prior To Operating:

- 1. Is Instructed In Safe And Proper Use.**
- 2. Reviews And Understands The Manual (s) Pertaining To The Machine.**



OPERATING INSTRUCTIONS

- | | |
|---|--|
| 1. SECURELY FASTEN YOUR SEAT BELT IF THE TRACTOR HAS A ROPS. | ESPECIALLY AT ROW ENDS, ON ROADS, AND AROUND TREES. |
| 2. WHERE POSSIBLE, AVOID OPERATING THE TRACTOR NEAR DITCHES, EMBANKMENTS AND HOLES. | 6. DO NOT PERMIT OTHERS TO RIDE. |
| 3. REDUCE SPEED WHEN TURNING, CROSSING SLOPES, AND ON ROUGH, SLICK, OR MUDDY SURFACES. | 7. OPERATE THE TRACTOR SMOOTHLY- NO JERKY TURNS, STARTS, OR STOPS. |
| 4. STAY OFF SLOPES TOO STEEP FOR SAFE OPERATION. | 8. HITCH ONLY TO THE DRAWBAR AND HITCH POINTS RECOMMENDED BY TRACTOR MANUFACTURERS. |
| 5. WATCH WHERE YOU ARE GOING, | 9. WHEN TRACTOR IS STOPPED, SET BRAKES SECURELY AND USE PARK LOCK IF AVAILABLE. |

REFERENCE: OSHA TITLE 29 CFR 1928.51

TABLE OF CONTENTS

TO THE OWNER	III	OPERATING INSTRUCTIONS (Cont'd)	
SAFETY	IV-XVIII	Programming Dynamic	
Safety Rules	IV	Loaded Radius	48,49
Before Starting	IV-V	True Ground Speed	50
Operation	VI-XV	True Ground Speed Sensor	50,51
Service	XVI-XVIII	Wheel Slip Function	52,53
HAND SIGNALS	XIX-XX	Area/Hour Function	53
DECALS	XXI-XXV	Programming Attachment Width ..	54,55
SERIAL NUMBERS	1	Area Done Function	56
DIESEL ENGINE SPECIFICATIONS	2,3	English/Metric Selection	56
GENERAL SPECIFICATIONS	4-7	Operating Service Monitors	
APPROXIMATE TRACTOR SPEEDS	8	& Bar Indicators	57-62
FUEL SPECIFICATIONS	9	Instrument Cluster	
APPROXIMATE OVER ALL		Functional Checks	63
MEASUREMENTS	10,11	Automatic Shutdown System	64,65
APPROXIMATE TRANSPORT		Operating Controls	66-97
WEIGHT	10,11	Steering Console	66-69
MAXIMUM GROSS VEHICLE WEIGHT ..	10,11	Foot Pedals	68,69
TIRE AND WHEEL EQUIPMENT	12,13	Operators Console	70-76
FRONT WHEEL TREAD POSITIONS	14	Mechanical Front Drive	76
FRONT WHEEL		Park Brake Control	77
TREAD POSITIONS - MFD	15	Steering Column Tilt	78
WHEEL MOUNTING TORQUES	16	Telescopic Steering Column	78
INSTALLATION OF		Heater Stop Valve	79
STEERING STOPS - MFD	16,17	Fuel Tank Water Trap	79
TIRE SIZE ARRANGEMENTS - MFD	18	Rear View Mirrors	80
REAR WHEEL TREAD POSITIONS	19	Cab Window Lever	80
DUAL REAR WHEEL		Cab Headliner Controls	81,82
TREAD POSITIONS	20,21	Cab Air Flow Control	83
LUBRICATION	22-36	Cab Defroster Control	83
Engine Hourmeter	22	Cab Air Flow Arrangements	84-86
Engine Lubrication	23	Air Conditioner Operation	87
Lubrication Chart	24,25	Cab Door Lock	87
Engine Oil Check & Change	26,27	Operators Seat	88-91
Engine Oil Filter	28	Seat Belts	92,93
Transmission Oil Level Check & Change ..	28	Amber Warning Lamps, Direction	
Trans/Hydraulic Oil Filters	30-32	Turn Signals & SMV Symbol	94,95
Differential Oil Check & Change	33	Implement Warning Lamps	
Planetary Oil Check & Change	34	& SMV Symbol	96
Steering & Brake System Air Removal ..	35	Auxiliary Outlet Socket	97
Front Wheel Bearings	36	Starting Procedure	98,99
ALTERNATOR CHARGING SYSTEMS	37	Stopping the Engine	100
OPERATING INSTRUCTIONS	37-150	Cold Temperature Operation	101,102
Run-In Procedure	37,38	Cold Temperature Starting	103-107
Before Starting the Engine	39	Ether Starting Fluid	103,104
Towing	40	Starting Fluid	
How to Transport the Tractor	40	Container Replacement	105
Digital Instrument Cluster	41-65	Coolant Heater	106
Programming Tire Size	44-46	Oil Pan Heater	107
Programming Static		Power Shift Transmission	108,109
Loaded Radius	47	Differential Lock	110
		Power Takeoff	111-115
		Operating PTO	111
		540 or 1000 RPM PTO Operation	112
		Drawbar Position	113
		Guards	114
		Operating Safety	115

TABLE OF CONTENTS

OPERATING INSTRUCTIONS (Cont'd)

Drawbar	116
Three Point Hitch System	117
Hitch System Adjustments	118-122
Anti-Sway Chain	120
Hitch Operation	122-125
Connect Implement	122
Hitch Control Lever	122,123
Sensing Control	124,125
Stationary Depth	125
Hydraulic Float Control	125
Hitch Coupler - Category II	126
Hitch Coupler - Category II-III	127-129
Remote Hydraulic Control	130-137
Remote Control Levers	130,131
Variable Flow Control	132,133
Operating the Remote System	134
Hydraulic Motors	134
Remote Valve with Lockcheck (If Equipped)	134
Hydraulic Hose Couplers	135
Hydraulic Hose Coupling	136,137
Remote Cylinder	138
Hydraulic Cylinder Jack Pads	139
Front Axle Adjustment	140
Rear Wheel Hub Adjustment	141-143
Dual Wheel Mounting	144
Rear Tire Mounting	145
Tractor Ballast	146-150
Measuring Slip without True Ground Speed Sensor	146
Front End Weights	147
Rear Wheel Weights	148
Tire Liquid Weight	148,149
Tractor & Equipment Weight	150
PREVENTIVE MAINTENANCE	151-209
Hood & Side Panels	152
Cooling System	153-163
Pressure Cooling System	153
Reservoir Coolant Level	154
Radiator Coolant Level	154
Cleaning the Cooling System	155
Filling the Cooling System	156
Coolant Solutions	157
Grille Screens & Radiator Area	158
Thermostat Check	159
Thermostat Replacement	159-162
Fan Belt Replacement	163
General Engine Inspection	164
Fuel System	164-168
Fuel Filter Replacement	165,166
Air Removal	167,168

PREVENTIVE MAINTENANCE (Cont'd)

Air Induction System	169-179
Air Filter Service Interval	169
Air Filter	170
Air Filter Service Monitor	171
Air Filter Service	172-175
Aspirated Strata Tube Service ..	176-178
Tubes & Hoses	179
Neutral Start Switch Adjustment ..	180,181
Electrical System	182-185
Head Lamps	182
Flood Lamps	182
Flashing Amber Warning Lamps	183
Tail Lamps	183
Instrument Cluster Lamps	184
Fuse Panel - Tractor & Cab	184
Head Lamp Adjustment	185
Storage Battery	186-189
When Batteries Are Not In Use	186
Access to Batteries	187
Battery Cables & Terminals	187
Battery Water	188
Removal & Installation of Batteries ..	188
Auxiliary Battery Connections	189
Park Brake Adjustment	190
Roll Over Protective Structure (ROPS)	191-193
Tractor Roll Over	192
Safety Rules	192
ROPS Label	192
Maintenance & Inspection	193
Operators Cab	194-207
Seat Belt Inspection & Maintenance	194
Preventive Maintenance	195,196
Air Filter Service	197-199
Operators Seat	200,201
Refrigerant Check	202,203
Compressor Belt Check & Adjustment	204
Compressor Belt Replacement	205
Dome Lamp	206
Console Lamp	207
Valve Tappet Adjustment	208,209
CASE TECHNICAL MANUALS	211

TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with J I Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

Your Authorized Case Dealer



Figure 1

NOTE: *When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.*

Buy Now



Our support email:

ebooklibonline@outlook.com