Maxxum Tractors

Don 9-13755

5120-5130-5140-5150



THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

IMPORTANT

If This Machine Is Used By An Employee Or Is Loaned Or Rented, Make Certain That The Operator(s), Prior To Operating:

- 1. Is Instructed In Safe And Proper Use.
- 2. Reviews And Understands The Manual(s) Pertaining To The Machine.

Maxxum Tractors

Supplement to Operators Manual 9-13755

Don 9- 13755 S1

IMPORTANT: This supplement contains additional information and changes to the machine since the Operators Manual was last revised.

- 1. Isspro Digital Instrument Cluster.
- 2. Auto Hitch Operation and Adjustment.
- 3. Height Adjustable Trailer Hitches.
- 4. Left Hand Stabilizer.
- 5. Front 3 Point Hitch Top Link Adjustment.
- 6. Additional Tires.
- 7. Lubrication and Maintance.
- 8. Bulb and Lamp Replacement.



THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

IMPORTANT

If this Machine Is Used By An Employee Or Is Loaned Or Rented, Make certain That The Operator(s), Prior To Operating:

- 1. Is Instructed In Safe And Proper Use.
- 2. Reviews And Understands The Manual(s) Pertaining To The Machine.

TO THE OWNER

Use this manual as your guide. See the Detail Index on page 38. If you follow the instructions given in this manual, your tractor will work well for many years.

Your Dealer can give you assistance with Case Corporation made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Dealer if you need any assistance or information.

MODEL 5150 TRACTOR With Mechanical Front Drive (MFD)




NOTE: The right and left of the tractor in this manual are the same as your right and left when sitting in the tractor seat looking forward.

Operators Manual Storage

Always keep the operators manual in the storage compartment provided on your tractor. The operators manual must be available for use by all operators.



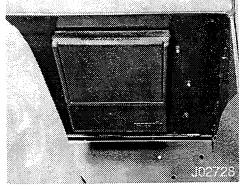

CAB TRACTOR

ROPS TRACTOR


⚠ GENERAL SAFETY AND ACCIDENT ⚠ PREVENTION REGULATIONS

• Start the engine and drive the tractor only from the operator's seat.

⚠ LEAVING THE TRACTOR ⚠

- When leaving the tractor, stop the engine. Make sure that the tractor will not roll away (apply park lock, use a wheel wedge).
- Lower implement or equipment to the ground before leaving the tractor.
- Put all controls into neutral and stop the engine. Remove the key from the keyswitch and lock the operator's cab (when equipped).
- Never leave the tractor unattended as long as the engine is still running.
- Never leave the operator's platform/cab whilst the tractor is in motion.


⚠ SAFETY DECALS **⚠**

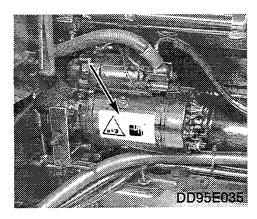




180543A1


ONLY START THE ENGINE FROM THE OPERATORS SEAT

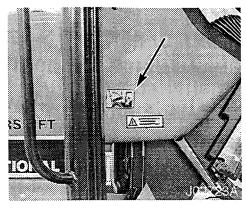

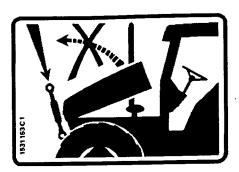


1531153C1

 
MAKE SURE THE TOP LINK OF THE FRONT HITCH IS IN THE STORAGE POSITION (DOWN) BEFORE OPENING THE HOOD

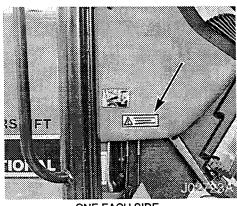






197820A1

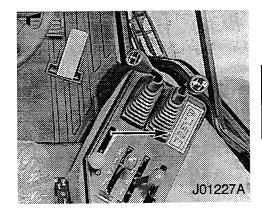

 

197833A1



Our support email: ebooklibonline@outlook.com