# 9150 Tractor Operators Manual

9-15300

Reprinted





This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

# BEFORE THE OPERATOR STARTS THE ENGINE:

- 1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
- 2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

- 1. READ THE OPERATOR'S MANUAL.
- 2. READ ALL SAFETY DECALS ON THE MACHINE.
- 3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

# TO THE OWNER OF A CASE IH TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case IH tractor will work well for many years.

Your dealer can give you assistance with CASE CORPORATION made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your dealer if you need any assistance or information.

### Your Authorized Case IH Dealer

# **MODEL 9150 TRACTOR**



**NOTE**: When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.

TO THE OWNER\_



# **GENERAL TABLE OF CONTENTS**

Safety/Decals	. 6
Specifications	17
Instruments/Controls	23
Operating Instructions	53
Field Operation	84
Tires/Wheels/Spacing/Ballast	18
Lubrication/Maintenance Charts	40
Lubrication/Filters/Fluids	44
Maintenance/Adjustments1	77
Electrical System	93
Storage	08

IDE	TIA	IFIC.	۸т		NII	INA	REE	20
IIJE	:INI:	ロコレル	41	IUIN	INL	ועוע	DEF	10


# **SERIAL NUMBERS**

When ordering parts or when requesting information or assistance always give the model and serial number of your tractor.


Write the model and serial numbers of your tractor on the lines below.

- 1. TRACTOR MODEL NUMBER\_\_\_\_\_
- 2. PRODUCT IDENTIFICATION NUMBER\_\_\_\_\_
- 3. ENGINE SERIAL NUMBER \_\_\_\_\_
- 4. TRANSMISSION SERIAL NUMBER\_\_\_\_\_\_
- 5. CAB OR ROPS SERIAL NUMBER\_\_\_\_\_
- 6. AXLE SERIAL NUMBER FRONT\_\_\_\_\_\_
- 7. AXLE SERIAL NUMBER REAR\_\_\_\_\_

# Serial Number Locations

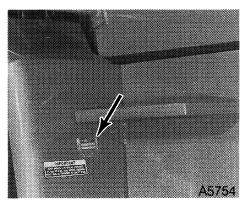


TRACTOR MODEL AND PRODUCT IDENTIFICATION NUMBERS

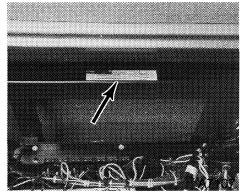


**ROPS SERIAL NUMBER** 


# **IDENTIFICATION NUMBERS\_**

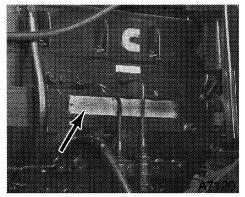


**ENGINE SERIAL NUMBER** 

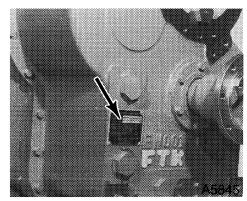


TRANSMISSION SERIAL NUMBER

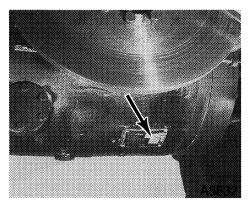


AXLE SERIAL NUMBER
ADJUSTABLE BAR TYPE - FRONT

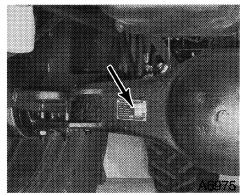

AXLE SERIAL NUMBER NON-ADJUSTABLE - FRONT

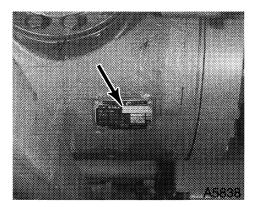

AXLE SERIAL NUMBER ADJUSTABLE BAR TYPE - REAR

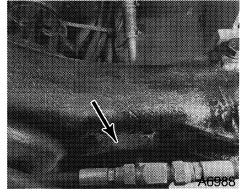

AXLE SERIAL NUMBER NON-ADJUSTABLE - REAR

# SECTION INDEX

Center Hinge Locking Bar	14
Decals	10
Roll Over Protective Structure (ROPS)  ROPS Label  Safety Rules  Tractor Roll Over	16 16
Safety	.7
Safety Rules	7



Our support email: ebooklibonline@outlook.com