

TO THE OWNER \_\_\_\_\_


## TO THE OWNER OF A CASE INTERNATIONAL TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case International tractor will work well for many years.

Your dealer can give you assistance with J I Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Dealer if you need any assistance or information.

*Your Authorized Case IH Dealer*

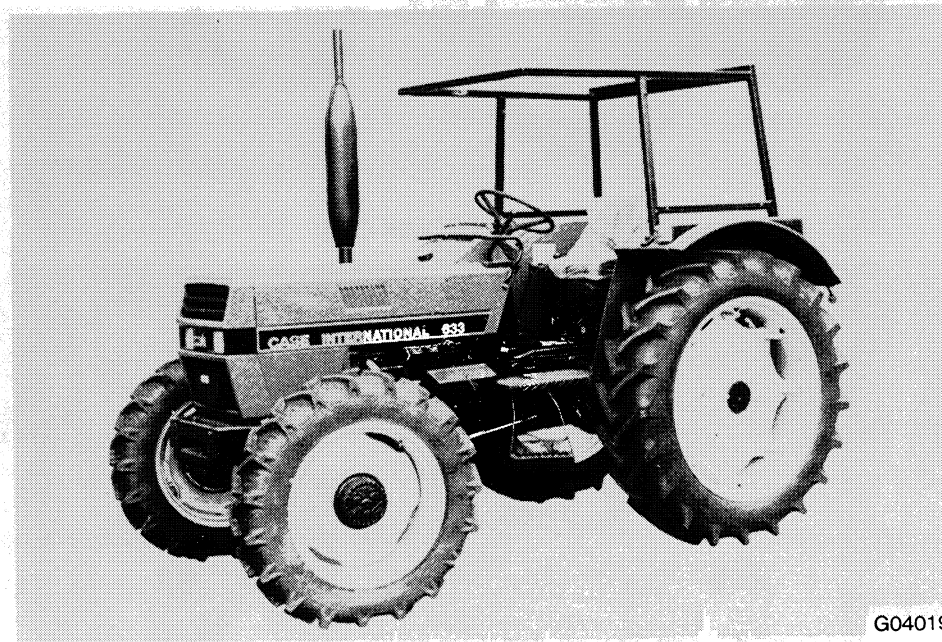

G04019

TRACTOR WITHOUT CAB

**NOTE:** *Right hand and left hand of the tractor used in this manual, are the same as your right hand and left hand, when you are in the seat looking forward.*

TO THE OWNER \_\_\_\_\_



G17017

TRACTOR WITH COMBI CAB



G16028

TRACTOR WITH SILENT 85 CAB

TO THE OWNER \_\_\_\_\_



G15026

TRACTOR WITH LOW PROFILE CAB

IDENTIFICATION NUMBERS \_\_\_\_\_

## SERIAL NUMBERS


This manual gives the operating and maintenance instructions for the present 33 series of agricultural tractors.

When in need of service parts always quote the tractor, transmission unit, and engine serial numbers, including prefix and suffix letters.

For ready reference write the serial numbers of your machine in the chart below.

If information is required that is not available in this manual see the nearest Authorized Case Dealer.

### Serial Number Location

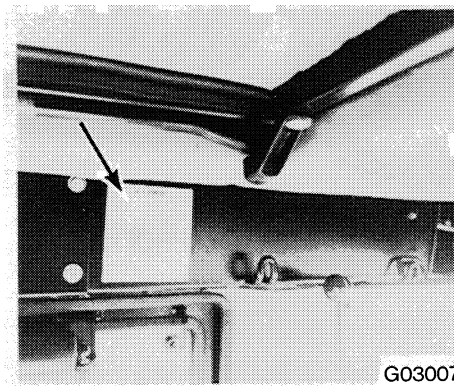

GENERAL SERIAL PLATE

ENGINE No.		
HYDRAULICS No.		
TRANSMISSION No.		
CAB TYPE A. SERIAL No.		
TRANSMISSION:SPECIFICATION LIST No.		
FOUR WHEEL DRIVE	SERIAL No.	
	SPECIFICATION LIST No.	
FRONT DRIVE AXLE	TYPE	
	SERIAL No.	
	SPECIFICATION LIST No.	

## GENERAL TABLE OF CONTENTS

To the Owner .....	1	
Identification Numbers .....	4	
Safety/Decals .....	7	
Specifications .....	13	
Instruments/Controls .....	47	
Operating Instructions .....	63	
Field Operation .....	97	
Lubrication/Filters/Fluids .....	113	
Maintenance/Adjustments .....	135	
Electrical System .....	157	
Storage .....	165	

## SECTION INDEX

Decals .....	12	Leaving the tractor .....	10
Intended use .....	8	Operation .....	10
Basic rule .....	11	PTO Operation .....	11
General safety and accident prevention regulations .....	9	Service .....	11
Implements .....	10	Transporting passengers .....	9
		Safety .....	8

## SAFETY/DECALS

---



Understand that your safety and the safety of other persons, is measured by how you service and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING WORK.**

READ THIS MANUAL COMPLETELY and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering and load characteristics of the machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs or national and local laws. Make sure your machine has the correct equipment required by local laws and regulations.

J I Case is continuing to work for your safety by making tractors with better protection and by giving these rules for safe operation.



**THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.**



This Case I H tractor is designed solely for use in customary agricultural or similar operation (“intended use”).

Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for any damage or injury resulting from this misuse and these risks must be born solely by the user.

Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

This Case I H tractor should be operated, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention).

The accident prevention regulations, all other generally recognised regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.

Any arbitrary modifications carried out on the tractor will relieve the manufacturer of all liability for any resulting damage or injury.



## General Safety and Accident Prevention Regulations



1. In addition to the instructions contained in this operator's manual, also observe the general safety and accident prevention regulations.
2. Always comply with local traffic regulations when driving on public roads.
3. Before starting work, familiarize yourself with all the controls and instruments and their functions. During work is too late.
4. Start the engine only from the operator's seat.  
Never attempt to start engine by shorting across the starting motor terminals as the machine may immediately start to move.
5. Before moving away, always check the immediate vicinity of the machine (e.g. for children). Ensure adequate visibility.
6. Never run the engine in a closed building.
7. Clothing worn by the operator must be close-fitting. Avoid wearing loose jackets, shirts or ties.
8. Handle fuel with care as it is highly flammable. Never refuel the machine in the vicinity of naked flames or sparks. Do not smoke during refuelling.
9. Always stop the engine and remove the main switch key before refuelling. Fill fuel tank outdoors. Clean up any spilled fuel immediately.
10. Prevent fires by keeping the machine clean.
11. Take care when handling brake fluid and battery acid (toxic and corrosive).



## Transporting Passengers



12. Passengers may only be carried if a proper passenger seat is fitted.
13. The carrying of passengers is otherwise not permitted.



**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)