430/530 Tractor

Operators Manual

9-1914

Reprinted





This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

- 1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
- 2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

- 1. READ THE OPERATOR'S MANUAL.
- 2. READ ALL SAFETY DECALS ON THE MACHINE.
- 3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

© 1995 Case Corporation

CASE and IH are registered trade marks of Case Corporation

CASE TECHNICAL MANUALS

Manuals are available from your Dealer for the operation, service and repair of your machine. For prompt convenient service, contact your Dealer for assistance in obtaining the manuals for your machine.

Your Dealer can expedite your order for operators manuals, parts catalogs, service manuals and maintenance records.

Always give the Machine Name, Model and P.I.N. (product identification number) or S.N. (serial number) or your machine so your Dealer can provide the correct manuals for your machine.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

AFTER DELIVERY CHECKUP

(Owner's Name)	(Date Checkup Performed)
(Owner's Address)	
(Dealership)	(Town)
Tractor has been amounted how	
Tractor has been operatedhour	(Tractor Model and Serial Number)
☐ Crankcase Oil (Change oil and filter).	☐ Steering Axle Toe In and Wheel Bearing Adjustments.
☐ Cooling System.	☐ Full Governed No Load Engine
☐ Tighten Cylinder Head Bolts and	Speed and Low Idle Speed.
Adjust Tappets. ☐ Fuel Injection Pump Timing.	☐ Brakes.
☐ Fuel Filtering System.	☐ Operate all Controls.
☐ Fuer Fintering System. ☐ Distributor Timing.	☐ Operation of Instruments.
☐ Spark Plugs and Distributor	☐ Traction Clutch Adjustment.
Point Gap.	□ PTO Clutch Adjustment (If so
☐ Electrical System.	equipped).
☐ Air Cleaner and Breathers.	 ☐ Oil Level in Transmission, Torque Tube and Hydraulic
☐ Lubricate all Pressure Fittings.	Systems.
☐ Tire Pressure.	☐ Hydraulic System and Pressure.
☐ Tighten all Bolts.	\square Belt Adjustments.
— — — -	ly concerning his experience with tractor concerning maintenance or operation that
Chec	
	Performed by
Signe	Dealer
	⊅ easea
Original — Dealer Duplicate — Leave in Operators Manua Signe	Customer

AFTER DELIVERY CHECKUP

	_	
(Owner's Name)		(Date Checkup Performed)
(Owner's Address)		
(Dealership)		(Town)
Tractor has been operated	_hours	(Tractor Model and Serial Number)
☐ Crankcase Oil (Change oil a filter).	ind	☐ Steering Axle Toe In and Wheel Bearing Adjustments.
☐ Cooling System.☐ Tighten Cylinder Head Bolts a	ınd	☐ Full Governed No Load Engine Speed and Low Idle Speed.
Adjust Tappets. Tuel Injection Pump Timing.		□ Brakes.□ Operate all Controls.
☐ Fuel Filtering System. ☐ Distributor Timing.		☐ Operation of Instruments.☐ Traction Clutch Adjustment.
☐ Spark Plugs and DistributorPoint Gap.☐ Electrical System.		☐ PTO Clutch Adjustment (If so equipped).
☐ Air Cleaner and Breathers. ☐ Lubricate all Pressure Fittings		☐ Oil Level in Transmission, Torque Tube and Hydraulic Systems.
☐ Tire Pressure.		☐ Hydraulic System and Pressure.
☐ Tighten all Bolts.		☐ Belt Adjustments.
		concerning his experience with tractor ncerning maintenance or operation that
	Checku	upPerformed by
	Signed_	Dealer
Original — Dealer Ouplicate — Leave in Operators Manua for Purchaser	Signed_	Customer

TO THE PURCHASER OF A CASE TRACTOR

The care you give your new Case Tractor will greatly determine the satisfaction and service life you will obtain from it. Use this manual as your guide. By observing the instructions and suggestions in this manual, your Case Tractor will serve you well for many years.

As an Authorized Case Dealer, we stock Genuine Case Parts, which are manufactured with the same precision and skill as the original equipment. Our factory trained staff is kept well informed on the best methods of servicing Case equipment and is ready and able to help you.

Should you require additional aid or information, contact us.

Your Authorized Case Dealer



HI FOLKS!-I'm Sammy Safety. Look for me to point out important Safety Precautions

To insure efficient and prompt service, please furnish us with the Model, Serial and Engine Numbers of your Tractor in all correspondence or contacts.

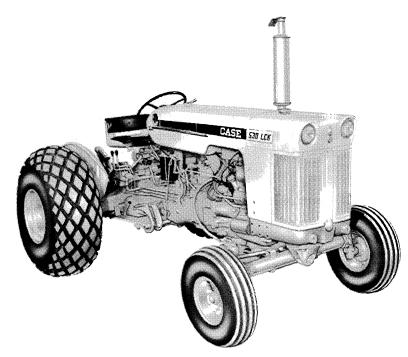


Figure 1. Low Center King Tractor

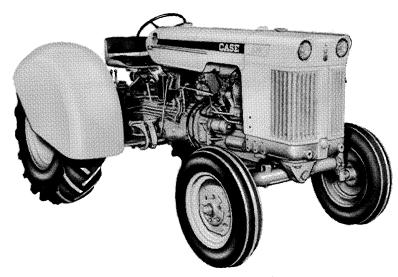


Figure 2. Standard Tractor w/Grove Fenders

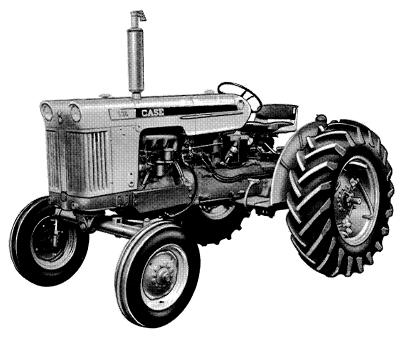


Figure 3. General Purpose Tractor w/adj.Front Axle



Figure 4. Standard Tractor

SERIAL NUMBER

When ordering parts from your Authorized Case Dealer in all contacts or correspondence with your dealer relative to the Tractor always specify the Serial, Model and Engine Numbers of your Tractor.

The Model and Serial Numbers are stamped on the number plate located on the instrument panel. See Figure 5. The Engine Number is stamped on a plate fastened to the right hand side of the engine below the starting motor, Figure 6.







Figure 5

Figure 6

NOTE The terms "Right Hand" and "Left Hand" whenever used in this manual apply to the tractor when facing in the direction the tractor will move in forward operation.

For reference, fill in the Serial Number, Model Number and Engine Number of your Tractor in the spaces provided below.

Model Number

Engine Number

Serial Number

Model Designations

Abbreviations

430,	440,	530	and	1 540) -	- Sta	andard	Std.
431,	441,	531	and	541		Gene:	ral Purpose	GP
435,	445,	535	and	545		Low	Center King	Contract LCK

188 diesel engine

SPECIFICATIONS

General

Type "Case "Ope 4 Cyl Valve	e in Head.
Firing Order	1-3-4-2 3-13/16" 1-3-4-1/8" 1-3-13/16" 1-3-1/8" 1-3-1/8 Cu. In. 17.5 to 1 18.5 Cu. In. 19.6 RPM 17.6 RPM 17.6 RPM 18.6 RPM 18.6 RPM 19.7 RPM 19.8 RPM
Compression Rings Oil Rings Piston Pins Connecting Rod Bearings	2 Full Floating TypeReplaceable Precision Steel Back Aluminum Liners.
Main Bearings	
Number of Main Bearings Type Bearings	

^{*}Hot Settings Are Made At Low Idle After the Engine has Operated At Thermostat Control Temperature For at Least Fifteen Minutes.

Engine Lubricating System

Oil Pressure ----- 50 to 70 Lbs. with Engine Warm and Operating at Full Governed RPM.

Type System ----- Gear Type Pump With Floating Intake Screen.

Fuel System

Fuel Injection Pump
Fuel Transfer Pump Vane Type (Integral Part of Injection Pump)
Governor Mechanical, Flyweight, (Integral Part of Injection Pump).
Primary Fuel Filter Replaceable Element Type Final Filter Replaceable Filter Type Fuel Gauge (530 Series) Electrical, Located on Instrument Panel Fuel Tank Capacity (430 Series)

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com