

**3210, 3220, 3230,
4210, 4220, 4230 and 4240 Tractors**

Don 9-24844

TRIM THIS EDGE

TRIM THIS EDGE

RIGHT PAGE



THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

Safety Decals on this machine use the words **Danger**, **Warning** or **Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazard situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

TRIM THIS EDGE



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clear the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

TRIM THIS EDGE

LEFT PAGE

GENERAL TABLE OF CONTENTS

TO THE OWNER	1
IDENTIFICATION NUMBERS	4
SAFETY/DECALS	7
INTENDED USE	7
GENERAL SAFETY AND ACCIDENT PREVENTION REGULATIONS	8
TRANSPORTING PASSENGERS	8
OPERATION	8
LEAVING THE TRACTOR	9
IMPLEMENTS	9
PTO OPERATION	9
SERVICE	10
BASIC RULE	10
MOUNTING AND DISMOUNTING THE TRACTOR	11
SAFETY DECALS	12
ROLL OVER PROTECTIVE STRUCTURE (ROPS)	18
INSTRUMENTS/CONTROLS	20
DIGITAL INSTRUMENT CLUSTER	22
OPERATING CONTROLS (XL CAB, LP CAB, PLATFORM)	26
OPERATING CONTROLS (NON-CAB TRACTORS)	42
OPERATORS SEAT	49
OPERATING INSTRUCTIONS	52
BEFORE STARTING THE ENGINE	52
SERVICE INDICATOR LAMPS AND GAUGES	53
RUN IN PROCEDURE	53
SEAT BELT (IF EQUIPPED)	55
NORMAL STARTING PROCEDURE	56
STOPPING THE ENGINE	58
COLD TEMPERATURE OPERATION	59
TOWING THE TRACTOR	63
HOW TO TRANSPORT THE TRACTOR	64
TRANSMISSION OPERATING INSTRUCTIONS	65
DIFFERENTIAL LOCK	74
MFD OPERATION	75
CAB AIR FLOW ARRANGEMENTS (XL CAB)	76
AIR CONDITIONER OPERATION	79

TRIM THIS EDGE

CAB AIR FLOW ARRANGEMENTS (LOW PROFILE CAB)	80
POWER TAKEOFF (PTO)	81
DRAWBAR OPERATION	88
COMBINED AUTO HITCH AND 2 PIECE DRAWBAR	89
HEIGHT ADJUSTABLE TRAILER HITCH	91
TRAILER/IMPLEMENT DRAWBAR DIMENSIONS	94
TRACTOR WARNING LAMPS AND DIRECTION TURN SIGNALS	95

FIELD OPERATION	97
DRAWBAR PREPARATION	97
THREE POINT HITCH SYSTEM PREPARATION	99
THREE POINT HITCH OPERATION	108
FRONT HITCH PREPARATION	114
REMOTE HYDRAULICS OPERATION	116
AUXILIARY POWER CONNECTIONS	121
DIGITAL INSTRUMENT CLUSTER PROGRAMMING	123
HOURMETER	133
IMPLEMENT MONITOR	135
ROPS FRAME	136

TIRES/WHEELS/SPACING/BALLAST	137
TIRE AND WHEEL EQUIPMENT	137
TIRE PRESSURES AND LOAD CAPACITIES	139
TIRE AND WHEEL SERVICE	143
FRONT TO REAR TIRE SIZE COMBINATIONS	143
FRONT WHEEL TREAD POSITIONS	144
REAR WHEEL TREAD POSITIONS	147
TOE-IN SETTING	149
WHEEL BOLT TORQUES	151
MFD AXLE STEERING STOP ADJUSTMENT	153
MFD AXLE OSCILLATION STOPS	154
FRONT WHEEL FENDERS	157
TRACTOR BALLAST	158

LUBRICATION/FILTERS/FLUIDS	168
HOURMETER	168
LUBRICATION/MAINTENANCE CHART	169
LUBRICATION/MAINTENANCE CHART	170
HOOD AND SIDE COVERS	171
GREASE POINTS	174
CAPACITIES	176
ENGINE LUBRICATION	177
FUEL SYSTEM	181
COOLING SYSTEM	188
AIR INDUCTION SYSTEM	193
TRANSMISSION LUBRICATION	197

II

TRIM THIS EDGE

LEFT PAGE

TRIM THIS EDGE

MECHANICAL FRONT DRIVE (MFD) AXLE	200
2WD FRONT WHEEL BEARINGS	202
FRONT PTO LUBRICATION	203
OPERATORS CAB	204
MAINTENANCE/ADJUSTMENTS	209
COOLING SYSTEM	209
FAN/ALTERNATOR BELT AND COMPRESSOR BELT	210
OPERATORS CAB	211
BRAKES	213
ENGINE CLUTCH	222
ADJUSTING THE AUTOMATIC HITCH	227
VALVE CLEARANCES	228
ELECTRICAL SYSTEM	229
SPECIFICATIONS	229
GENERAL SERVICE INFORMATION	230
FUSES	232
BATTERY	234
BULB AND LAMP REPLACEMENT	238
MACHINE STORAGE	245
SPECIFICATIONS	247
GENERAL MACHINE	247
DIESEL ENGINE	250
TRAVEL SPEEDS	255
SPEED CHART ADJUSTMENT FOR ALTERNATIVE TIRES	260
APPROXIMATE TRACTOR MEASUREMENTS	261
APPROXIMATE TRACTOR WEIGHTS	269
NOISE LEVELS	272
DETAIL INDEX	249

TRIM THIS EDGE

III

TRIM THIS EDGE

RIGHT PAGE

TO THE OWNER

4240 TRACTOR
With Mechanical Front Drive (MFD) and
Low Profile Cab



DD96F162

TRIM THIS EDGE

Dealer Stamp



Manufacturer:

CASE UNITED KINGDOM LIMITED
Wheatley Hall Road
Doncaster
South Yorkshire
DN2 4PG
ENGLAND



NOTE: *This operators manual replaces the previous operators manual 9-24843.*

TRIM THIS EDGE

RIGHT PAGE

TO THE OWNER

This manual contains important information about the safe operation, adjustment and maintenance of your Case Tractor. Refer to the Detail Index at the end of this manual for locating specific items about your tractor.

The right and left of the tractor in this manual are the same as your right and left when sitting in the tractor seat looking forward.


DO NOT operate or permit anyone to operate or service this tractor until you or the other persons have read this manual. Use only trained operators who have demonstrated the ability to operate and service this tractor correctly and safely.

This tractor, with standard equipment and authorized attachments, is intended to be used for farming, etc.

DO NOT use this tractor for any application or purpose other than those described in this manual. Consult an authorized dealer or the Case Corporation on changes, additions or modifications that can be required for this tractor to comply with various country regulations and safety requirements. Unauthorized modifications will cause serious injury or death. Anyone making such unauthorized modifications is responsible for the consequences.

The Operators Manual is stored in the manual compartment equipped on this tractor. Make sure this manual is complete and in good condition. Contact your dealer to obtain additional manuals. Contact your dealer for any further information or assistance about your tractor. Your dealer has technicians with special training that know the best methods of repair and maintenance for your tractor.

IMPORTANT: *This operators manual is part of your tractor. If the tractor is sold, loaned or rented the operators manual MUST go with it.*

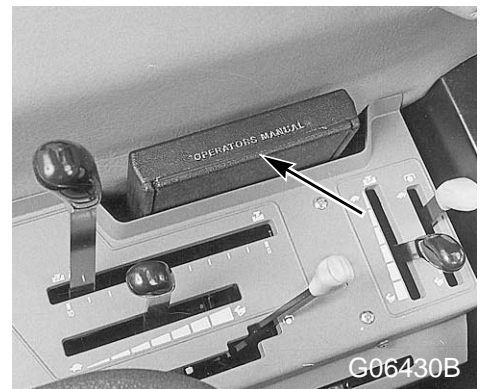

OPERATORS MANUAL STORAGE

TRIM THIS EDGE

Official Justifying Documents

Declaration of Conformity

This tractor complies with the provisions of directive (89/336/EEC) :

- Electromagnetic Compatibility

TRIM THIS EDGE

Buy Now



Our support email:

ebooklibonline@outlook.com