

3200 - 4200
Series Tractors
Operators Manual

Don 9-24854

Reprinted





THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazard situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clear the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

CASE TECHNICAL MANUALS

Manuals are available from your Dealer for the operation, service and repair of your machine. For prompt convenient service, contact your Dealer for assistance in obtaining the manuals for your machine.

Your Dealer can expedite your order for operators manuals, parts catalogs, service manuals and maintenance records.

Always give the Machine Name, Model and P.I.N. (product identification number) or S.N. (serial number) of your machine so your Dealer can provide the correct manuals for your machine.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects, and other reproductive harm.

GENERAL TABLE OF CONTENTS

TO THE OWNER	1
IDENTIFICATION NUMBERS	4
SAFETY/DECALS	7
SAFETY RULES	7
MOUNTING AND DISMOUNTING THE TRACTOR	11
SAFETY DECALS	12
ROLL OVER PROTECTIVE STRUCTURE (ROPS)	17
INSTRUMENTS/CONTROLS	19
DIGITAL INSTRUMENT CLUSTER	21
OPERATING CONTROLS (Tractors with Cab)	24
REAR VIEW MIRRORS	35
ROOF HATCH	35
REAR WINDOW	36
CAB DOOR LOCK	36
OPERATING CONTROLS (Non-Cab Tractors)	37
OPERATORS SEAT	45
OPERATING INSTRUCTIONS	46
BEFORE STARTING THE ENGINE	46
SERVICE INDICATOR LAMPS AND GAUGES	47
RUN IN PROCEDURE	47
SEAT BELT	49
NORMAL STARTING PROCEDURE	50
STOPPING THE ENGINE	52
PARKING THE TRACTOR	53
COLD TEMPERATURE OPERATION	54
TOWING THE TRACTOR	61
HOW TO TRANSPORT THE TRACTOR	62
TRANSMISSION OPERATING INSTRUCTIONS	63
DIFFERENTIAL LOCK	73
MFD OPERATION	74
CAB AIR FLOW ARRANGEMENTS (XL CAB)	75
AIR CONDITIONER OPERATION	78
POWER TAKEOFF (PTO)	79
DRAWBAR OPERATION	85
TRACTOR WARNING LAMPS AND DIRECTION TURN SIGNALS	86

TRIM THIS EDGE

FIELD OPERATION	89
DRAWBAR PREPARATION	89
THREE POINT HITCH SYSTEM PREPARATION	91
THREE POINT HITCH OPERATION	100
REMOTE HYDRAULICS OPERATION	105
AUXILIARY POWER CONNECTIONS	110
DIGITAL INSTRUMENT CLUSTER PROGRAMMING	111
HOURMETER	122
IMPLEMENT MONITOR	123
ROPS FRAME	124
TIRES/WHEELS/SPACING/BALLAST	125
TIRE AND WHEEL EQUIPMENT	125
TIRE PRESSURES AND LOAD CAPACITIES	127
TIRE AND WHEEL SERVICE	131
FRONT TO REAR TIRE SIZE COMBINATIONS	132
FRONT WHEEL TREAD POSITIONS	134
REAR WHEEL TREAD POSITIONS	138
TOE-IN SETTING	144
WHEEL BOLT TORQUES	146
MFD AXLE STEERING STOP ADJUSTMENT	148
MFD AXLE OSCILLATION STOPS.....	149
FRONT WHEEL FENDERS	152
TRACTOR BALLAST	153
LUBRICATION/FILTERS/FLUIDS	162
HOURMETER	162
SYSTEMGARD LUBRICATION ANALYSIS PROGRAM	163
LUBRICATION/MAINTENANCE CHART	164
HOOD AND SIDE COVERS	166
GREASE POINTS	168
CAPACITIES	170
ENGINE LUBRICATION	171
FUEL SYSTEM	175
COOLING SYSTEM	182
AIR INDUCTION SYSTEM	187
TRANSMISSION LUBRICATION	191
MECHANICAL FRONT DRIVE (MFD) AXLE	195
2WD FRONT WHEEL BEARINGS	197
OPERATORS CAB	198

MAINTENANCE/ADJUSTMENTS	200
COOLING SYSTEM	200
FAN/ALTERNATOR BELT AND COMPRESSOR BELT	201
OPERATORS CAB	202
BRAKES	205
ENGINE CLUTCH	214
VALVE CLEARANCES	218
ELECTRICAL SYSTEM	219
SPECIFICATIONS	219
GENERAL SERVICE INFORMATION	220
FUSES	222
BATTERY	224
BULB AND LAMP REPLACEMENT	228
MACHINE STORAGE	235
SPECIFICATIONS	237
GENERAL MACHINE	237
DIESEL ENGINE	240
TRAVEL SPEEDS	244
SPEED CHART ADJUSTMENT FOR ALTERNATIVE TIRES	247
APPROXIMATE TRACTOR MEASUREMENTS	248
APPROXIMATE TRACTOR WEIGHTS	253

TRIM THIS EDGE

TO THE OWNER

Use this manual as your guide. If you follow the instructions given in this manual, your tractor will work well for many years. Refer to the Detail Index at the end of this manual for locating specific items regarding your tractor.

NOTE: *Some information, illustrations and photographs in this manual may differ to the standard equipment and accessories on your tractor. See your dealer for further information.*

Your Dealer can give you assistance with Case made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Case Dealer if you need any assistance or information.

MODEL 4230 TRACTOR With Mechanical Front Drive (MFD) and XL Cab



H01802A

NOTE: *The right and left of the tractor in this manual are the same as your right and left when sitting in the tractor seat looking forward.*

NOTE: *This manual replaces Don 9-24853.*

TO THE OWNER

MODEL 3220 TRACTOR
With Mechanical Front Drive (MFD) and ROPS Frame



TRIM THIS EDGE

Manufacturer:

CASE UNITED KINGDOM LIMITED
Wheatley Hall Road
Doncaster
South Yorkshire
DN2 4PG
ENGLAND

Buy Now



Our support email:

ebooklibonline@outlook.com