


9310 -9330 Tractor

Operator's Manual

9-27732

Reprinted

CASE *iii*

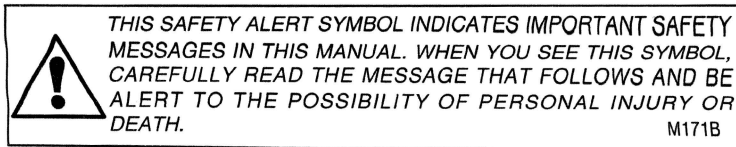

Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates a potentially hazardous situation which, if not avoided will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area *before operating this machine on a job site.*

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

GENERAL TABLE OF CONTENTS

TO THE OWNER	1
IDENTIFICATION NUMBERS	3
PRODUCT IDENTIFICATION AND SERIAL NUMBERS	3
SAFETY/DECALS	5
SAFETY	5
DECALS	8
ROLL OVER PROTECTIVE STRUCTURE (ROPS)	12
INSTRUMENT/CONTROLS	14
DIGITAL INSTRUMENT CLUSTER	14
MECHANICAL GAUGE INSTRUMENT PANEL	22
TRUE GROUND SPEED SENSOR	24
AREA METER	25
GENERAL FEATURES/FUNCTIONALITY	25
AREA METER OPERATION	26
AREA METER CALIBRATION	29
ALTERNATE H2 CALIBRATION PROCEDURE	31
MEMORY	32
IMPLEMENT MONITOR CONNECTOR	32
REMOTE HOLD	33
IMPLEMENT STATUS SWITCH	33
OPERATING CONTROLS	34
HITCH CONTROLS	38
OPERATING INSTRUCTIONS	51
BEFORE STARTING THE ENGINE	51
RUN-IN PROCEDURE	54
SEAT BELT	55
ENGINE STARTING PROCEDURE	56
STOPPING THE ENGINE	59
COLD TEMPERATURE OPERATION	60
TRANSMISSION OIL HEAT MAINTAINER	62
FRONT AXLE STEERING (IF EQUIPPED)	64
TOWING TRACTOR	67
TRANSPORTING TRACTOR	67
WHEEL SLIP RECOMMENDATIONS	68
POWER SHIFT TRANSMISSION	69
LIMITED SLIP DIFFERENTIAL LOCK (IF EQUIPPED)	76
POWER TAKEOFF (IF EQUIPPED)	77
DRAWBAR	81
SAFETY CHAIN	82
TRACTOR WARNING LAMPS AND SMV SYMBOL	83

IMPLEMENT WARNING LAMPS AND SMV SYMBOL	85
FIELD OPERATION	86
DRAWBAR CLEVIS PREPARATION	86
THREE POINT HITCH PREPARATION	89
HITCH COUPLER - CATEGORY III	96
THREE POINT HITCH OPERATION	97
REMOTE HYDRAULICS PREPARATION	107
AUXILIARY POWER CONNECTIONS	115
INSTRUMENT CLUSTER CALIBRATION	118
SCRAPER OPERATIONS	120
UTILITY BLADE (DOZER) OPERATION	120
STEERING SYSTEM CALIBRATION	122
TIRES/WHEELS/SPACING/BALLAST	127
TIRE AND RIM EQUIPMENT	127
BIAS TIRE PRESSURE AND LOAD CAPACITY CHART	130
TIRE PRESSURE FOR MAXIMUM TIRE LOAD AT RATED INFLATION	131
WHEEL BOLT TORQUE	134
TIRE AND RIM SERVICE	135
TREAD POSITIONS	136
WHEEL ADJUSTMENT	141
TRACTOR BALLAST	143
CHEMICAL TANK MOUNTING	154
LUBRICATION/MAINTANENCE CHARTS	156
LUBRICATION/MAINTENANCE CHART	156
SYSTEM CAPACITIES	158
ENVIRONMENT	158
PLASTIC AND RESIN PARTS	158
GREASE FITTINGS	159
FLUID LEVELS AND FILTERS	163
LUBRICATION/FILTERS/FLUIDS	167
GRILLE AND HOOD	167
ENGINE LUBRICATION	168
FUEL SYSTEM	172
COOLING SYSTEM	179
COOLANT CAPACITY CHART	183
AIR INDUCTION SYSTEM	186
TRANSMISSION	191
HYDRAULIC OIL	193
ADJUSTABLE AXLE - BAR TYPE	198
BRAKE SYSTEM	200

OPERATORS CAB	201
MAINTENANCE/ADJUSTMENTS	203
COOLING SYSTEM	203
FAN AND ALTERNATOR BELT AND A/C COMPRESSOR BELT	204
REFRIGERANT CHECK	207
SEAT BELT	207
OPERATORS SEAT	208
ROCKER ARM TO VALVE CLEARANCE ADJUSTMENT	209
TRACTOR DIAGNOSTIC CODES	211
ELECTRICAL SYSTEM	214
ELECTRICAL SPECIFICATIONS	214
GENERAL SERVICE INFORMATION	216
BATTERIES	217
BULB AND LAMP REPLACEMENT	221
STORAGE	227
STORAGE PREPARATION	227
REMOVING FROM STORAGE	228
SPECIFICATIONS	229
DIESEL ENGINE	229
POWER TRAIN	230
TRACTOR WEIGHTS	231
TRAVEL SPEEDS	232
APPROXIMATE OVERALL MEASUREMENTS	233
DETAIL INDEX	235

Buy Now



Our support email:

ebooklibonline@outlook.com