

QUADTRAC

Operators Manual



Reprinted

Rac 9-29263



THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates a potentially hazardous situation which, if not avoided will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

CASE TECHNICAL MANUALS

Manuals are available from your Dealer for the operation, service and repair of your machine. For prompt convenient service, contact your Dealer for assistance in obtaining the manuals for your machine.

Your Dealer can expedite your order for operators manuals, parts catalogs, service manuals and maintenance records.

Always give the Machine Name, Model and P.I.N. (product identification number) or S.N. (serial number) of your machine so your Dealer can provide the correct manuals for your machine.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

CONTENTS

TO THE OWNER 1

IDENTIFICATION NUMBERS 3

 PRODUCT IDENTIFICATION AND 3

 SERIAL NUMBERS 3

SAFETY/DECALS 5

 SAFETY 5

 HAZARDOUS CHEMICALS 8

 DECALS 9

 ROLL OVER PROTECTIVE STRUCTURE (ROPS) 13

OPERATING INSTRUCTIONS 15

 DIGITAL INSTRUMENT CLUSTER 15

 MECHANICAL GAUGE INSTRUMENT PANEL 23

 TRUE GROUND SPEED SENSOR 25

 AREA METER 26

 GENERAL FEATURES/FUNCTIONALITY 26

 AREA METER OPERATION 27

 AREA METER CALIBRATION 30

 ALTERNATE H2 CALIBRATION PROCEDURE 32

 USING THE AREA METER TO CALCULATE OR DISPLAY DISTANCE 32

 MEMORY 33

 IMPLEMENT MONITOR CONNECTOR 33

 REMOTE HOLD 34

 IMPLEMENT STATUS SWITCH 34

 OPERATING CONTROLS 35

 HEATER AND AIR CONDITIONING 37

 BEFORE STARTING THE ENGINE 50

 RUN-IN PROCEDURE 54

 SEAT BELT 55

 ENGINE STARTING PROCEDURE 56

 STOPPING THE ENGINE 59

 COLD TEMPERATURE OPERATION 60

 TRANSMISSION OIL HEAT MAINTAINER 62

 TOWING TRACTOR 64

 TRANSPORTING TRACTOR 64

 TRACK SLIP INDICATOR 65

 INCHING (CLUTCH) PEDAL OPERATION 66

 POWER SHIFT TRANSMISSION 67

 DIFFERENTIAL LOCK 73

 POWER TAKEOFF (IF EQUIPPED) 74

 DRAWBAR 78

 SAFETY CHAIN 80

 TRACTOR WARNING LAMPS AND SMV SYMBOL 81

TRIM THIS EDGE

CONTENTS

IMPLEMENT WARNING LAMPS AND SMV SYMBOL	83
FIELD OPERATION	84
DRAWBAR CLEVIS PREPARATION	84
THREE POINT HITCH PREPARATION	87
HITCH COUPLER - CATEGORY III OR IV-N	94
THREE POINT HITCH OPERATION	96
REMOTE HYDRAULICS PREPARATION	102
HIGH OUTPUT HYDRAULIC SYSTEM (IF EQUIPPED)	109
AUXILIARY POWER CONNECTIONS	110
INSTRUMENT CLUSTER CALIBRATION	113
SCRAPER OPERATIONS	115
CHEMICAL TANK MOUNTING	116
UTILITY BLADE OPERATION	117
DRIVING WHEEL/HUB BOLT TORQUES	118
TRACK ALIGNMENT	119
DIRT SHIELD ADJUSTMENT	120
TRACK REMOVAL AND INSTALLATION	120
LUBRICATION/MAINTENANCE CHARTS	121
LUBRICATION/MAINTENANCE CHART	121
LUBRICATION/FILTERS/FLUIDS	123
GRILLE AND HOOD	123
GRAB HANDLE	124
ENGINE HOURMETER	124
GREASE FITTINGS	125
FLUID LEVELS AND FILTERS	129
SYSTEM CAPACITIES	133
ENVIRONMENT	133
PLASTIC AND RESIN PARTS	133
ENGINE LUBRICATION	134
FUEL SYSTEM	137
COOLING SYSTEM	140
COOLANT CAPACITY CHART	147
AIR INDUCTION SYSTEM	148
TRANSMISSION	153
HYDRAULIC / AXLE OIL	156
OPERATORS CAB	160
MAINTENANCE/ADJUSTMENTS	162
COOLING SYSTEM	162
FAN BELT, ALTERNATOR BELT AND AIR CONDITIONING BELT ..	163
ALTERNATOR BELT REPLACEMENT	164
A/C COMPRESSOR BELT REPLACEMENT	165

CONTENTS

REFRIGERANT CHECK	166
SEAT BELT	166
OPERATORS SEAT	167
ENGINE VALVE AND INJECTOR ADJUSTMENT	168
TRACK TENSION	168
TRACTOR DIAGNOSTIC CODES	169
ELECTRICAL SYSTEM	172
ELECTRICAL SPECIFICATIONS	172
GENERAL SERVICE INFORMATION	174
BATTERIES	175
BULB AND LAMP REPLACEMENT	179
STORAGE	185
STORAGE PREPARATION	185
REMOVING FROM STORAGE	186
DIESEL ENGINE	187
POWER TRAIN	188
TRACTOR WEIGHTS	190
TRAVEL SPEEDS	191
APPROXIMATE OVERALL MEASUREMENTS	192
DETAIL INDEX	195

TRIM THIS EDGE

TO THE OWNER

This manual contains important information about the safe operation, adjustment and maintenance of your Case IH tractor. Refer to the Detail Index at the end of this manual for locating specific items about the tractor.

DO NOT operate or permit anyone to operate or service this tractor until you or other persons have read this manual. All persons training to operate, or who will be operating this tractor should be old enough to possess a valid local vehicle operating permit (or other applicable local age requirement) and must have demonstrated the ability to operate and service the tractor correctly and safely.

This tractor, with standard equipment and authorized attachments, is intended to be used for normal farming and related operations.

DO NOT use this tractor for any application or purpose other than those described in this manual. Consult an authorized dealer or the Case Corporation on changes, additions or modifications that can be required for this machine to comply with various country regulations and safety requirements. Unauthorized modifications can cause serious injury or death. Anyone making such unauthorized modifications is responsible for the consequences.

If your tractor requires replacement parts, do not use unauthorized parts or substitute materials. Case Corporation dealers stock Case approved service parts and have technicians with special training that know the best methods of repair and maintenance for your tractor.


QUADTRAC



NOTE: When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right and left hand.

TO THE OWNER

Manual Storage Compartment

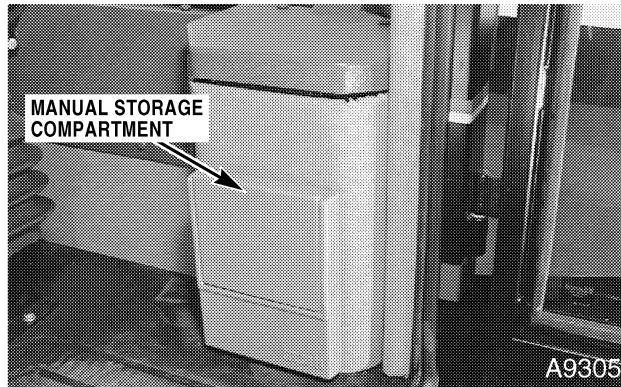

Keep this Operators Manual in the storage compartment provided in your tractor cab. The Operators Manual must be available for use by all operators. Make sure this manual is complete and in good condition. Contact your dealer to obtain additional manuals or for any additional information or assistance about your tractor.

NOTE: Also, refer to the *Cummins Engine Operation and Maintenance Manual* supplied with your tractor for supplemental engine maintenance information and procedures not covered in this manual. Adhere to the *Lubrication and Maintenance Schedule* as outlined in this manual.

Buy Now



Our support email:

ebooklibonline@outlook.com