## 8825 & 8825HP Windrower Tractor

**Operators Manual** 

9-29501

Reprinted





THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171E

If Safety Decals on this machine use the words **Danger**, **Warning or Caution**, which are defined as follows:

- DANGER: Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- WARNING: Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- CAUTION: Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as







if used, are RED.



IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.



# 8825 & 8825HP Windrower Tractor



81WT-96079-01 ·

#### TO OUR CUSTOMER

We appreciate your confidence in CASE IH Farm Equipment and thank you for your patronage. In preparing this manual, we hope we have furnished you with a valuable tool for operating and maintaining this fine machine. Use this manual as your guide. Practicing the instructions given here will result in many years of dependable service from your machine.

Your Dealer can give you assistance with CASE IH parts and specially trained personnel to assist you in repair and maintenance.

Call your Dealer if you need any assistance or information.

## CALIFORNIA Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

## **TABLE OF CONTENTS**

SPECIFICATIONS	IV
SERIAL NUMBERS	VI
CHECKLISTS	VII
SAFETY PRECAUTIONS	1
GENERAL INFORMATION	9
DESCRIPTION	11
SERVICING	21
PREPARATION	39
OPERATION	41
MAINTENANCE	55
TROUBLESHOOTING	83
STORAGE	86
EXTRA EQUIPMENT	88
ALPHABETICAL INDEX	89

## **SPECIFICATIONS**

(Specifications and design are subject to change without notice and without liability therefore.)

MODEL 8825 and 8825HP Windrower Tractor	ENGINE
DIMENSIONS AND WEIGHTS  Weight without header (approx.) 5950 LBS (2699 kg)  Overall length with draper header	ENGINE           Model         8825         Case, 4-390 Diesel           8825HP         Case, 4T-390 Diesel           Horsepower         75 at 2300 rpm (r/min)           8825         75 at 2300 rpm (r/min)           High Idle         2500 rpm (r/min)           Displacement         239 CU IN (3.9 L)           Cooling system capacity         22 U.S. quarts (20.8 L)           Cooling fan diameter         17.7 IN (450 mm)           Fuel         ASTM No. 2 Diesel
outside of hubs       119.6 IN (3038 mm)         with standard tires       139.5 IN (3543 mm)         with optional tires       147.5 IN (3747 mm)         Wheel base       124 IN (3150 mm)         Tread width       122.6 IN (3114 mm)         optional tires       127 IN (3226 mm)         Tread width, castor wheels       84.3 IN (2140 mm)         minimum       84.3 IN (2140 mm)         maximum       110.2 IN (2800 mm)	Fuel tank capacity
TIRES  Drive wheels standard	type

HYDRAULIC SYSTEM Ground drive system relief pressure	ACCESSORIES Lights
CAB Cab glass	Rear view mirrors (left hand standard)
Air ride seat  8825	Engine oil quantity with filter change
AIR CONDITIONING System size	type of fluidengine oil, SAE 15W 40 type of fluid, alternate

#### **SERIAL NUMBERS**

#### **SERIAL NUMBERS**

When parts or assistance are needed, or when writing to your Authorized Case IH Dealer, always give this information:

- 1. Model Number of the Machine
- 2. Product Identification Number



MODEL NUMBER AND PRODUCT IDENTIFICATION NUMBER PLATE

## FOR LOCATION OF THE PRODUCT IDENTIFICATION NUMBER PLATE ON THIS MACHINE, SEE THE GENERAL INFORMATION SECTION IN THIS MANUAL.

Write the serial numbers of your machine on the lines below.				
MODEL NUMBER				
PRODUCT IDENTIFICATION NUMBER				

**Beginning Each Season Checklist** 

## **CHECKLISTS**



Use good safety practices when working around this machine.

### **Daily Checklist**

 Do the required daily lubrication items and those whose calendar time is due.	 Remove accumulated dirt, trash, and crop material from machine.
 Observe sprockets and components for looseness and alignment.	 With machine operating in a stationary position, observe the operation of moving parts. Watch
 Look for loose or missing bolts or parts.	for any signs of faulty operation, overheated bearings, and listen for any unusual sounds.
 Check the hydraulic system connections for leaks.	 Review Safety Precautions.
 Check the tension of the pump drive belt and the draper drive belt, if equipped.	 Do the required daily lubrication items and those whose calendar time is due.
 If the machine is to be transported on a road or highway at night or during the day, accessory	 Make sure the proper operating adjustments have been made for your crop.
lights, warning devices and slow moving vehicle emblem must be used for adequate warning to operators of other vehicles. Observe local governmental regulations concerning movement of slow and overwidth vehicles.	 Check for any special attachment which will help you to do a better job.



Our support email: ebooklibonline@outlook.com