

**9370, 9380 and 9390  
Tractors**

Operators Manual

Rac 9-29652

Reprinted





*THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.*

M171B

Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates a potentially hazardous situation which, if not avoided will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.



# WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

# GENERAL TABLE OF CONTENTS

<b>TO THE OWNER</b> .....	<b>1</b>
<b>IDENTIFICATION NUMBERS</b> .....	<b>4</b>
PRODUCT IDENTIFICATION AND .....	4
SERIAL NUMBERS .....	4
<b>SAFETY/DECALS</b> .....	<b>6</b>
SAFETY .....	6
HAZARDOUS CHEMICALS .....	9
SAFETY DECALS .....	10
ARTICULATION CYLINDER LOCKING BLOCKS .....	13
MOUNTING AND DISMOUNTING THE TRACTOR .....	14
ROLL OVER PROTECTIVE STRUCTURE (ROPS) .....	14
CLEANING CAB WINDOWS .....	15
<b>INSTRUMENTS/CONTROLS</b> .....	<b>16</b>
DIGITAL INSTRUMENT CLUSTER .....	16
DIGITAL DISPLAY SCREENS .....	21
ENGINE HOURS .....	23
MECHANICAL GAUGE INSTRUMENT PANEL .....	24
TRUE GROUND SPEED SENSOR .....	26
AREA METER (IF EQUIPPED) .....	27
GENERAL FEATURES/FUNCTIONALITY .....	27
AREA METER OPERATION .....	28
AREA METER CALIBRATION .....	31
ALTERNATE H2 CALIBRATION PROCEDURE .....	33
USING THE AREA METER TO CALCULATE OR DISPLAY DISTANCE .....	34
MEMORY .....	35
IMPLEMENT MONITOR CONNECTOR .....	35
REMOTE HOLD .....	36
IMPLEMENT STATUS SWITCH .....	36
OPERATING CONTROLS .....	37
ASH TRAY .....	48
CAB DOOR CONTROLS .....	49
OPERATORS SEAT WITH AIR SUSPENSION .....	50
OPERATORS SEAT WITH MECHANICAL SUSPENSION .....	52
TRACTORS WITH ROPS CANOPY .....	54
<b>OPERATING INSTRUCTIONS</b> .....	<b>55</b>
BEFORE STARTING THE ENGINE .....	55
RUN-IN PROCEDURE .....	58
SEAT BELT .....	59
ENGINE STARTING PROCEDURE .....	60
STOPPING THE ENGINE .....	63

TRIM THIS EDGE

TRIM THIS EDGE

Rac 9-29652

RIGHT PAGE

COLD TEMPERATURE OPERATION .....	64
MAINTAINING OPERATING TEMPERATURES .....	65
TRANSMISSION OIL HEAT MAINTAINER .....	66
ETHER START AID .....	67
TOWING TRACTOR .....	69
TRANSPORTING TRACTOR .....	69
WHEEL SLIP RECOMMENDATIONS .....	70
INCHING (CLUTCH) PEDAL OPERATION .....	71
POWERSHIFT TRANSMISSION (IF EQUIPPED) .....	72
DIAGNOSTIC LED OPERATION .....	77
12-SPEED SYNCROSHIFT AND 24-SPEED HI-LO SYNCROSHIFT TRANSMISSION (IF EQUIPPED) .....	79
LIMITED SLIP DIFFERENTIAL LOCK (IF EQUIPPED) .....	82
POWER TAKEOFF (IF EQUIPPED) .....	83
DRAWBAR .....	87
SAFETY CHAIN .....	89
TRACTOR WARNING LAMPS AND SMV SYMBOL .....	90
IMPLEMENT WARNING LAMPS AND SMV SYMBOL .....	92
<b>FIELD OPERATION .....</b>	<b>93</b>
DRAWBAR CLEVIS PREPARATION .....	93
THREE POINT HITCH PREPARATION .....	96
HITCH COUPLER - CATEGORY III OR IV-N .....	103
THREE POINT HITCH OPERATION .....	105
REMOTE HYDRAULICS PREPARATION .....	111
REMOTE HYDRAULIC OPERATION .....	114
HIGH OUTPUT HYDRAULIC SYSTEM(IF EQUIPPED) .....	118
AUXILIARY POWER CONNECTIONS .....	119
INSTRUMENT CLUSTER CALIBRATION .....	122
SYNCHROSHIFT TRANSMISSION PROCEDURE .....	124
SCRAPER OPERATIONS .....	126
<b>TIRES/WHEELS/SPACING/BALLAST .....</b>	<b>128</b>
TIRE AND RIM EQUIPMENT .....	128
BIAS TIRE PRESSURE AND LOAD CAPACITY CHART .....	131
TIRE PRESSURE FOR MAXIMUM TIRE LOAD AT RATED INFLATION .....	132
WHEEL BOLT TORQUES .....	136
TIRE AND RIM SERVICE .....	136
TREAD POSITIONS .....	137
ARTICULATION STOPS .....	140
TRACTOR BALLAST .....	141
CHEMICAL TANK MOUNTING .....	152
<b>LUBRICATION/MAINTENANCE CHARTS .....</b>	<b>154</b>

TRIM THIS EDGE

II

TRIM THIS EDGE

Rac 9-29652

LEFT PAGE

LUBRICATION/MAINTENANCE CHART .....	154
<b>LUBRICATION/FILTERS/FLUIDS .....</b>	<b>156</b>
GRILLE AND HOOD .....	156
GRAB HANDLE .....	157
ENGINE HOURMETER .....	157
GREASE FITTINGS .....	158
FLUID LEVELS AND FILTERS .....	163
SYSTEM CAPACITIES .....	168
ENVIRONMENT .....	168
PLASTIC AND RESIN PARTS .....	168
ENGINE LUBRICATION .....	169
FUEL SYSTEM .....	172
COOLING SYSTEM .....	175
AIR INDUCTION SYSTEM .....	183
TRANSMISSION .....	188
HYDRAULIC OIL .....	191
PLANETARY AXLE .....	194
BRAKE SYSTEM .....	197
OPERATORS CAB .....	198
<b>MAINTENANCE/ADJUSTMENTS .....</b>	<b>200</b>
COOLING SYSTEM .....	200
FAN, ALTERNATOR, COMPRESSOR AND WATER PUMP DRIVE BELTS .....	201
REFRIGERANT CHECK .....	206
SEAT BELT .....	206
OPERATORS SEAT .....	207
ENGINE VALVE AND INJECTOR ADJUSTMENT .....	208
TRACTOR DIAGNOSTIC CODES .....	209
<b>ELECTRICAL SYSTEM .....</b>	<b>212</b>
ELECTRICAL SPECIFICATIONS .....	212
GENERAL SERVICE INFORMATION .....	214
BATTERIES .....	215
BULB AND LAMP REPLACEMENT .....	219
<b>STORAGE .....</b>	<b>225</b>
STORAGE PREPARATION .....	225
REMOVING FROM STORAGE .....	226
<b>SPECIFICATIONS .....</b>	<b>227</b>
DIESEL ENGINE .....	227
POWER TRAIN .....	228
TRACTOR WEIGHTS .....	231
TRAVEL SPEEDS .....	232

TRIM THIS EDGE

III

TRIM THIS EDGE

Rac 9-29652

RIGHT PAGE

APPROXIMATE OVERALL MEASUREMENTS .....	234
<b>DETAIL INDEX .....</b>	<b>235</b>

TRIM THIS EDGE

IV

TRIM THIS EDGE

Rac 9-29652

LEFT PAGE

## TO THE OWNER

This manual contains important information about the safe operation, adjustment and maintenance of your Case IH tractor. Refer to the Detail Index at the end of this manual for locating specific items about the tractor.

DO NOT operate or permit anyone to operate or service this tractor until you or other persons have read this manual. All persons training to operate, or who will be operating this tractor should be old enough to possess a valid local vehicle operating permit (or other applicable local age requirement) and must have demonstrated the ability to operate and service the tractor correctly and safely.

This tractor, with standard equipment and authorized attachments, is intended to be used for normal farming and related operations.

DO NOT use this tractor for any application or purpose other than those described in this manual. Consult an authorized dealer or the Case Corporation on changes, additions or modifications that can be required for this machine to comply with various country regulations and safety requirements. Unauthorized modifications can cause serious injury or death. Anyone making such unauthorized modifications is responsible for the consequences.

If your tractor requires replacement parts, do not use unauthorized parts or substitute materials. Case Corporation dealers stock Case approved service parts and have technicians with special training that know the best methods of repair and maintenance for your tractor.

### Model 9370 Tractor



*When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right and left hand.*

TRIM THIS EDGE

RIGHT PAGE

TRIM THIS EDGE

Alt= to hide template information  
Alt+ to display template information

Template Name: OM\_1\_col  
Template Date: 1994\_05\_26

### Model 9380 Tractor



F00017

### Model 9390 Tractor



MK96J058

TRIM THIS EDGE


Template Name: OM\_1\_col  
Template Date: 1994\_05\_26

Alt= to hide template information  
Alt+ to display template information

TRIM THIS EDGE

LEFT PAGE

## Operator Manual Storage Compartment

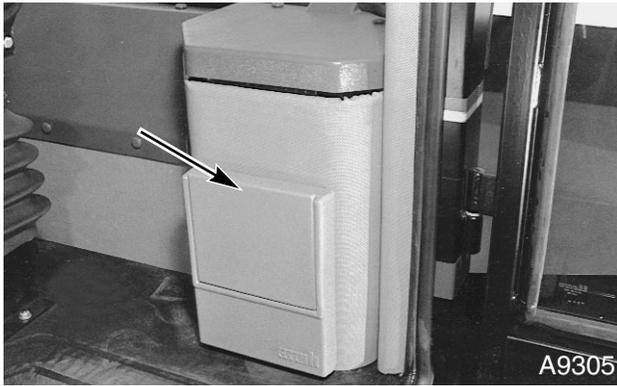

MANUAL STORAGE COMPARTMENT

Keep this Operators Manual in the storage compartment provided in your tractor cab. The Operators Manual must be available for use by all operators. Make sure this manual is complete and in good condition. Contact your dealer to obtain additional manuals or for any additional information or assistance about your tractor.

**NOTE:** Also, refer to the *Cummins Engine Operation and Maintenance Manual* supplied with your tractor for supplemental engine maintenance information and procedures not covered in this manual. Adhere to the *Lubrication and Maintenance Schedule* as outlined in this manual.

TRIM THIS EDGE

Alt= to hide template information  
Alt+ to display template information

Template Name: OM\_1\_col  
Template Date: 1994\_05\_26

TRIM THIS EDGE

RIGHT PAGE

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)