

**220, 222, 224 and 444
Tractors**

Operators Manual

9-3452

Reprinted








THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

If Safety Decals on this machine use the words **Danger, Warning or Caution**, which are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

If Safety Decals on this machine are ISO two panel Pictorial, decals are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clears the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

TABLE OF CONTENTS

SAFETY PRECAUTIONS	2 - 6
SERIAL NUMBER	10
OVERALL MEASUREMENTS	11
GENERAL SPECIFICATIONS	12
Hydraulic System	12
Electrical System	12
Brake	12
Transaxle	12
Speed Range	12
Wheels and Tires	12
ENGINE SPECIFICATIONS	13
LUBRICATION	14 - 16
Lubrication Chart	14 - 15
Engine Lubrication	16
FUEL SPECIFICATIONS	17
OPERATING CONTROLS & INSTRUMENTS	18 - 21
OPERATING INSTRUCTIONS	22 - 23
Run-In Procedure	22
Pre-Starting Check List	22
Starting Procedure	23
Stopping the Engine	23
PREVENTIVE MAINTENANCE	24 - 36
Brake Adjustment	25 - 26
Air Cleaner	27
Carburetor Adjustments	28
Steering Adjustments	29
Toe-In Adjustments	30
Electrical System	31
Spark Plugs	32
Storage Battery	33 - 34
Jump Start With Booster Battery	35
Wiring Diagram	36
ATTACHMENTS	37

SAFETY MESSAGES



Separate Operator's Manuals are provided with the attachments purchased with your tractor. Refer to the appropriate attachment operators manual for specific operating instructions and safety messages that apply to the attachment.



Become thoroughly familiar with all tractor and attachment controls before operating.



Remember, a careful operator is always the best insurance against an accident.



 
 
CAUTION: Stop and inspect the mower for damage immediately after striking a foreign object and repair damage before restarting and operating the machine.



CAUTION: Only operate controls from the operator's seat to prevent injury.



CAUTION: Always have the attachment drive clutch disengaged and the brake pedal depressed and locked when parking or starting the tractor.



The angles depicted apply to favorable terrain only. In adverse terrain, the degree of slope is proportionately less.

WARNING: Use extreme care when negotiating inclines or side slopes. Operate this tractor on grades that do not exceed 30° forward or reverse or 20° side slope in favorable terrain. In adverse terrain, the degree of slope is proportionately less. Always drive in a forward motion while proceeding down hill. If necessary, back up a slope to the desired position. Operate the tractor in low range on hills or inclines. Do not leave tractor parked unattended on hills unless the wheels are adequately blocked. Always lock the brake and turn off the engine when parking and leaving the tractor.



CAUTION: Drive at a speed slow enough to insure safety and complete control at all times.



CAUTION: Reduce ground speed when making a turn, going down hill or applying the brake.



CAUTION: Always shut off engine, remove key and set parking brake and wait until tractor and attachment motion has stopped before dismounting or leaving the tractor.



CAUTION: Never permit persons other than the operator to ride on the tractor.



CAUTION: Place the transmission in neutral, set the parking brake and stop the engine before standing between the tractor and attachment when hitching.



CAUTION: Oil, grease and adjust the tractor only when the engine is shut off.



CAUTION: Never fill the fuel tank when the engine is running or when near an open flame. Do not smoke when working near fuel.



CAUTION: Never operate a tractor in a closed shed or garage. Exhaust gases are poisonous and may cause death if inhaled.



DANGER: Batteries produce explosive charges. Keep sparks, flame and cigarettes away. Ventilate when charging or using in enclosed space. Always shield eyes when working near batteries.



CAUTION: Never wear rings or metal watch bands when working with the tractor electrical system or battery as you may ground a live circuit.



CAUTION: Storage areas for batteries must be well ventilated to prevent accumulation of hydrogen gas from newly recharged batteries.

IMPORTANT: Always install new decals whenever the old decals are destroyed, lost, painted over or illegible. When individual parts are replaced that have decals attached, be sure to install a new decal with the new part.

TO THE PURCHASER OF A CASE TRACTOR

The care you give your new Case Tractor will greatly determine the satisfaction and service life you will obtain from it. Use this manual as your guide. By observing the instructions and suggestions in this manual, your Case Tractor will serve you well for many years.

As an Authorized Case Dealer, we stock Genuine Case Parts, which are manufactured with the same precision and skills as the original equipment. Our factory trained staff is kept well informed on the best methods of servicing Case equipment and is ready and able to help you.

Should you require additional aid or information, contact us.

Your Authorized Case Dealer

—NOTICE—

Laws of some states or provinces may require that this unit be equipped with a SPARK ARRESTOR OR SPARK ARRESTING MUFFLER. The State of California, as an example, is one state which has such regulations for agricultural and forestry applications, plus a regulation for construction applications in forest-covered, brush-covered, or grass-covered lands.

Typically such laws and regulations require spark arresting devices to be maintained in good working order and typically to be attached to the exhaust system of naturally aspirated engines (engines without a turbo charger).

CANADIAN RADIO INTERFERENCE REGULATIONS

The Canadian Government, under authority granted by the Radio Act, has promulgated regulations covering this gasoline powered Case Compact Tractor if imported into Canada on or after September 1, 1976.

The spark plug(s) in this machine when replaced must have a resistor type spark plug installed.

The certification label applied to the engine must not be removed or obliterated.

M N T K O

U.S. PRICE .70

PRINTED IN U.S.A.



FIGURE 1. Right Hand View of Case 220 Compact Tractor

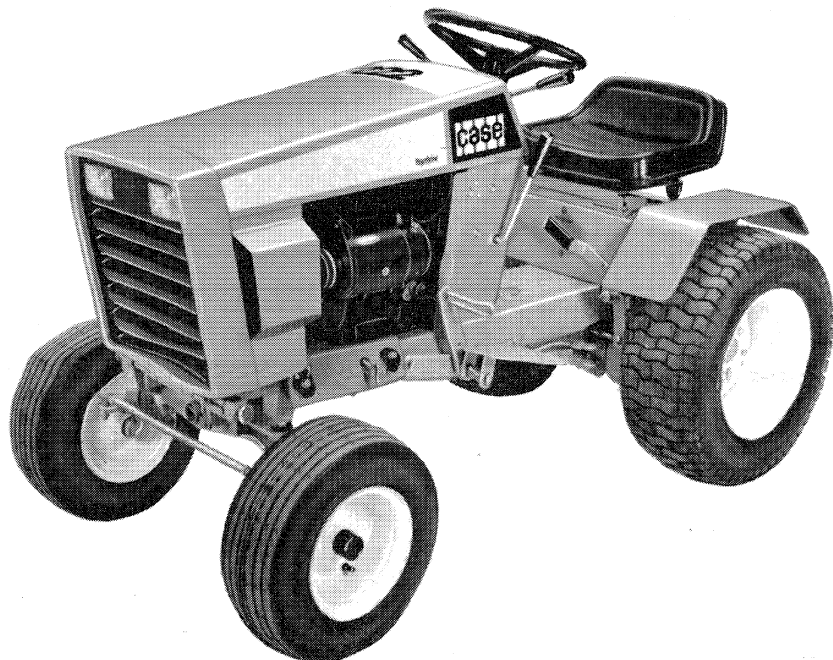


FIGURE 2. Left Hand View of Case 222 Compact Tractor

Buy Now



Our support email:

ebooklibonline@outlook.com