

# 2290 Tractor

## Operators Manual

9-6384

Reprinted

**CASE III**



***This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.***

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



**IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.**

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

# TABLE OF CONTENTS

TO THE OWNER .....	III	LUBRICATION (Cont'd)	
SAFETY .....	IV-XVIII	Differential Oil Level .....	34
Safety Rules .....	IV	Planetary Oil Level .....	35
Before Starting .....	IV-V	Steering & Brake System Air Removal ..	36
Operation .....	VI-XV	Front Wheel Bearing .....	37
Service .....	XVI-XVIII	Front Wheel Pivot Pin Bearing .....	38
HAND SIGNALS .....	XIX-XX	ALTERNATOR CHARGING SYSTEMS ...	38
DECALS .....	XXI-XXV	OPERATING INSTRUCTIONS .....	39-129
NOTES .....	XXVI	Run-In Procedure .....	39
SERIAL NUMBERS .....	1	Before Starting the Engine .....	40
DIESEL ENGINE SPECIFICATIONS .....	2,3	Towing .....	41
GENERAL SPECIFICATIONS .....	4-7	How to Transport the Tractor .....	41
APPROXIMATE TRACTOR SPEEDS		Operating Instruments .....	42-47
12 Speed Transmission .....	8	Automatic Engine Shutoff	
8 Speed Transmission .....	9	(If Equipped) .....	46-47
FUEL SPECIFICATIONS .....	10	Operating Controls .....	48-79
APPROXIMATE OVER ALL		Steering Console .....	48-49
MEASUREMENTS .....	11-13	Foot Pedals .....	50-51
APPROXIMATE TRANSPORT		Operator's Console .....	52-60
WEIGHT .....	11-13	Steering Column Tilt .....	61
OPERATOR'S CAB STANDARDS .....	11	Moving Telescopic Steering Column .	61
TIRE AND WHEEL EQUIPMENT .....	14-15	Heater Stop Valve .....	62
TIRE SIZE ARRANGEMENTS - MFD .....	16	Fuel Tank Water Trap .....	62
FRONT WHEEL TREAD POSITIONS ..	17-18	Rear View Mirrors .....	63
REAR WHEEL TREAD POSITIONS ...	19-20	Cab Window Lever .....	63
DUAL REAR WHEEL		Cab Headliner Controls .....	64-65
TREAD POSITIONS .....	21-22	Cab Air Flow Control .....	66
DUAL REAR TIRE PRESSURES .....	23	Cab Defroster Control .....	66
LUBRICATION .....	24-38	Cab Air Flow Arrangements .....	67-69
Engine Hourmeter .....	24	Air Conditioner Operation .....	70
Diesel Engine .....	25	Cab Door Lock .....	70
Lubrication Chart .....	26-27	Tool Compartment .....	70
Engine Oil Change .....	28-29	Operator's Seat .....	71-74
Engine Oil Filter .....	29	Seat Belts .....	75
Transmission Oil Level Check & Change .	30	Amber Warning Lamps, Direction .	76-77
Transfer Gear Box Oil Level .....	30	Turn Signals & SMV	
Hydraulic Oil Filters .....	31-33	Implement Warning Lamps,	
		SMV Symbol .....	78
		Auxiliary Outlet Socket .....	79
		Starting Procedure .....	80-81
		Stopping the Engine .....	82
		Cold Temperature Operation .....	83
		Preparing Tractor For Operating	
		in Cold Temperatures .....	84
		Cold Temperature Starting .....	85-88
		Case Starting Fluid .....	85
		Coolant Heater .....	85
		Operating Ether Start .....	86-87
		Starting Fluid Container Replacement .	88
		Power Shift Transmission .....	89-90
		Mechanical Shift Transmission .....	91
		Differential Lock .....	92

# TABLE OF CONTENTS

## OPERATING INSTRUCTIONS

Power Takeoff .....	93-96
Operating PTO .....	93
540 or 1000 RPM PTO Operation .....	94
Guards .....	95
Operating Safety .....	96

Drawbar .....	97
Three Point Hitch System .....	98
Hitch System Adjustments .....	99-101
Hitch Operation .....	102-106
Connect Implement .....	102
Hitch Control Lever .....	102-103
Sensing Control .....	104-105
Stationary Depth .....	105
Hydraulic Float Control .....	105
Anti-Sway Chain .....	106

Hitch Coupler - Category II .....	106
Hitch Coupler - Category III-II .....	107-109
Remote Hydraulic Control .....	110-116
Remote Control Levers .....	110-111
Variable Flow Control .....	112-113
Operating the Remote System .....	114
Hydraulic Hose Couplers .....	115
Hydraulic Hose Coupling .....	116
Remote Cylinder .....	117
Hydraulic Cylinder Jack Pads .....	118
Front Axle Adjustment .....	119
Rear Wheel Hub Adjustment .....	120-122
Dual Wheel Mounting .....	123
Rear Tire Mounting .....	124
Tractor Ballast .....	124-129
Ballast .....	124
Measuring Slip .....	125
Tractor and Equipment Weight .....	126
Front End Weights .....	127
Rear Wheel Weights .....	128
Tire Liquid Weight .....	129

## PREVENTIVE MAINTENANCE .....

Hood and Side Panels .....	131
Cooling System .....	132-140
Pressure Cooling System .....	132
Coolant Solutions .....	133
Engine Cooling System Treatment .....	133
Radiator Cleaning .....	134
Cooling System Service .....	135
Thermostat Check .....	136
Thermostat Replacement .....	136-138
Fan Belt Adjustment .....	139
Fan Belt Replacement .....	140
Water Filter and Conditioner .....	141

## PREVENTIVE MAINTENANCE (Cont'd)

Fuel System .....	142-147
Service Intervals .....	142
Fuel Filter Replacement .....	143-144
Primary Fuel Filter .....	145-146
Air Removal .....	146-147

Air Induction System .....	148-157
Air Filter Service Interval .....	149
Final Air Filter Service .....	150-153
Aspirated Strata Tube Service .....	154-156
Tubes and Hoses .....	157

Neutral Start Switch Adjustment .....	158-159
Electrical System .....	160-165
Head Lamps .....	160
Flood Lamps .....	160
Flashing Amber Warning Lamps .....	161
Tail Lamps .....	161
Instrument Cluster Lamps .....	162
Fuse Panel - Tractor .....	163
Fuse Panel - Operator Cab .....	163
Fuse Panel - Tractor and Cab .....	164
Head Lamp Adjustment .....	165

Storage Battery .....	166-169
Access to Batteries .....	167
Battery Cables and Terminals .....	167
Battery Water .....	168
Breather Tubes (If Equipped) .....	168
Removal and Installation of Batteries .....	168
Auxiliary Battery Connections .....	169

Roll Over Protective Structure (ROPS) .....	170-172
Tractor Roll Over .....	171
Safety Rules .....	171
Maintenance and Inspection .....	171
ROPS Label .....	172

Operator's Cab .....	173-186
Preventive Maintenance .....	173-174
Air Filter Removal .....	175
Air Filter Service .....	176-177
Seat Belt Inspection and Maintenance .....	177
Operator's Seat .....	178-179
Refrigerant Check .....	180-181
Compressor Belt Adjustment .....	182
Compressor Belt Replacement .....	183
Dome Lamp .....	184-185
Console Lamp .....	186

## CASE TECHNICAL MANUALS .....

# TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

## *Your Authorized Case Dealer*



**Figure 1**

**NOTE:** *When you are in the tractor seat looking forward, the right hand and left hand of the tractor are the same as your right hand and left hand.*

# SAFETY

## Safety Rules

Understand that your safety and the safety of other persons is measured by how you service, and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

**READ THIS MANUAL COMPLETELY** and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

J I Case is continuing to work for your safety: by making tractors with better protection and by giving these rules for safe operation.

## Before Starting



**CAUTION** *Provide a first aid kit for use in case of accident.*



**CAUTION** *It is good practice to carry a fire extinguisher on the tractor. Be sure that the extinguisher is properly maintained and be familiar with its proper use.*



**WARNING** Before starting engine study Operator's Manual safety messages.

Read all safety signs on machine.

Clear the area of other persons.

Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations.

Operator and Service Manuals may be obtained from your equipment dealer.



**WARNING** Before starting engine be sure all operating controls are in neutral.

Operate controls only when seated in Operator's seat.

On roads, use flasher/lights according to local laws. Keep SMV emblem visible.

Shields help protect from injury, keep in place.

Stop engine before working on PTO driven machine or PTO shaft, or performing any maintenance.

Before leaving tractor unattended, lower hydraulically lifted equipment to ground.



**WARNING** Before starting the engine, be sure all operating controls are in neutral. This will ease starting loads on the starter and batteries and will eliminate the accidental start up of PTO driven equipment.

 
## Operation



**WARNING** Before leaving the tractor, stop the engine, place all controls in neutral, and either set the parking brake or place range lever in PARK position as equipped.




**WARNING** Operate controls only when seated in the Operator's seat.

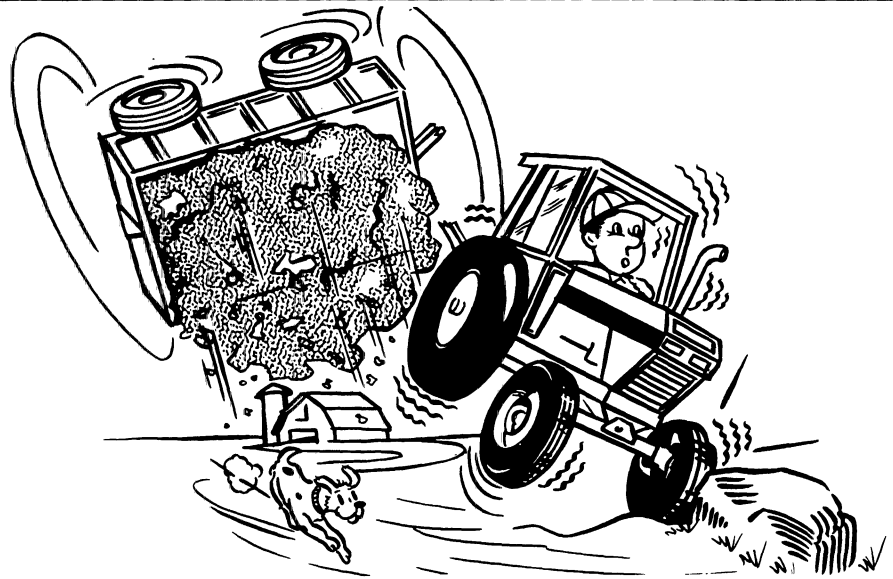


 **WARNING** Tractor travel speed should be such that complete control and tractor stability is maintained at all times. Where possible, avoid operating the tractor near ditches, embankments and holes. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.




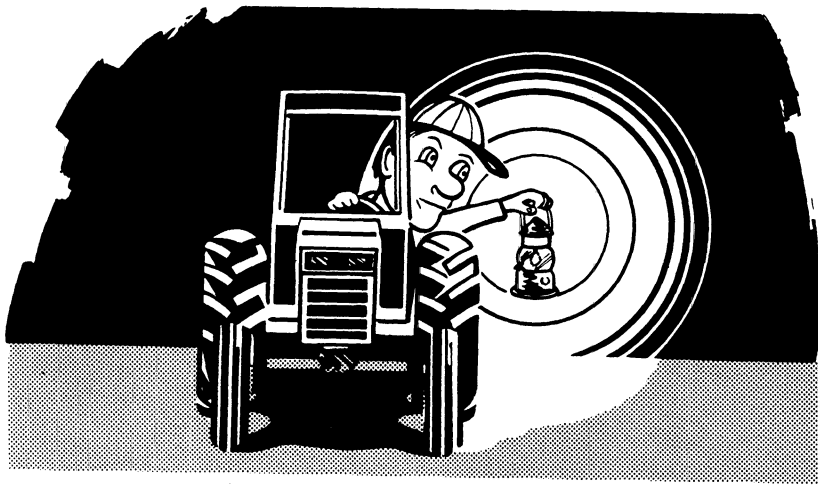

 **!** **WARNING** *On roads, use flasher/lights according to local laws. Keep SMV emblem visible.*

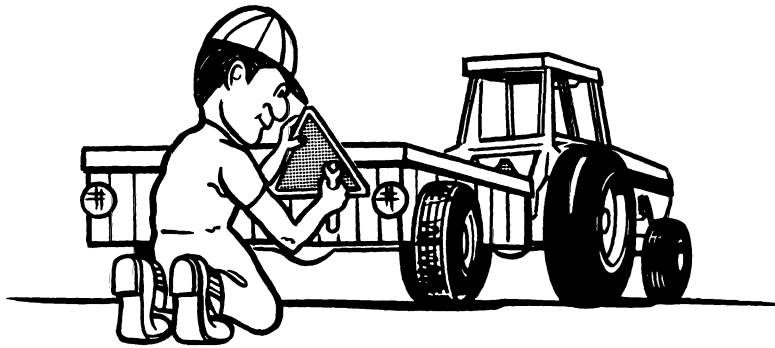


 **!** **DANGER** *Excess tractor speed is the big killer. Only experienced drivers should be permitted on highways.*

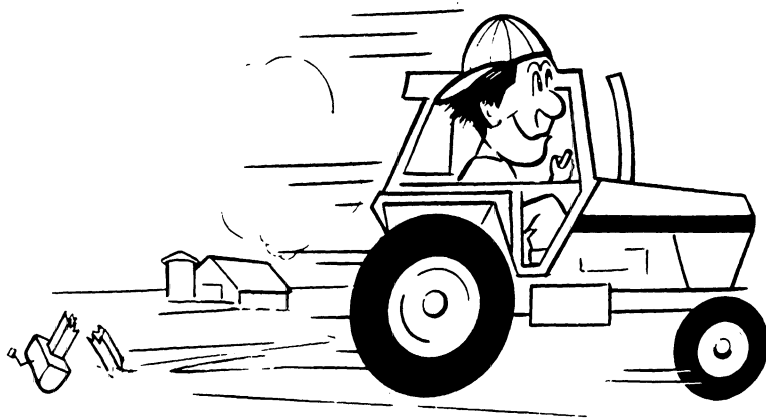



 **WARNING** Extra weight increases your braking distance. Remember that liquid in the tires, weights on the tractor or wheels, tanks filled with fertilizer, herbicides or insecticides - all these add weight and increase the distance you need in which to stop.

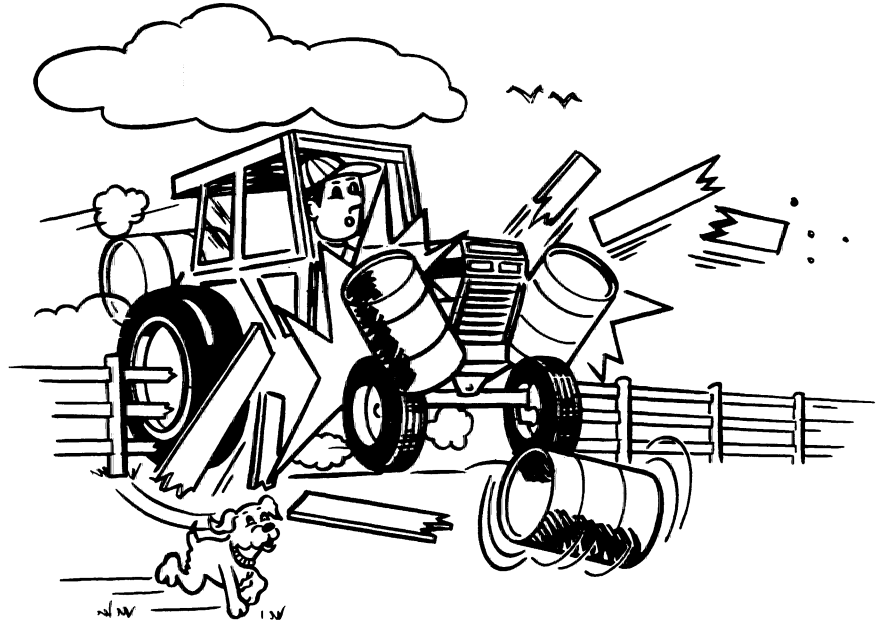


**WARNING** The braking distance will increase in conditions of mud, ice or whenever the traction at one wheel is less than the traction at the opposite wheel. The operator must allow adequate distance to stop in these conditions.






 **CAUTION** *Stop, look and listen before entering a highway, stay on your side of the road and pull over to let faster traffic pass. Slow down and signal as you turn off.*

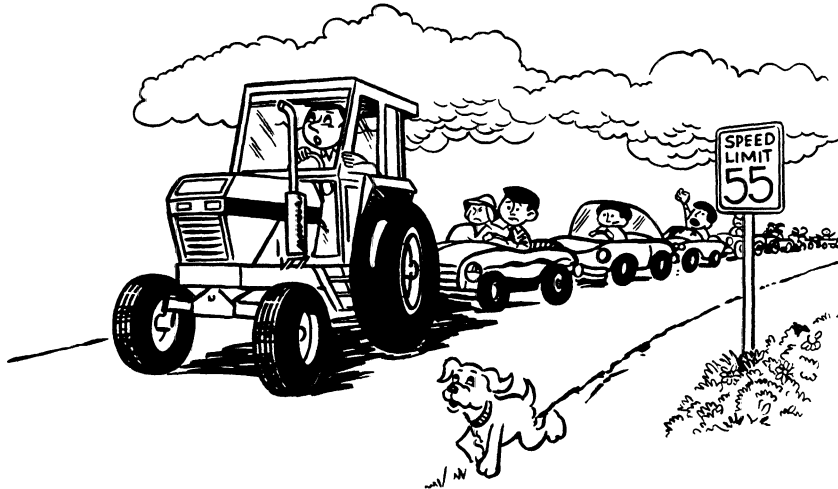

 **WARNING** *Do not permit others to ride. Only one person - the operator - should be on a tractor when it is in operation.*

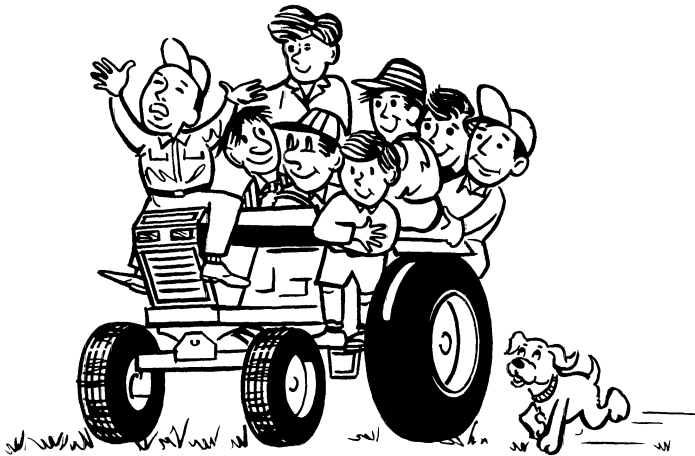


**CAUTION** *Do not operate the tractor at high speeds or attempt to turn the tractor with the differential lock engaged.*



**CAUTION** Try to balance the load primarily on the implement wheels - as in loading a trailer or spreader. Avoid overloading the drawbar. Add front end weights for improved stability. Engage the clutch smoothly, avoid jerking and use the brakes cautiously to avoid jack-knifing.



 **WARNING** Rear upset can result if pulling from wrong location on tractor. Hitch only to the drawbar. Use 3 point hitch only with the implements designed for its use - not as a drawbar.

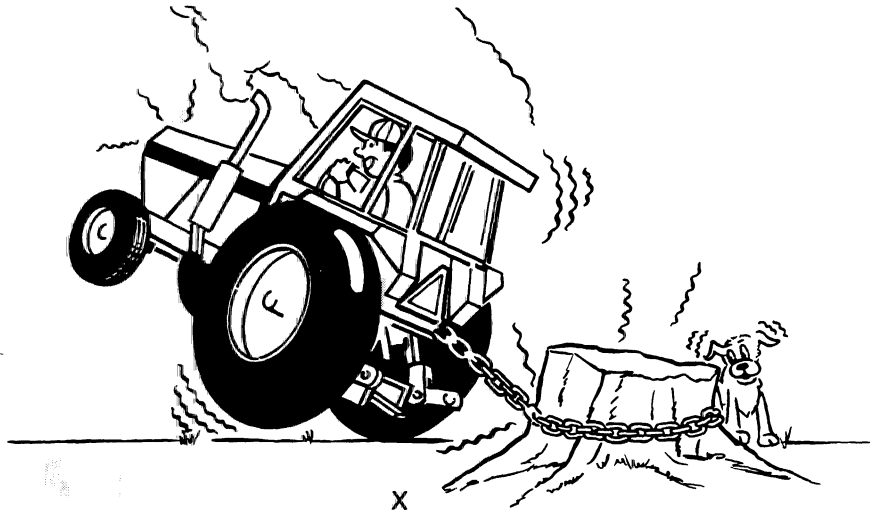





**WARNING** Be certain both latches are fully engaged across the implement lift pins before transporting or pulling the implement.



 **CAUTION** The implement should be lowered to the ground before uncoupling of the remote hydraulic hoses.

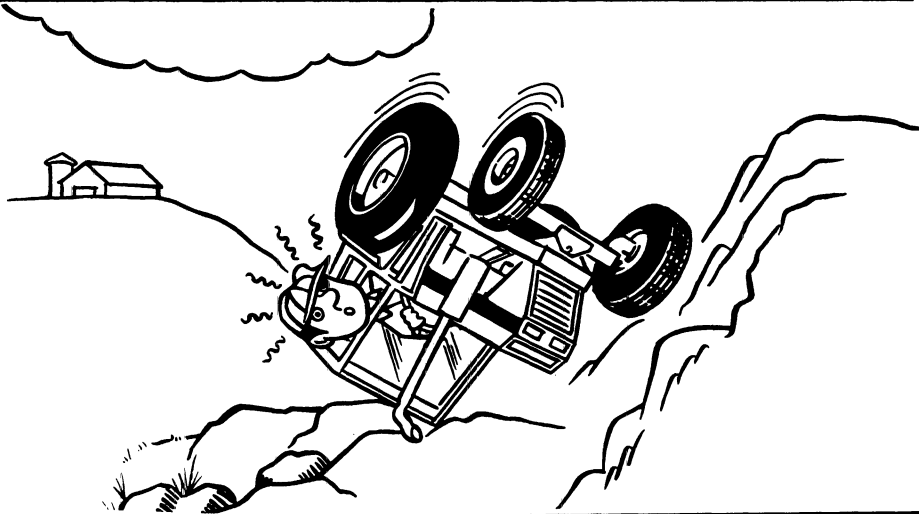

 **WARNING** Stay off slopes too steep for safe operation. Shift down before you start up or down a hill with a heavy load. Avoid "free wheeling".

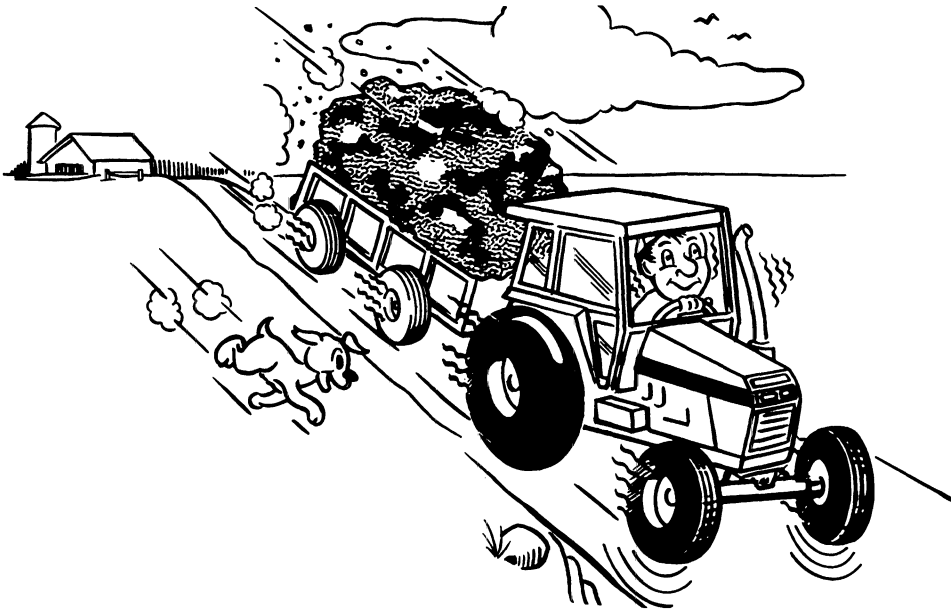

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)