

TRIM THIS EDGE

# **C50, C60, C70, C80, C90 and C100 Tractors**

**Don 9-80301**

**NOTE: This manual replaces Don 9-80300**

TRIM THIS EDGE

RIGHT PAGE






THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL, CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.

M171B

Safety Decals on this machine which use the words **Danger, Warning or Caution**, are defined as follows:

- **DANGER:** Indicates an immediate hazardous situation which if not avoided, will result in death or serious injury. The color associated with Danger is RED.
- **WARNING:** Indicates an potentially hazardous situation which if not avoided, will result in serious injury. The color associated with Warning is ORANGE.
- **CAUTION:** Indicates an potentially hazardous situation which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

Safety Decals on this machine which are ISO-two panel Pictorial type decals, are defined as follows:

- The first panel indicates the nature of the hazard.
- The second panel indicates the appropriate avoidance of the hazard.
- Background color is YELLOW.
- Prohibition symbols such as   and  if used, are RED.



# WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH. BEFORE USING THIS MACHINE, MAKE CERTAIN THAT EVERY OPERATOR:

- Is instructed in safe and proper use of the machine.
- Reads and understands the Manual(s) pertaining to the machine.
- Reads and understands ALL Safety Decals on the machine.
- Clear the area of other persons.
- Learns and practices safe use of machine controls in a safe, clear area before operating this machine on a job site.

It is your responsibility to observe pertinent laws and regulations and follow Case Corporation instructions on machine operation and maintenance.

TRIM THIS EDGE

Don 9-80301

© 1998 Case Corporation

December 1997 (Revised July 1998)

Case and IH are registered trade marks of Case Corporation

TRIM THIS EDGE

LEFT PAGE

# GENERAL TABLE OF CONTENTS

<b>TO THE OWNER .....</b>	<b>1</b>
<b>IDENTIFICATION NUMBERS .....</b>	<b>6</b>
PRODUCT IDENTIFICATION NUMBER (P.I.N.) AND SERIAL NUMBERS .....	6
MACHINE COMPONENTS .....	8
<b>SAFETY/DECALS .....</b>	<b>10</b>
SAFETY .....	10
INTENDED USE .....	10
GENERAL SAFETY AND ACCIDENT .....	11
PREVENTION REGULATIONS .....	11
TRANSPORTING PASSENGERS .....	11
OPERATION .....	11
LEAVING THE TRACTOR .....	12
IMPLEMENTS .....	12
PTO OPERATION .....	12
SERVICE .....	13
HAZARDOUS CHEMICALS .....	13
BASIC RULE .....	13
SAFETY DECALS .....	14
ROLL OVER PROTECTIVE STRUCTURE (ROPS) .....	17
<b>INSTRUMENTS/CONTROLS .....</b>	<b>18</b>
TRACTOR ACCESS .....	18
OPERATORS SEAT .....	19
OPERATING CONTROLS .....	24

TRIM THIS EDGE

I

TRIM THIS EDGE

RIGHT PAGE

TRIM THIS EDGE

<b>OPERATING INSTRUCTIONS</b> .....	<b>32</b>
BEFORE STARTING THE ENGINE .....	32
RUN - IN PROCEDURE .....	33
SERVICE INDICATOR LAMPS AND GAUGES .....	34
NORMAL STARTING PROCEDURE .....	36
COLD TEMPERATURE OPERATION .....	38
PARKING THE TRACTOR AND STOPPING THE ENGINE .....	42
TRANSMISSION OPERATING INSTRUCTIONS .....	43
DRAWBAR .....	47
HEIGHT ADJUSTABLE TRAILER HITCHES .....	52
AUTO HITCH .....	55
TRAILER/IMPLEMENT TOWING EYE DIMENSIONS .....	60
AUXILIARY POWER CONNECTIONS .....	62
TRACTOR WARNING LAMPS .....	63
TOWING THE TRACTOR .....	65
HOW TO TRANSPORT THE TRACTOR .....	66
<b>FIELD OPERATION</b> .....	<b>67</b>
CREEPER SPEED TRANSMISSION OPERATION .....	67
POWER TAKEOFF (PTO) .....	69
REAR THREE POINT HITCH PREPARATION .....	75
THREE POINT HITCH OPERATION .....	83
DIFFERENTIAL LOCK .....	87
MFD OPERATION .....	88
REMOTE HYDRAULICS OPERATION .....	89
ROPS FRAME .....	92
<b>TIRES/WHEELS/SPACING/BALLAST</b> .....	<b>94</b>
TIRE AND WHEEL EQUIPMENT .....	94
TIRE AND WHEEL SERVICE .....	102
FRONT AXLE AND FRONT TREAD ADJUSTMENTS .....	103
FRONT TO REAR TIRE SIZE COMBINATIONS .....	112
FRONT WHEEL FENDERS .....	115
REAR WHEEL TREAD ADJUSTMENT .....	116
TRACTOR BALLAST .....	122

<b>LUBRICATION/MAINTENANCE</b> .....	<b>133</b>
ENVIRONMENT .....	133
PLASTIC AND RESIN PARTS .....	133
SERVICE PARTS .....	133
HOURMETER .....	134
HOOD AND SIDE COVERS .....	135
LUBRICANTS AND CAPACITIES .....	138
LUBRICATION/MAINTENANCE CHART .....	140
10 HOURS OR DAILY .....	142
50 HOUR MAINTENANCE .....	145
100 HOUR MAINTENANCE .....	148
250 HOUR MAINTENANCE .....	149
1000 HOUR MAINTENANCE .....	166
2000 HOUR MAINTENANCE .....	178
<b>ELECTRICAL SYSTEM</b> .....	<b>184</b>
GENERAL SERVICE INFORMATION .....	184
BATTERY .....	187
BULB AND LAMP REPLACEMENT .....	190
<b>MACHINE STORAGE</b> .....	<b>194</b>
<b>SPECIFICATIONS</b> .....	<b>196</b>
DIESEL ENGINES .....	196
ELECTRICAL .....	198
GENERAL MACHINE .....	199
TRAVEL SPEEDS .....	203
APPROXIMATE TRACTOR MEASUREMENTS .....	205
APPROXIMATE TRACTOR WEIGHTS .....	209
NOISE LEVEL .....	211

TRIM THIS EDGE

III

TRIM THIS EDGE

RIGHT PAGE

TO THE OWNER

**TO THE OWNER**

**Mechanical Front Drive (MFD) Tractor**



DP97E426

 
TRIM THIS EDGE

Dealer Stamp



**Manufacturer:**

CASE UNITED KINGDOM LIMITED  
Wheatley Hall Road  
Doncaster  
South Yorkshire  
DN2 4PG  
ENGLAND



TRIM THIS EDGE

RIGHT PAGE

## Two Wheel Drive Tractor

TRIM THIS EDGE



DP97B066

### How To Use This Manual

Read this manual before you start the engine or operate your tractor. If you need any more information, see your Case dealer.

This manual contains important information about the safe operation, adjustment and maintenance of your Case Tractor. To help you find information easily this manual has been separated into chapters, as shown in the General Table of Contents. The operation of the tractor has been separated into four main chapters:

1. INSTRUMENTS/CONTROLS - Showing the location of all controls.
2. OPERATING INSTRUCTIONS - General information for every day tractor operation, e.g. starting/stopping the tractor, operating the transmission etc.
3. FIELD OPERATION - Information for various operations specifically for use in the field, e.g. 3 point hitch, rear PTO etc.
4. TIRES/WHEELS/SPACING/BALLAST - Adjustments for various tractor operating applications, e.g. tire pressures, tread widths, ballast, etc.

## TO THE OWNER

---

The maintenance of the tractor has been separated into two main chapters:

1. LUBRICATION/MAINTENANCE - Service intervals, lubricants, etc.
2. ELECTRICAL SYSTEM - General electrical service information.

**IMPORTANT:** Refer to the Detail Index at the end of this manual for locating specific items about your machine.

The right and left of the tractor in this manual are the same as your right and left when sitting in the tractor seat looking forward.

DO NOT operate or permit anyone to operate or service this machine until you or the other persons have read this manual. Use only trained operators who have demonstrated the ability to operate and service this machine correctly and safely.

This tractor, with standard equipment and authorized attachments, is intended to be used for farming, etc.

DO NOT use this machine for any application or purpose other than those described in this manual. Consult an authorized dealer or the Case Corporation on changes, additions or modifications that can be required for this machine to comply with various country regulations and safety requirements. Unauthorized modifications will cause serious injury or death. Anyone making such unauthorized modifications is responsible for the consequences.

TRIM THIS EDGE



**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)