

**Tractors
1290 / 1390**

Operator's Manual

9-9202



SERVICE PERIODS

The service periods have been changed since this book was printed.

Do the initial service at *20* to *60* hours.

Do the 60 hour service at *50* hours.

Do the 125 hour service at *100* hours.

Do the 250 hour service at *200* hours.

Do the 200/250 hour service at *200* hours.

Do the 500 hour service at *400* hours.

Do the 1000 hour service at *800* hours.

The gears of the tractor hourmeter have been changed. You will not actually service your tractor more frequently.

Note: The service periods are correctly shown in the Tractor Service Book Pub. 9-5306.

SECTIONS

	Page
TO THE OWNER	5
SAFETY RULES	7
HAND SIGNALS	14
DECALS	16
TRACTOR SERIAL NUMBERS	20
SPECIFICATIONS	22
INSTRUMENTS AND CONTROLS	42
OPERATING	79
MAINTENANCE	111
HIGH CLEARANCE TRACTORS	164

CONTENTS

SPECIFICATIONS

DIESEL ENGINE SPECIFICATIONS	22
GENERAL TRACTOR SPECIFICATIONS	24
FUEL	29
ANTI-FREEZE	29
BRAKE AND CLUTCH FLUID	30
APPROVED LUBRICANTS	31
TYRE SIZES, MAXIMUM LOADS AND PRESSURES	34
TYRE ARRANGEMENTS: 4WD TRACTORS	35
FRONT TREAD WIDTHS (2WD)	36
FRONT TREAD WIDTHS (4WD)	37
REAR TREAD WIDTHS	38
APPROXIMATE MEASUREMENTS	39
TRAVEL SPEED CHARTS—HYDRA-SHIFT	40
TRAVEL SPEED CHARTS—SYNCHROMESH	42

INSTRUMENTS AND CONTROLS

	Page
OPERATING INSTRUMENTS: } ALL TRACTORS	44
WARNING LAMPS: }	46
OPERATING CONTROLS: }	48
OPERATING PEDALS: } CAB TRACTORS	52
CONTROL LEVERS AND SWITCHES: }	54
OPERATOR'S SEAT: }	62
OPERATING CONTROLS: }	64
OPERATING PEDALS: } TRACTORS WITHOUT CAB	68
CONTROL LEVERS: }	70
OPERATOR'S SEAT: }	75
SEAT BELTS	76

OPERATING

FRONT OPENING ENGINE COVER	77
REAR OPENING ENGINE COVER	78
ENGINE:	
Before Starting the Engine	81
Starting the Engine	82
Before Stopping the Engine	83
Stopping the Engine	83
SYNCHROMESH TRANSMISSION:	
Operating with Synchromesh Transmission	84
Using the Travel Speed Chart	84
BALLAST	86
MEASURING WHEEL SLIP	87
TREAD (TRACK) ADJUSTMENT: FRONT WHEELS	88
TREAD (TRACK) ADJUSTMENT: REAR WHEELS —	
POWER ADJUSTED	89

OPERATING

	Page
LINKAGE: DUAL CATEGORY	90
Settings	90
LIFT ROD	92
TELESCOPIC STABILISER BARS	94
MECHANICAL FLOTATION	95
SENSING UNIT	96
SELECTOR DIAL	97
OPERATING WITH DRAFT CONTROL	98
OPERATING WITH POSITION CONTROL	99
THREE-WAY VALVE	100
HOSE AND COUPLINGS	102
DOUBLE ACTING TAKE-OFF VALVE	103
DRAWBAR	106
PICK-UP HITCH	108
POWER TAKE-OFF (PTO)	110

MAINTENANCE

INTRODUCTION	113
FIRST OIL CHANGE AT 20/60 HOURS	113
SERVICE CHART: CAB TRACTORS	114
SERVICE CHART: TRACTORS WITHOUT CAB	118
SERVICE CHART: 4WD TRACTORS	
David Brown Front Axle	122
Carraro Front Axle	123
GREASE FITTINGS	124
DAILY/10 HOUR SERVICE	126
50 HOUR SERVICE	127
100 HOUR SERVICE	139
200 HOUR SERVICE	141
400 HOUR SERVICE	142
800 HOUR SERVICE	154

MAINTENANCE

	Page
FUEL WATER TRAP	127
BRAKE ADJUSTMENT	128
CLUTCH ADJUSTMENT	
Transmission } Cab	130
PTO } Tractors	131
Transmission } Tractors without cab	132
PTO }	
TRANSMISSION OIL	135
FRONT AXLE: 4WD DAVID BROWN	137, 140 & 160
ENGINE OIL FILTER	141
FRONT AXLE: 4WD CARRARO	138, 140 & 160
TRANSMISSION OIL FILTER	143
INJECTORS	146
VALVE CLEARANCES	146
FAN BELT	147
FUEL FILTERS	147
REMOVING AIR FROM THE FUEL SYSTEM	148
HYDROSTATIC STEERING	150
AIR CLEANER ELEMENTS	152
FRONT HUB BEARINGS	154
COOLING SYSTEM	156
CAB AIR FILTER	157
BRAKE AND CLUTCH FLUID	158
BATTERY	162
ALTERNATOR	164
FUSES	165

HIGH CLEARANCE TRACTORS

IDENTIFICATION	166
APPROXIMATE MEASUREMENTS	167
CONVERTING TO HIGH CLEARANCE:	
Rear Axle	168
Steps	173
Front Axle	175
MAINTENANCE	176

TO THE OWNER OF A DAVID BROWN TRACTOR

Use this manual as your guide. If you follow the instructions that are given, your David Brown tractor will work correctly for many years. It is a recommendation that some jobs are best done by your David Brown Dealer. For this reason, a complete description of these jobs is not given in this manual.

If you do need to do these jobs, a service repair manual is available from your David Brown Dealer. See your David Brown Dealer for any parts or assistance that you need. He has persons with special training who know the best methods for the maintenance and repair of your David Brown Tractor.

Instructions on how to convert to High Clearance are given at the end of the manual.

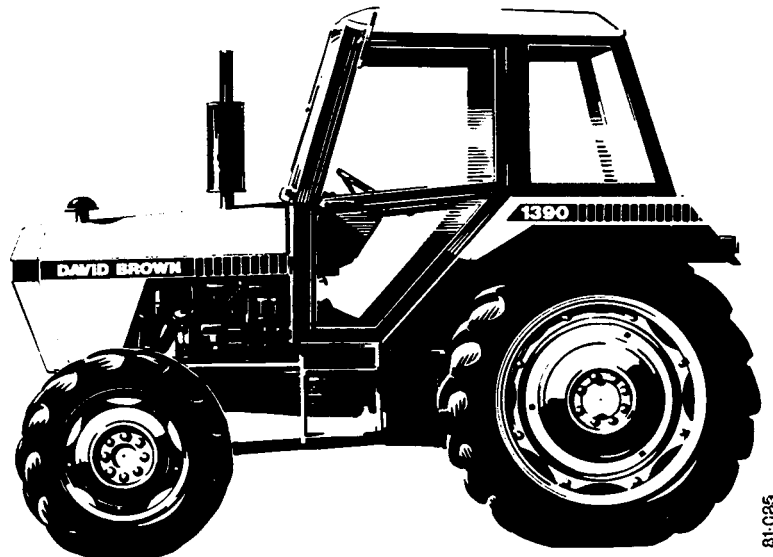


FIGURE 1. CAB TRACTOR — FOUR WHEEL DRIVE

INTRODUCTION

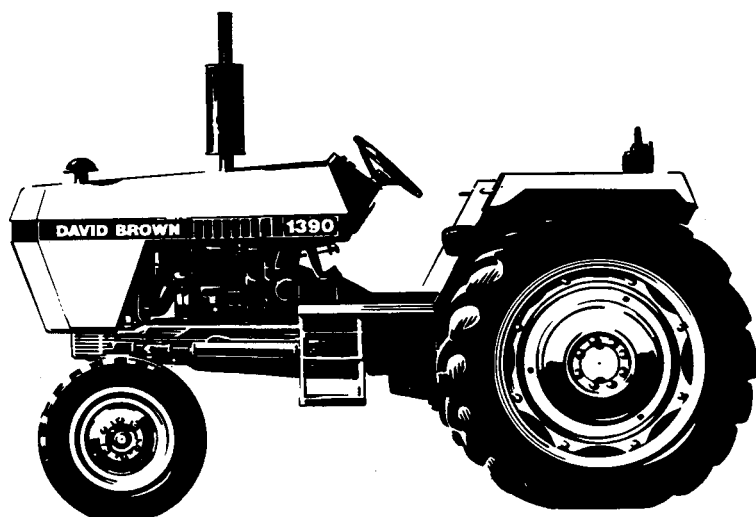


FIGURE 2. TRACTOR WITHOUT CAB — TWO WHEEL DRIVE

YOUR DAVID BROWN DEALER:

LEFT AND RIGHT HAND

When left-hand and right-hand are used in this manual, they are the same as your left and right when you are sitting in the tractor seat looking forward.

Buy Now



Our support email:

ebooklibonline@outlook.com