

TABLE OF CONTENTS

TO THE OWNER	III	Differential Oil Level - MFD	39
		Front Hubs Oil Level - MFD	40
SAFETY	V-XIX	OPERATING INSTRUCTIONS	
Safety Rules	V	Run-In Procedure	41
Before Starting	V	Before Operating The Tractor	42
Operation	VII-XVI	Towing	43
Service	XVII-XIX	How to Transport the Tractor	43
HAND SIGNALS	XX,XXI	Operating Instruments	44-45
DECALS	XXII-XXVI	Operating Lamps	46-47
SERIAL NUMBERS	1	Operating Controls Tractor	
DIESEL ENGINE SPECIFICATIONS	2-3	Without Cab	48
GENERAL SPECIFICATIONS	4-8	Instrument Panel	48-51
APPROXIMATE TRACTOR SPEEDS ...	9-12	Foot Pedals	52,53
FUEL SPECIFICATIONS	13	Levers, L/H Side	54-57
APPROXIMATE MEASUREMENTS ...	14-17	Levers, R/H Side	58-63
APPROXIMATE TRANSPORT		Operating Controls	
WEIGHTS	14-17	Tractor With Cab	64
TIRE AND WHEEL EQUIPMENT	18-19	Instrument Panel	64-67
TIRE ARRANGEMENTS - MFD	20	Air Conditioning Operating	68-71
FRONT WHEEL TREAD		Foot Pedals	72-73
POSITIONS - 2WD	21	Levers, L/H Side	74-77
FRONT WHEEL TREAD		Levers, R/H Side	78-83
POSITIONS - MFD	22-24	Controls Cab Roof	84-85
REAR WHEEL TREAD POSITIONS	25	Controls Cab	86-88
POWER ADJUST REAR WHEEL		Operators Seat	89-90
TREAD POSITIONS	26	Seat Belts	91
LUBRICATION	27	Amber Warning Lamps, Direction	
Engine Hourmeter	27	Turn Signals & SMV Symbol	92
Diesel Engine Oil	27	Implement Warning Lamps,	
Capacities and Approved		SMV Symbol	93
Lubricants	29	Operating On The Road	94
Lubrication Chart	28-31	Auxiliary Outlet Socket	95,96
Grease Fittings	32-33	Operating The Engine	97
Engine Oil Change	34	Starting Procedure	98,99
Engine Oil Filter Change	35	Stopping the Engine	100,101
Transmission Oil Level Check &		Cold Temperature Operation	102
Change	36	Differential Lock	103
Transfer Gear Box Oil Level	36	Power Shift Transmission	104-105
Hydraulic Oil Filter Change	37,38	Synchronesh Transmission	106-107
		Mechanical Front Drive (MFD)	108
		Power Takeoff	109-111
		Operating Safety	112
		Drawbar	113-115
		Pick-Up Hitch/Drawbar	116-119
		Three Point Linkage	120
		Jeffes Type Linkage	121
		Lift Rod Adjustment	122
		Leveling Lever Adjustment	123
		Sway Blocks	124
		Mechanical Floatation	125
		Stabilizer Bar Adjustment	126
		Top Link Adjustment	127

Spacer Bar Adjustment	127	ROPS	185
Operating Jeffes Linkage	128	Seat Belt	180
Operating the Linkage	129-133	Transmission Oil	172
Lower Link Sensing	131	Transmission Filter	172
Operating Draft	132,133	Valve Clearances	178
Operating Above Ground	134	Wheel Nuts	174
Operating External Equipment ...	135-143	OPTIONAL EQUIPMENT.....	206
Hydraulic Hose Couplers	144	CASE TECHNICAL MANUALS	209
Transmission Oil Cooler	145		
Front Axle Adjustment - 2WD	146		
Front Axle Adjustment - MFD	147-149		
Steering Lock Adjustment	150		
Tractor Ballast	151,152		
Front End Weights	153		
Rear Wheel Weights	154		
Liquid Ballast	155		
Measuring Wheel Slip	156		
	157		
Roll Over Protection Structure ROPS			
.....	158,161		
PREVENTATIVE MAINTENANCE ...	162-205		
First 20 Hour Service	163		
Raising Engine Cover	164		
Removing Front Panel	165		
Removing Side Panels	166,167		
Service Periods	168		
Daily 10 Hour Inspection	169		
50 Hour Service	170-174		
100 Hour Service	175-176		
200 Hour Service	177		
400 Hour Service	178-185		
800 Hour Service	186-190		
Air Cleaner	183-184		
Air Conditioning	191-196		
Alternator	200		
Auxiliary Battery	199		
Battery	197,198		
Brake Adjustment	173		
Brake Fluid	187		
Cab Air Filter	190		
Clutch Adjustment	171		
Coolant	189		
Compressor Belt	177,194		
Differential - MFD	39		
Engine Cover	164		
Engine Oil	34		
Engine Oil Filter	35		
Final Drives	175		
Front Hubs - MFD	40		
Fuel Filters	181		
Fuel Pump Water Trap	170		
Fuses	205		
Injectors	178		
Lamps	201-204		
Power Steering	170		


TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information.

Your Authorized Case Dealer

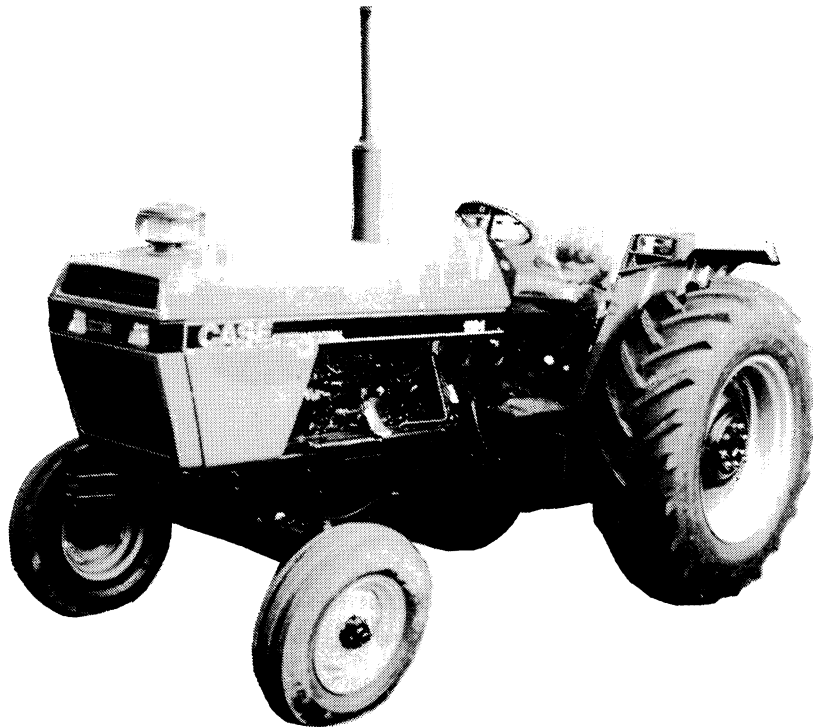

2WD TRACTOR WITHOUT CAB

Figure 1

NOTE: *When left-hand and right-hand are used in this manual, they are the same as your left and right when you are sitting in the tractor seat looking forward.*



MFD TRACTOR WITH CAB
Figure 2

NOTE: *When left-hand and right-hand are used in this manual, they are the same as your left and right when you are sitting in the tractor seat looking forward.*

SAFETY

Safety Rules

Understand that your safety and the safety of other persons is measured by how you service, and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

READ THIS MANUAL COMPLETELY and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

Case is continuing to work for your safety by making tractors with better protection and by giving these rules for safe operation.

Before Starting



CAUTION: *To help prevent personal injuries during tractor operation and maintenance, use safety shoes, a hard hat, safety glasses or goggles and good fitting clothing.*



CAUTION: *Provide a first aid kit for use in case of accident.*



CAUTION: *It is good practice to carry a fire extinguisher on the tractor. Be sure that the extinguisher is properly maintained and be familiar with its proper use.*

WARNING: Before starting engine study Operators Manual safety messages.

Read all safety signs on machine.

Clear the area of other persons.



Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturers instructions on machine operation, service, and to observe pertinent laws and regulations.

Operator and Service Manuals may be obtained from your equipment dealer.

CAUTION: Check the machine for leaks or any parts that are broken, not working correctly, or not there at all. Before you start the machine, tighten all caps, dipsticks, battery covers, etc.



WARNING: To help prevent injury before starting engine, put shields in place. Sit in the seat and place controls in neutral.

Before operating tractor, clear people away, no riders and fasten seat belt. When operating tractor, keep away from power driven parts, avoid steep slopes, embankments, ditches, rough terrain and reduce speed when turning.



In high speed travel, couple the brake pedals together where applicable. On road travel, use flashing warning lights where permitted and keep SMV emblem visible from rear.

When stopped, engage park lock or brake, lower implement to ground and stop engine before dismounting to service or clear machines.

WARNING: Before starting the engine, be sure all operating controls are in neutral. This will ease starting loads on the starter and batteries and will eliminate the accidental start up of PTO driven equipment.




Operation

WARNING: *Engine can start with transmission in gear when neutral safety switch is by-passed:*

1. *Do not connect across terminals on starter.*
2. *Attach booster batteries according to safe method in Operators Manual. Then use recommended starting procedure from operators seat.*
3. *When necessary, repair electrical system components promptly so that "jump starting" will not be attempted.*



Machine run-away can cause injury or death to operator and bystanders.

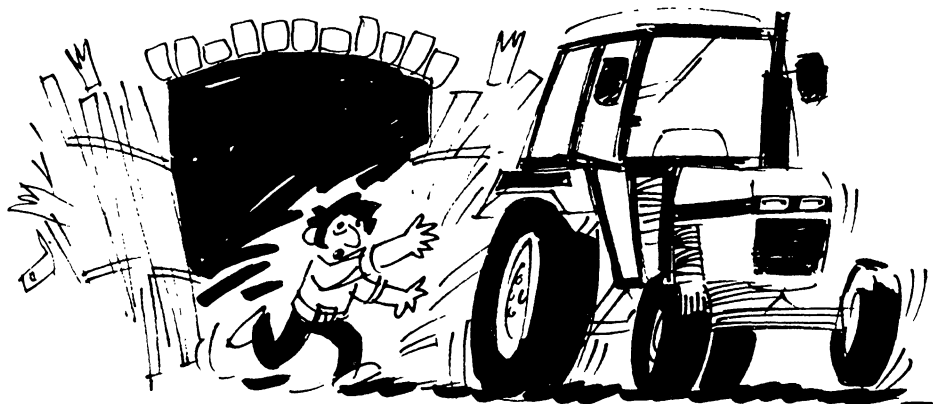


WARNING: Cab air filters remove dust in the air, but are not capable of removing chemicals used in spraying crops or in weed control. Many chemicals used for these purposes are toxic when improperly used, and can be hazardous to operators and others in the area. Follow the instructions of manufacturers of both the equipment and the chemicals regarding prohibitions against inhalation of dust or spray, personal hygiene practices, and other precautions noted by the manufacturers.



WARNING: Tractor travel speed should be such that complete control and tractor stability is maintained at all times. Where possible, avoid operating the tractor near ditches, embankments and holes. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.



WARNING: Collision of high speed road traffic and tractors or implements can cause personal injury or death. On roads, use flasher/lights according to local laws. Keep SMV emblem visible.

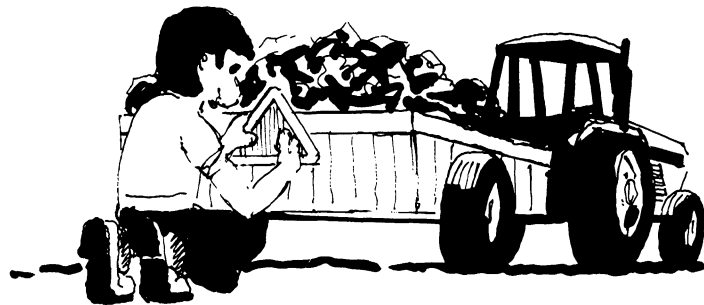




CAUTION: *Stop, look and listen before entering a highway, stay on your side of the road and pull over to let faster traffic pass. Slow down and signal as you turn off.*



CAUTION: *Brake pedals must be locked together for road travel. This will insure uniform brake application and maximum stopping ability.*

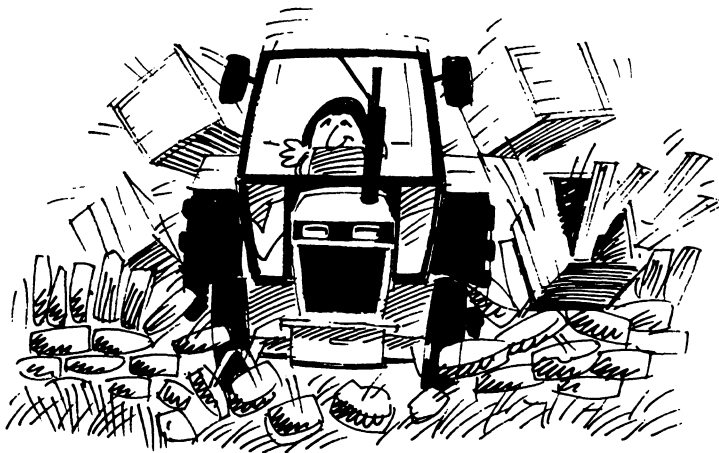

WARNING: *Extra weight and bad traction conditions such as mud or ice increase your stopping distance. Remember that liquid in the tires, weights on the tractor or wheels, tanks filled with fertilizer, herbicides or insecticides - all these add weight and increase the distance you need in which to stop.*

Buy Now



Our support email:

ebooklibonline@outlook.com