

**1694 Operators Manual**  
**9-9922**



**THIS SAFETY ALERT SYMBOL INDICATES IMPORTANT SAFETY MESSAGES IN THIS MANUAL. WHEN YOU SEE THIS SYMBOL CAREFULLY READ THE MESSAGE THAT FOLLOWS AND BE ALERT TO THE POSSIBILITY OF PERSONAL INJURY OR DEATH.**

## **IMPORTANT**

**If This Tractor Is Used By an Employee Or Is Loaned Or Rented, Make Certain That The Operator(s), prior To Operating:**

- 1. Is Instructed In Safe And Proper Use.**
- 2. Reads And Understands The Manuals Pertaining To The Tractor.**

## **SAFE OPERATING INSTRUCTIONS**

- |   |   |
|---|---|
| <ol style="list-style-type: none"><li><b>1. SECURELY FASTEN YOUR SEAT BELT IF THE TRACTOR HAS A ROPS.</b></li><li><b>2. WHERE POSSIBLE, AVOID OPERATING THE TRACTOR NEAR DITCHES, EMBANKMENTS, AND HOLES</b></li><li><b>3. REDUCE SPEED WHEN TURNING, CROSSING SLOPES, AND ON ROUGH, SLICK, OR MUDDY SURFACES.</b></li><li><b>4. STAY OFF SLOPES TOO STEEP FOR SAFE OPERATION.</b></li><li><b>5. WATCH WHERE YOU ARE GOING, ESPECIALLY AT ROW ENDS ON ROADS</b></li></ol> | <ol style="list-style-type: none"><li><b>AND AROUND TREES.</b></li><li><b>6. DO NOT PERMIT OTHERS TO RIDE.</b></li><li><b>7. OPERATE THE TRACTOR SMOOTHLY NO JERKY TURNS, STARTS OR STOPS.</b></li><li><b>8. HITCH ONLY TO THE DRAWBAR AND HITCH POINTS RECOMMENDED BY TRACTOR MANUFACTURER.</b></li><li><b>9. WHEN TRACTOR IS STOPPED, SET BRAKES SECURELY AND USE PARK LOCK IF AVAILABLE.</b></li></ol> |
|---|---|

**PER OSHA 1928 51**

**EMPLOYER SHALL NOTIFY EMPLOYEES WHO OPERATE AGRICULTURAL TRACTORS OF THESE INSTRUCTIONS AT INITIAL ASSIGNMENT AND ANNUALLY THEREAFTER.**

Case Tractors Meltham HUDDERSFIELD England HD7 3AR

November, 1983 (Revised October 1985)

# TABLE OF CONTENTS

TO THE OWNER .....	III	OPERATING INSTRUCTIONS .....	39
SAFETY .....	IV-XIX	Run-In Procedure .....	39
Safety Rules .....	IV	Before Operating the Tractor .....	40
Before Starting .....	V	Towing .....	41
Operation .....	IV	How to Transport the Tractor .....	41
Service .....	VIII	Operating Instruments .....	42,43
HAND SIGNALS .....	XX-XXI	Operating Lamps .....	44,45
DECALS .....	XXII-XXVI	Instrument Panel Controls .....	46-49
SERIAL NUMBERS .....	1	Air Conditioning Operation .....	50-53
DIESEL ENGINE SPECIFICATIONS .....	2,3	Foot Pedals .....	54,55
GENERAL SPECIFICATIONS .....	4-7	Levers, L/H Side .....	56,57
APPROXIMATE TRACTOR SPEEDS ...	8-11	Levers, R/H Side .....	58-63
FUEL SPECIFICATIONS .....	12	Controls Cab Roof .....	64,65
APPROXIMATE MEASUREMENTS .....	13	Controls Cab .....	66-68
APPROXIMATE TRANSPORT		Operators Seat .....	69
WEIGHTS .....	13	Seat Belt .....	70
TIRE AND WHEEL EQUIPMENT .....	14,15	Auxiliary Outlet Socket .....	71
FRONT TO REAR		Operating the Engine .....	72
TIRE ARRANGEMENTS .....	16	Starting Procedure .....	73,74
FRONT WHEEL TREAD		Stopping the Engine .....	75,76
POSITIONS .....	17-19	Cold Temperature Operation .....	77
REAR WHEEL TREAD POSITIONS .....	20	Power Shift Transmission .....	78,79
LUBRICATION .....	21-38	Hydraulic Oil Cooler .....	80
Engine Hourmeter .....	21	Power Takeoff .....	81-83
Selection of Engine Oil .....	21	Operating Safety (PTO) .....	84
Capacities and Approved		Drawbar .....	85-87
Lubricants .....	23-25	Drawbar With Pickup Hitch .....	88-91
Lubrication Charts .....	22-27	Three Point Linkage .....	92
Grease Fittings .....	28,29	Linkage Jeffes Type .....	93
Engine Oil Change .....	30	Lift Rod Adjustment .....	94
Engine Oil Filter Change .....	31	Leveling Lever Adjustment .....	95
Transmission Oil Level Check and		Sway Blocks .....	96
Change .....	32	Mechanical Flotation .....	97
Transfer Gear Box Oil Level .....	33	Stabilizer Bar Adjustment .....	98
Steering Pump Filter Change .....	34	Top Link Adjustment .....	99
Final Drives .....	34	Spacer Bar Adjustment .....	99
Hydraulic Oil Filter Change .....	35,36	Operating the Linkage .....	100,101
Differential Oil Level - MFD .....	37	Operating Jeffes Linkage .....	102
Front Hubs Oil Level - MFD .....	38	Lower Link Sensing .....	103
		Operating Draft Equipment .....	105
		Operating Above Ground .....	106
		Operating External	
		Equipment .....	107,115
		Hydraulic Hose Couplers .....	116
		Front Tread Adjustment .....	117
		Toe-In Adjustment .....	118,119
		Rear Tread Adjustment .....	120
		Tractor Ballast .....	121
		Front End Weights .....	122
		Rear Wheel Weights .....	123
		Liquid Ballast .....	124
		Measuring Rear Wheel Slip .....	125

MAINTENANCE .....	126-167
First Oil Change 20 Hours .....	127
Raising Engine Cover .....	128
Removing Front Panel .....	129
Removing Side Panels .....	130-131
Regular Maintenance Chart .....	132
Daily Inspection .....	133
50 Hour Service .....	134-137
100 Hour Service .....	138
200 Hour Service .....	139
400 Hour Service .....	140-147
800 Hour Service .....	148-154
Air Conditioning .....	155-160
Alternator .....	164
Auxiliary Battery .....	163
Battery .....	161,162
Fuses .....	169
Lamps .....	165-168
 OPTIONAL EQUIPMENT .....	 170
 PATENT NUMBERS .....	 171

## TO THE OWNER OF A CASE TRACTOR

Use this manual as your guide. If you follow the instructions given in this manual, your Case Tractor will work well for many years.

Your Authorized Case Dealer can give you assistance with J I Case Company made parts and persons with special training that know the best methods of repair and maintenance for your tractor.

Call your Authorized Case Dealer if you need any assistance or information. Put the name, address and phone number of your nearest dealer below.

### Your Authorized Case Dealer



Figure 1

**NOTE:** When left-hand and right-hand are used in this manual, they are the same as your left and right when you are sitting in the tractor seat looking forward.

# SAFETY

## Safety Rules

Understand that your safety and the safety of other persons is measured by how you service, and operate this machine. Know the positions and operations of all controls before you try to operate. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE AREA BEFORE STARTING YOUR WORK.**

**READ THIS MANUAL COMPLETELY** and make sure you understand the controls. All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you start to operate.

The safety information given in this manual does not replace safety codes, insurance needs, federal, state and local laws. Make sure your machine has the correct equipment needed by the local laws and regulations.

J I Case is continuing to work for your safety by making tractors with better protection and by giving these rules for safe operation.

## Before Starting



**CAUTION:** *To help prevent personal injuries during tractor operation and maintenance, use safety shoes, a hard hat, safety glasses or goggles and good fitting clothing.*



**CAUTION:** *Provide a first aid kit for use in case of accident.*



**CAUTION:** *It is good practice to carry a fire extinguisher on the tractor. Be sure that the extinguisher is properly maintained and be familiar with its proper use.*

**WARNING:** Before starting engine study Operators Manual safety messages.

Read all safety signs on machine.

Clear the area of other persons.



Learn and practice safe use of controls before operating.

It is your responsibility to understand and follow manufacturers instructions on machine operation, service, and to observe pertinent laws and regulations.

Operator and Service Manuals may be obtained from your equipment dealer.



**CAUTION:** Check the machine for leaks or any parts that are broken, not working correctly, or not there at all. Before you start the machine, tighten all caps, dipsticks, battery covers, etc.



**WARNING:** To help prevent injury before starting engine, put shields in place. Sit in the seat and place controls in neutral.

Before operating tractor, clear people away, no riders and fasten seat belt. When operating tractor, keep away from power driven parts, avoid steep slopes, embankments, ditches, rough terrain and reduce speed when turning.

In high speed travel, couple the brake pedals together where applicable. On road travel, use flashing warning lights where permitted and keep SMV emblem visible from rear.

When stopped, engage park lock or brake, lower implement to ground and stop engine before dismounting to service or clear machines.



**WARNING:** Before starting the engine, be sure all operating controls are in neutral. This will ease starting loads on the starter and batteries and will eliminate the accidental start up of PTO driven equipment.



## Operation


**WARNING:** Engine can start with transmission in gear when neutral safety switch is by-passed:

1. Do not connect across terminals on starter.
  2. Attach booster batteries according to safe method in Operators Manual. Then use recommended starting procedure from operators seat.
  3. When necessary, repair electrical system components promptly so that "jump starting" will not be attempted.
- Machine run-away can cause injury or death to operator and bystanders.




**WARNING:** Cab air filters remove dust in the air, but are not capable of removing chemicals used in spraying crops or in weed control. Many chemicals used for these purposes are toxic when improperly used, and can be hazardous to operators and others in the area. Follow the instructions of manufacturers of both the equipment and the chemicals regarding prohibitions against inhalation of dust or spray, personal hygiene practices, and other precautions noted by the manufacturers.

**WARNING:** Tractor travel speed should be such that complete control and tractor stability is maintained at all times. Where possible, avoid operating the tractor near ditches, embankments and holes. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.

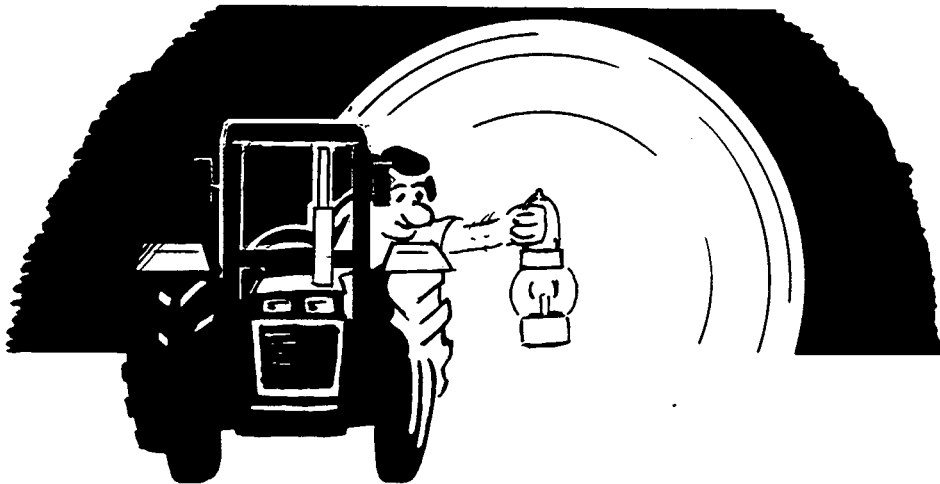

**WARNING:** Collision of high speed road traffic and tractors or implements can cause personal injury or death. On roads, use flasher/lights according to local laws. Keep SMV emblem visible.

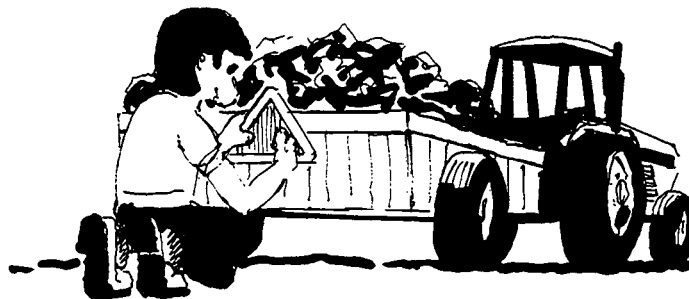




**CAUTION:** Stop, look and listen before entering a highway, stay on your side of the road and pull over to let faster traffic pass. Slow down and signal as you turn off.



**CAUTION:** Brake pedals must be locked together for road travel. This will insure uniform brake application and maximum stopping ability.

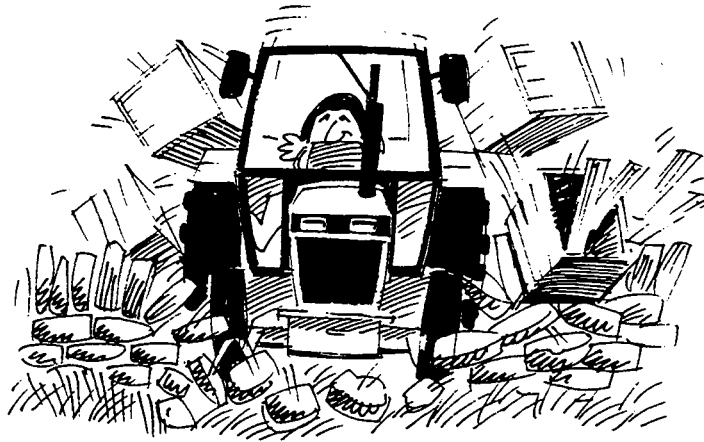

**WARNING:** Extra weight and bad traction conditions such as mud or ice increase your stopping distance. Remember that liquid in the tires, weights on the tractor or wheels, tanks filled with fertilizer, herbicides or insecticides - all these add weight and increase the distance you need in which to stop.



**CAUTION:** Make sure that the weight of a trailed vehicle that is not equipped with brakes, NEVER EXCEEDS the weight of the tractor that is towing the vehicle. Stopping distance increases with increasing speed as the weight of the towed load increases, especially on hills and slopes.



**WARNING:** A frequent cause of personal injury or death is persons falling off and being run over. Do not permit others to ride. Only one person - the operator - should be on a tractor when it is in operation.



**CAUTION:** Do not drive on roads, or at high speed anywhere, with the differential lock engaged. Difficult steering will occur, and can result in an accident. In field operation, use the differential lock for traction improvement, but release for turning at row ends.

**Buy Now**



Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)