

DOOSAN

950106-01249E
June 2015

WHEEL LOADER

**Shop
Manual**

DL200-5/DL200TC-5

Serial Number 10001 and Up

DOOSAN

Shop Manual DL200-5/DL200TC-5 WHEEL LOADER

Serial Number 10001 and Up

DOOSAN and the DOOSAN logo are registered trademarks of DOOSAN Corporation in the United States and various other countries around the world.



950106-01249E

June 2015

Table of Contents

1 Safety	1 Wheel Loader Safety
2 Specifications	1 Specifications
3 General Maintenance	1 General Maintenance Instructions 2 Standard Torques
4 Engine	1 Engine
5 Drivetrain	1 Transmission 2 Axle 3 Driveshaft
6 Steering	1 Power Steering System 2 Steering Unit 3 Priority Valve
7 Brake	1 Service Brake 2 Brake Pilot Supply Valve 3 Accumulator Charging Valve 4 Parking Brake 5 Brake Pedal Valve 6 Accumulator
8 Cooling System	1 Cooling System 2 Fan Motor 3 Fan Control Valve 4 Radiator Assembly

9 HST (Hydro-Static Transmission)

- 1 HST Pump
- 2 Travel Motor
- 3 HST Filter

10 Hydraulic System

- 1 Main Pump
- 2 Main Control Valve
- 3 Unloader Valve
- 4 Clutch and Pilot Supply Valve
- 5 Pilot System
- 6 Hydraulic System

11 Frame

- 1 Articulation Center
- 2 Cabin
- 3 Counterweight
- 4 Oil Tank
- 5 Fuel Tank
- 6 Cylinders

12 Electrical System

- 1 Electrical System
- 2 Air Conditioner

13 Options

- 1 Emergency Steering
- 2 Load Isolation System

14 Schematic

- 1 Hydraulic Schematic/Electrical Schematic

Safety

Wheel Loader Safety

Edition 1

Table of Contents

Wheel Loader Safety

Safety Instructions	1-1-5
Safety Messages	1-1-5
General	1-1-7
Operation	1-1-18
Maintenance	1-1-31
Transportation	1-1-46
Environment and Circumstances.....	1-1-48

SAFETY INSTRUCTIONS



WARNING

AVOID DEATH OR SERIOUS INJURY

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments repairs or service. Untrained operators and failure to follow instructions can cause death or serious injury.

SAFETY MESSAGES

Safety messages and safety decals included in this manual and on the machine provide instructions how to operate, service and maintain the machine. Safety messages and safety decals indicate potential hazards and describe safety precautions required to avoid hazards. Operator and maintenance personnel should read and understand these safety messages and decals before beginning operation or maintenance.



SAFETY ALERT SYMBOL



Be Prepared - Get to Know All Operating and Safety Instructions.

This is a Safety Alert Symbol. Wherever it appears in this manual or on safety decals on the machine, you must be alert to the potential for personal injury or accidents. Always observe safety precautions and follow recommended procedures.

Signal Words

The signal words "DANGER", "WARNING", "CAUTION" are used throughout safety messages and safety decals in this manual or on the machine. They indicate an existence of, and the relative seriousness of, a hazard. All three indicate that a safety risk is involved. Observe the precautions indicated whenever a Safety Alert Symbol is present, no matter which signal word appears next to it.



DANGER

DANGER - This signal word is used on safety messages and safety labels and indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

WARNING - This signal word is used on safety messages and safety labels and indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

CAUTION - This signal word is used on safety messages and safety labels and indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

Other Signal Words

In addition to safety signal words, the following signal words are used to indicate proper and effective use of machine.

IMPORTANT

This signal word identifies procedures which must be followed to avoid damage to machine.

NOTE: *The word "NOTE" identifies information for effective use.*

1. Turn battery disconnect switch to "ON" position.
2. Close battery compartment door.

GENERAL

Safe Operation is Operator's Responsibility

Only trained and authorized personnel should operate and maintain the machine.

Follow all safety rules, regulations and instructions when operating or performing maintenance on machine.

- Do not operate machine if you are under the influence of drugs or alcohol. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate the machine.
- When working with other personnel on a work site, be sure that all personnel know the nature of work and understand all hand signals that are to be used.
- Be sure that all guards and shields are installed in their proper location. Have guards and shields repaired or replaced immediately if damaged.
- Be sure that you understand the use and maintenance of all safety features such as pilot cutoff switch and seat belt. Use them always.
- Never remove, modify or disable any safety features. Always keep them in good operating condition.
- Always check for and know the location of underground and overhead utility lines before working.
- Failure to use and maintain safety features according to instructions in this manual, Safety Manual and Shop Manual can result in death or serious injury.

Know Your Machine

Know how to operate your machine. Know the purpose of all controls, gauges, signals, indicators and monitor displays. Know the rated load capacity, speed range, braking and steering characteristics, turning radius and operating clearances. Keep in mind that rain, snow, ice, loose gravel, soft ground, slopes, etc., can change operating capabilities of your machine.

Proper Work Tools and Attachments

Only use work tools and attachments that are recommended by DOOSAN for use on DOOSAN machines. When installing and using optional attachments, read instruction manual for attachment, and general information related to attachments in this manual. Because DOOSAN cannot anticipate, identify or test all attachments that owners may want to install on their machines, contact DOOSAN for written authorization and approval of attachments, and their compatibility with optional kits.

Attachments and attachment control systems that are compatible with the machine are required for safe and reliable machine operation. Do not exceed maximum operating weight (machine weight plus attachment) that is listed on ROPS certification plate.

Make sure that all guards and shields are in place on machine and on work tool. Depending on type or combination of work equipment, there is a potential that work equipment could interfere with the cabin or other parts of machine. Before using unfamiliar work equipment, check if there is any potential for interference, and operate with caution.

While you are performing any maintenance, testing, or adjustments to attachments, stay clear of the following areas: cutting edges, pinch points, and crushing surfaces.

Never use attachment as a work platform or manlift.

Contact your DOOSAN distributor about auxiliary hydraulic kits for attachments installation. If you are in doubt about the compatibility of a particular attachment with the machine, consult your DOOSAN distributor.

Pressurized Fluids

Pressurized air or fluids can cause debris and/or fluids to be blown out. This could result in death or serious injury.

Immediately after operation is stopped, coolant, engine oil, and hydraulic oil are at their highest temperatures and the radiator and hydraulic tank are still under pressure. Always wait for temperature to cool down. Follow specified procedures when attempting to remove caps, drain oil or coolant, or replacing filters. Always wait for temperature to cool down, and follow specified procedures when performing these operations. Failure to do so can result in death or serious injury.

When pressurized air and/or pressurized water is used for cleaning, wear protective clothing, protective shoes, and eye protection. Eye protection includes goggles or a protective face shield.


Pressure can be trapped in a hydraulic system and must be relieved before maintenance is started.

Releasing trapped pressure can cause sudden machine movement or attachment movement. Use caution if you disconnect hydraulic lines or fittings.

High-pressure oil that is released can cause a hose to whip or oil to spray. Fluid penetration can result in death or serious injury. If fluid enters skin or eyes, get immediate medical attention from a physician familiar with this injury.

Obey all local laws and regulations for disposal of liquids.

To prevent hot coolant from spraying out, stop engine and wait for coolant to cool. Using gloves, slowly loosen cap to relieve pressure.

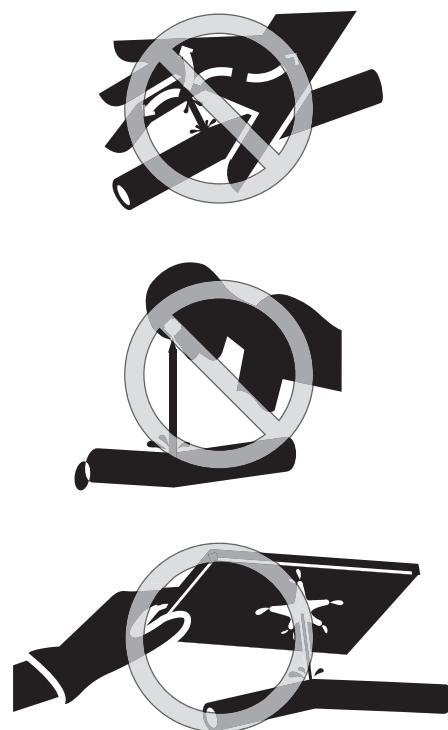

EX1400129


Figure 1

Flying or Falling Objects

On work sites where there is a potential hazard that flying or falling objects can come in contact with operator's cabin, select and use a guard to match operating conditions for additional operator protection.

Working in mines, tunnels, deep pits, and loose or wet surfaces, can produce hazards of falling rocks or flying objects. Additional protection for operator's cabin could be required such as an Operator Protection Guard (OPG) or window guards. Contact your DOOSAN distributor for information on available protective guards.

To prevent personnel from being struck by flying objects, keep personnel out of work area.

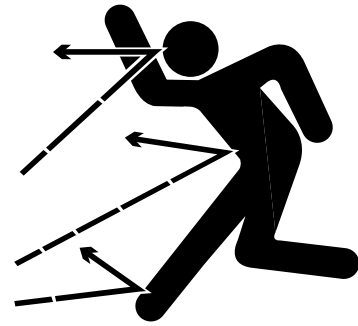

HAOA110L

Figure 2



HAOA100L

Figure 3

Personal Protective Equipment (PPE)


Do not wear loose clothing and accessories. Secure long hair. These items can snag on controls or on other parts of equipment.

Do not wear oily clothes. They are highly flammable.

Do not forget that some risks to your health may not be immediately apparent. Exhaust gases and noise pollution may not be visible, but these hazards can cause disabling or permanent injuries. Breathing masks and/or ear protection may be required.

Wear a hard hat, safety shoes, safety goggles, mask, leather gloves, earplugs and other protective equipment, as required.

While working on machine, never use inadequate tools. They could break or slip, or they may not adequately perform intended functions.

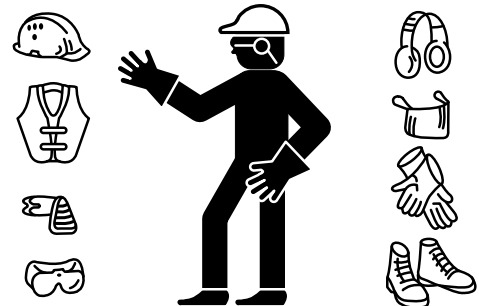

HAOA020L

Figure 4

Correction of Machine Problems

If any machine problems are found during operation and maintenance (noise, vibration, smell, incorrect gauges, smoke, oil leakage, etc.), or if any abnormal warning alerts are displayed on display monitor, stop the machine and take the necessary corrective actions. Do not operate the machine until problem has been corrected.

Crushing and Cutting

Keep objects away from moving fan blades. Fan blades can throw and cut objects.

Do not use a wire rope that is kinked or frayed, or a wire rope with any loss of diameter. Wear leather gloves when handling a wire rope.

When striking a loose retainer pin, it can fly out and can cause a serious injury. Make sure that area is clear of personnel when striking a retainer pin. To avoid injury to your eyes, wear safety goggles when striking a retainer pin.


Do not put your hand, arm or any other part of your body between movable parts. If going between movable parts is necessary, always position and secure work equipment so it cannot move. Properly support equipment before performing any work or maintenance under raised equipment.

If control levers are operated, clearance between machine and work equipment will change and this may lead to serious damage or can result in death or serious injury. Stay clear of areas that may have a sudden change in clearance with machine movement or equipment movement. Stay clear of all rotating and moving parts. Unless instructed, never attempt adjustments while machine is moving or while engine is running.

Do not depend on hydraulic cylinders to support raised equipment. Equipment can fall if a control is moved, or if a hydraulic line breaks, is loosened or disconnected.

If it is necessary to remove guards to perform maintenance, always install guards after maintenance is completed.

Always have at least two people working together if the engine must be running during service. One person needs to remain in the operator's seat, ready to work the controls to stop the machine or stop engine, if necessary.

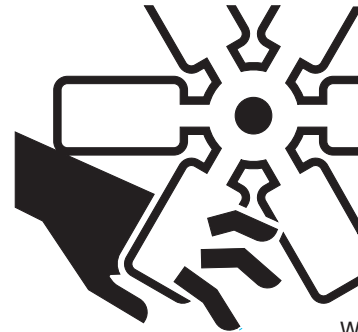

WL1300011

Figure 5

Buy Now



Our support email:

ebooklibonline@outlook.com