



# Service Repair Manual

## **Models**

# M315D WHEELED Excavator

---

Product: WHEELED EXCAVATOR

Model: M315D WHEELED EXCAVATOR J5B

Configuration: M315D Excavator J5B00001-UP (MACHINE) POWERED BY C4.4 Engine

## Disassembly and Assembly

### M315D, M315D Series 2, M315D2, M317D Series 2 and M317D2 Wheeled Excavators Machine Systems

Media Number -KENR6028-05

Publication Date -01/07/2015

Date Updated -08/07/2015

i03484340

## Swing Drive - Assemble

SMCS - 5459-016

## Assembly Procedure

Table 1

| Required Tools |             |                               |     |
|----------------|-------------|-------------------------------|-----|
| Tool           | Part Number | Part Description              | Qty |
| A              | 138-7575    | Link Bracket                  | 2   |
| B              | 1P-0510     | Driver Gp                     | 1   |
| C              | 1U-8759     | Plier Tips                    | 1   |
| D              | 5P-4758     | Retaining Ring Pliers         | 1   |
| E              | 1P-1859     | Retaining Ring Pliers         | 1   |
| F              | 1P-1855     | Retaining Ring Pliers         | 1   |
| H              | 1P-1863     | Retaining Ring Pliers         | 1   |
| J              | 305-4538    | Spanner Socket <sup>(1)</sup> | 1   |
|                | 240-8274    | Insert <sup>(2)</sup>         | 1   |
|                | 174-9465    | Spanner Socket <sup>(3)</sup> | 1   |
| K              | 1P-0520     | Driver Gp                     | 1   |
| L              | 2S-3230     | Bearing Lubricant             | 1   |
| M              | 8T-5096     | Dial Indicator Gp             | 1   |
| N              | 7H-1680     | Lubrication Hand Pump         | 1   |

(1) Used on the part number **152-7372** Swing Drive Gp

(2) Used on the part number **152-7372** Swing Drive Gp

(3) Used on the part number **152-7375** Swing Drive Gp

**Note:** Replace all O-ring seals and all gaskets. Apply a light film of "10W" oil to all components before assembly.

**Note:** Cleanliness is an important factor. Before assembly, all parts should be thoroughly cleaned in cleaning fluid. Allow the parts to air dry. Wiping cloths or rags should not be used to dry parts. Lint may be deposited on the parts which may cause later trouble. Inspect all parts. If any parts are worn or damaged, use new parts for replacement.

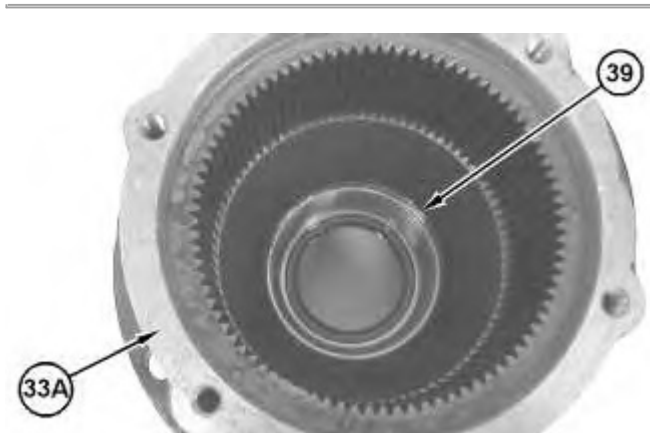


Illustration 1

g01027198

1. Lower the temperature of bearing cup (39). Use Tooling (K) to install bearing cup (39) in swing drive housing (33A).

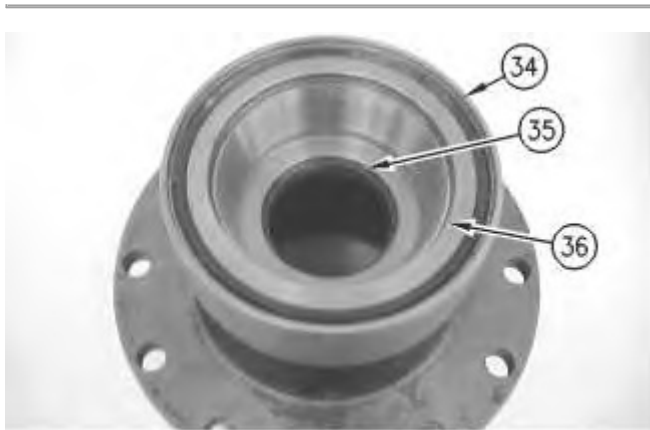


Illustration 2

g00906881

2. Lower the temperature of bearing cup (36). Use Tooling (K) to install bearing cup (36).
  3. Use Tooling (B) to install lip seal (35). Install seal (34). Install tooling (L) to seal (34).
-



Illustration 3

g01026650

4. Raise the temperature of bearing cone (37). Install washer (38) and bearing cone (37) on pinion (33).



Illustration 4

g01027078

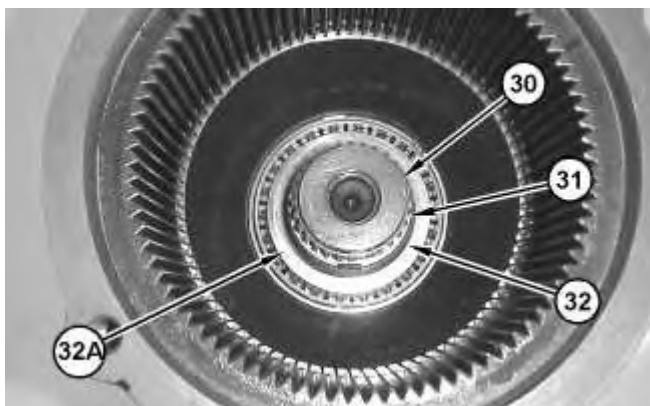


Illustration 5

g01026558

5. The following steps should be used on machines that are equipped with the part number **152-7372** Swing Drive Gp.
  - a. Apply 80 grams of Tooling (L) to the bearing cone on pinion (33). Install pinion (33) in swing drive housing (33A).

- b. Raise the temperature of bearing cone (32A). Install bearing cone (32A).
  - c. Install nut (32). Use Tooling (J) in order to tighten nut (32) until a slight increase in rolling torque is obtained. Loosen nut (32) by approximately 60 degrees. Strike pinion (33) with a soft hammer in order to release the bearing preload.
  - d. Determine the initial rolling torque of pinion (33). The specified rolling torque is 8 N·m (71 lb in) to 15 N·m (133 lb in). Record this value as Rolling Torque (Y).
  - e. As you tighten nut (32) rotate swing drive housing (33A) in order to ensure that the bearings are seated properly. Use Tooling (J) in order to tighten nut (32) to a torque of 300 N·m (221 lb ft). Loosen nut (32) by 30 degrees to 60 degrees.
  - f. Install ring (31).
  - g. Install nut (30). Use Tooling (J) in order to tighten nut (30) to a torque of  $1000 \pm 100$  N·m ( $738 \pm 74$  lb ft).
  - h. Determine the rolling torque of pinion (33). The specified rolling torque is Rolling Torque (Y) plus 3 N·m (27 lb in) to 9 N·m (80 lb in).
6. The following steps should be used on machines that are equipped with the part number **152-7375** Swing Drive Gp.
- a. Apply 80 grams of Tooling (L) to the bearing cone on pinion (33). Install pinion (33) in swing drive housing (33A).
  - b. Raise the temperature of bearing cone (32A). Install bearing cone (32A).
  - c. Install nut (32). Use Tooling (J) in order to tighten nut (32) until a slight increase in rolling torque is obtained. Loosen nut (32) by approximately 60 degrees. Strike pinion (33) with a soft hammer in order to release the bearing preload.
  - d. Determine the initial rolling torque of pinion (33). The specified rolling torque is 6 N·m (53 lb in) to 8 N·m (71 lb in). Record this value as Rolling Torque (Y).
  - e. As you tighten nut (32) rotate swing drive housing (33A) in order to ensure that the bearings are seated properly. Use Tooling (J) in order to tighten nut (32) to a torque of  $250 \pm 50$  N·m ( $184 \pm 37$  lb ft). Loosen nut (32) by 15 degrees to 30 degrees.
  - f. Install ring (31).
  - g. Install nut (30). Use Tooling (J) in order to tighten nut (30) to a torque of  $700 \pm 50$  N·m ( $516 \pm 37$  lb ft).
  - h. Determine the rolling torque of pinion (33). The specified rolling torque is Rolling Torque (Y) plus 2 N·m (18 lb in) to 5 N·m (44 lb in).
-

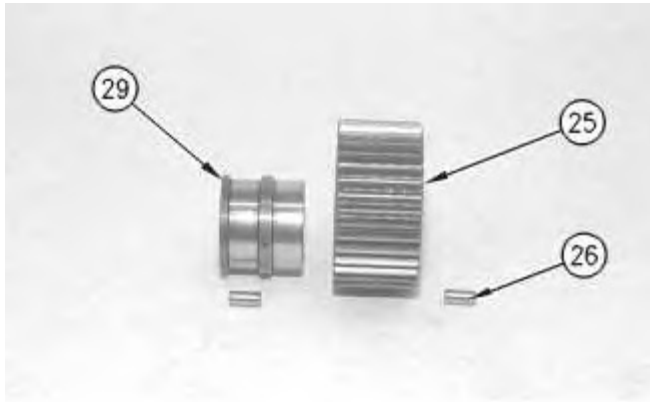


Illustration 6

g00907108



Illustration 7

g00907110

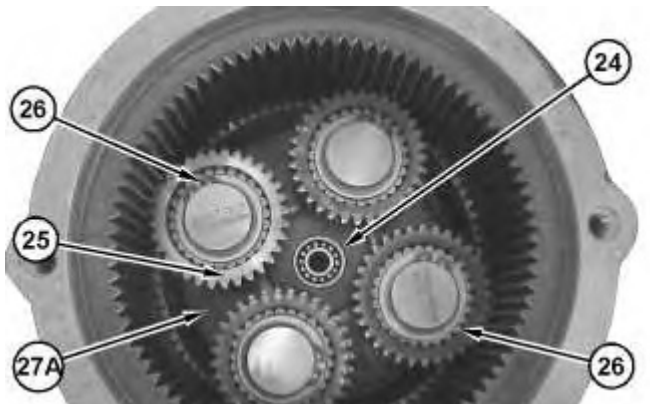


Illustration 8

g01027098

7. Install carrier (27A).
8. Install shim (28). Use Tooling (H) to install retaining ring (27).
9. Raise temperature of bearing race (29). Install bearing race (29) and needle bearings (26).
10. Apply Tooling (L) to the rollers. Install the rollers on bearing race (29). Install gears (25) over bearing race (29) and the rollers.

11. Install retaining ring (23) and bearing (24).

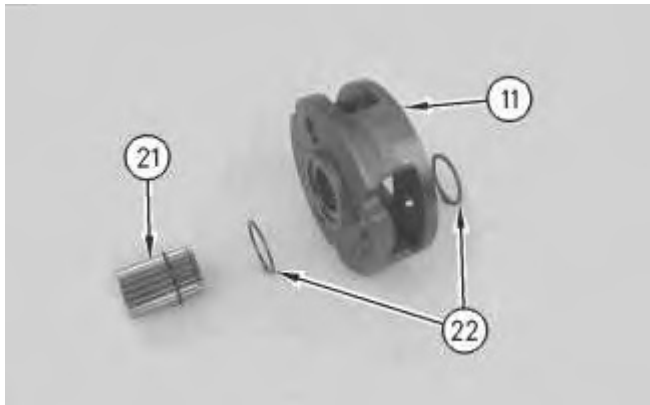


Illustration 9

g00906330

12. Install washers (22) and sun gear (21) onto top carrier (11).

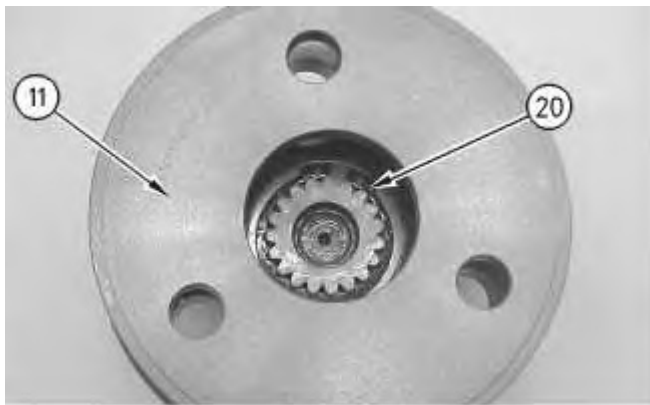


Illustration 10

g00906329

13. Use Tooling (E) to install retaining ring (20) onto top carrier (11).

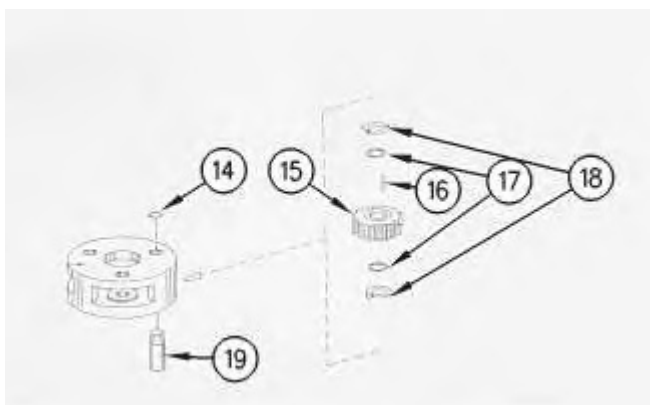


Illustration 11

g00906327

14. Install needle bearings (16), washers (17) and (18), gears (15), and pins (19).

---

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)