


**753**



**Bobcat®**

# Parts Manual

**S/N 5086 11001 - 29999**

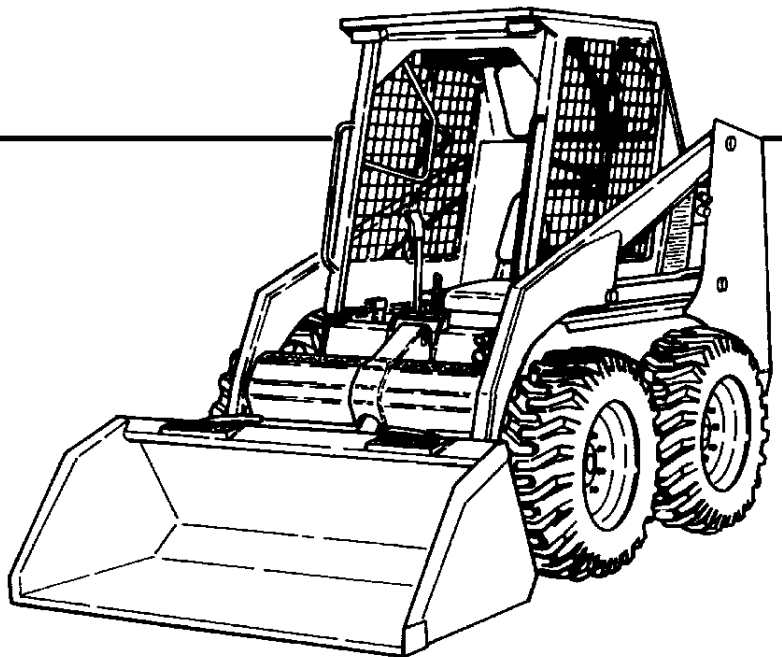

## 753 ALPHABETICAL INDEX

AIR CLEANER . . . . .	154, 158, 160, 200	LEVER, STEERING . . . . .	90
ALARM, BACKUP . . . . .	208	LIFT ARM . . . . .	26
ALTERNATOR 122-130, 138-142, 170, 238		LIFT KITS . . . . .	294, 295, 297, 298
ANTI-FREEZE . . . . .	340	LIGHT . . . . .	118, 120, 122, 126, 130
AXLE . . . . .	41	LIGHTS, FLASHER . . . . .	264
BATTERY . . . . .	122, 126, 130	LOCK, REAR DOOR . . . . .	309
BELT, ALTERNATOR . . . . .	168	MAIN FRAME . . . . .	12
BELT, COOLING FAN DRIVE . . . . .	150	MANIFOLD . . . . .	191
BELT, PUMP DRIVE . . . . .	162	MODULE, AUX. CONTROLS . . . . .	118, 120
BLACK GOLD . . . . .	340	MOTOR CARRIER . . . . .	37, 38
BLOCK HEATER . . . . .	212	MOTOR, HYDRO. . . . .	94, 96
BOB-TACH . . . . .	26, 30	MOUNT, ENGINE . . . . .	170
BOOT, RUBBER . . . . .	22	MOUNT, HYDRO. PUMP . . . . .	164, 168
BOSS UNIT . . . . .	124, 128, 132	MUFFLER . . . . .	154, 158, 160, 299
BRAKES . . . . .	40	OIL . . . . .	340
CAB . . . . .	14	OIL COOLER . . . . .	86, 88
CAB ENCLOSURE . . . . .	230, 234	PAINT . . . . .	340
CABLE, BATTERY . . . . .	122, 126, 130	PAN, OIL . . . . .	184
CAMSHAFT . . . . .	187, 188	PANEL, INSTRUMENT . . . . .	118, 120
CAP, FUEL . . . . .	32	PEDALS, CONTROL . . . . .	68
CAP, HYD. OIL . . . . .	82, 84	PISTON . . . . .	186
CAP, RADIATOR . . . . .	150	POLISH . . . . .	340
CHAIN, DRIVE . . . . .	36	PUMP, FUEL . . . . .	32, 195
CHAINCASE . . . . .	12, 36	PUMP, GEAR . . . . .	113
COOLING FAN DRIVE ASSY. . . . .	174	PUMP, HYDRO. . . . .	82, 98, 102, 106, 110
COUNTER WEIGHTS 241, 242, 243, 244		PUMP, INJECTION . . . . .	195, 196
CYLINDER BLOCK . . . . .	179	PUMP, OIL . . . . .	180
CYLINDER, LIFT . . . . .	44, 48, 65, 66, 67	PUMP, WATER . . . . .	189
CYLINDER, TILT . . . . .	44, 48, 58, 60	QUICK COUPLERS . . . . .	56, 304
DECALS . . . . .	246, 248	RADIATOR . . . . .	150
DIPSTICK, ENG. OIL . . . . .	184	RIM, WHEEL . . . . .	333
DISPLAY, LCD . . . . .	118, 120	RING GEAR . . . . .	162
DOOR, CAB . . . . .	222, 230	SEAT . . . . .	18, 19, 314, 316, 317
DOOR, REAR . . . . .	24	SEAT BAR . . . . .	18
DRIVE MOUNT ASSY. . . . .	37, 38	SEAT BELT . . . . .	18, 326
ENGINE . . . . .	176	SENDER, FUEL . . . . .	32
EXTINGUISHER . . . . .	263	SENSOR, ENG. OIL PRESS. 122, 126, 130	
FAN . . . . .	150	SENSOR, ENG. TEMP. . . . .	122, 126, 130
FILTER, AIR . . . . .	200	SENSOR, HYD. PRESS. . . . .	124, 128, 132
FILTER, ENG. OIL . . . . .	177	SENSOR, HYDRO. TEMP. 122, 126, 130	
FILTER, FUEL . . . . .	32	SHOCK, CONTROLS . . . . .	92
FILTER, HYD. OIL . . . . .	86, 88	SOLENOID . . . . .	122, 126, 130
FIRE EXTINGUISHER . . . . .	263	SPROCKET, AXLE . . . . .	36, 41
FUEL SYSTEM . . . . .	32	STARTER . . . . .	122, 126, 130, 144, 146
FUSE . . . . .	118	STOP, LIFT ARM . . . . .	26
GAS SPRING 14, 154, 158, 160, 222, 230		STROBE LIGHT . . . . .	328, 329, 330
GASKET KIT, ENG. . . . .	176	SWITCH, IGNITION . . . . .	118, 120
GLOW PLUG . . . . .	197	SWITCH, LIGHT . . . . .	118, 120
HAND CONTROLS KIT . . . . .	266, 268	TANK, COOLANT . . . . .	152
HARNESS, CAB . . . . .	118, 120	TANK, FUEL . . . . .	32
HARNESS, CONTROLS . . . . .	134, 136	TANK, HYDRO. . . . .	82, 84
HARNESS, ENGINE . . . . .	122, 126, 130	THERMOSTAT . . . . .	190
HARNESS, LIGHTS . . . . .	122, 126, 130	THROTTLE . . . . .	172
HEAD, CYLINDER . . . . .	183	TILT STOP KIT . . . . .	331
HEATER . . . . .	275, 281, 284	TIRES . . . . .	333
HOOD, ENGINE 24, 154, 158, 160, 288		VALVE COVER . . . . .	181
HORN . . . . .	289, 290	VALVE, BUCKET POS. . . . .	80, 216
HOURMETER . . . . .	291	VALVE, CONTROL . . . . .	70, 76
HUB, AXLE . . . . .	41	VALVE, ENGINE . . . . .	182
INJECTION NOZZLES . . . . .	197, 198	WINDOW, REAR . . . . .	14, 236, 324
LATCH, REAR DOOR . . . . .	24	WINDOW, SIDE . . . . .	236
LEVER, PINTLE . . . . .	90	WINDSHIELD WIPER . . . . .	222, 312

## 753 CONTENTS

<b>MAIN FRAME</b> .....	<b>12-37</b>
MAIN FRAME .....	12-13
OPERATOR CAB .....	14-17
SEAT & SEAT BAR .....	18-19
SEAT .....	20-23
PANELS .....	24-25
REAR DOOR .....	26-27
LIFT ARM & BOB-TACH .....	28-31
BOB-TACH .....	32-33
FUEL SYSTEM .....	34-37
<b>DRIVE TRAIN</b> .....	<b>38-47</b>
DRIVE TRAIN .....	38-39
MOTOR CARRIER .....	40-43
DISC BRAKE .....	44-45
AXLE .....	46-47
<b>HYDRAULIC SYSTEM</b> .....	<b>48-89</b>
HYDRAULIC CIRCUITRY .....	48-59
AUXILIARY HYDRAULICS .....	60-61
TILT CYLINDER .....	62-69
LIFT CYLINDER .....	70-75
CONTROL PEDALS .....	76-77
HYDRAULIC CONTROL VALVE .....	78-87
BUCKET POSITIONING VALVE .....	88-89
<b>HYDROSTATIC SYSTEM</b> .....	<b>90-127</b>
HYDROSTATIC CIRCUITRY .....	90-97
HAND CONTROLS .....	98-101
HYDROSTATIC MOTOR .....	102-105
HYDROSTATIC PUMP .....	106-121
GEAR PUMP .....	122-123
HYDROSTATIC OIL FILTER .....	124-127
<b>ELECTRICAL SYSTEM</b> .....	<b>128-159</b>
CAB ELECTRICAL CIRCUITRY .....	128-131
ENGINE ELECTRICAL CIRCUITRY .....	132-143
CONTROLS ELECTRICAL .....	144-147
ALTERNATOR .....	148-153
STARTER .....	154-157
STARTER KIT .....	158-159
<b>POWER UNIT</b> .....	<b>160-227</b>
COOLING SYSTEM .....	160-163
ENGINE & ATTACHING PARTS .....	164-181
THROTTLE .....	182-183
COOLING FAN DRIVE ASSY. ....	184-185
ENGINE & GASKET KITS .....	186-187
GEARCASE .....	188-189
CRANKCASE .....	190-191
ROCKER ARM COVER .....	192-193
VALVE ROCKER ARM .....	194-195
CYLINDER HEAD .....	196-197
OIL PAN .....	198-199
PISTON & CRANKSHAFT .....	200-201
FUEL CAMSHAFT .....	202-203
CAMSHAFT .....	204-205
WATER PUMP .....	206-207
WATER FLANGE & THERMOSTAT .....	208-209

## 753 CONTENTS (Cont'd)

<b>POWER UNIT (CONT'D)</b> .....	<b>160-227</b>
MANIFOLDS .....	210-211
ENGINE STOP LEVER .....	212-213
GOVERNOR .....	214-215
SPEED CONTROL PLATE .....	216-217
INJECTION PUMP .....	218-221
INJECTOR NOZZLES .....	222-223
INJECTOR HOLDER .....	224-225
AIR CLEANER .....	226-227
<b>ACCESSORIES &amp; OPTIONS</b> .....	<b>231-412</b>
ACCESS COVER .....	231-234
AIR DEFLECTOR KIT .....	235-236
AXLE SEAL KIT .....	237-238
BACK-UP ALARM .....	239-242
BEACON LIGHT .....	243-244
BLOCK HEATER .....	245-246
BOB-TACH LEVERS .....	247-248
BUCKET POSITION ON-OFF KIT .....	249-250
BUCKET POSITIONING VALVE KIT .....	251-254
BUMPERS .....	255-256
CAB DOOR .....	257-264
CAB ENCLOSURE .....	265-270
CAB WINDOWS .....	271-272
CLOSED ALTERNATOR .....	273-276
COUNTERWEIGHT KIT .....	277-284
DECALS .....	285-288
ELECTRICAL CONTROLS KIT .....	289-292
ENGINE MOUNT KIT .....	293-294
EUROPEAN ACCESSORIES .....	295-302
FENDER BRACE KIT .....	303-304
FIRE EXTINGUISHER .....	305-306
FLASHER LIGHTS .....	307-308
HAND CONTROL KIT .....	309-316
HANDLE KITS .....	317-318
HEATER KIT (FRESH AIR) .....	319-322
HEATER (FRESH AIR) .....	323-326
HEATER PLUMBING KIT (FRESH AIR) .....	327-328
HEATER KIT .....	329-330
HEATER .....	331-332
HEATER PLUMBING KIT .....	333-334
HOOD KIT .....	335-336
HORN & ELECTRICAL CONTROLS KIT .....	337-338
HORN KIT .....	339-340
HOURLY METER KIT .....	340-341
INSECT SCREEN KIT .....	342-343
KEYLESS IGNITION .....	344-345
LIFT KIT .....	346-354
MUFFLER/PURIFIER KIT .....	355-358
RADIATOR SCREEN KIT .....	359-360
REAR AUXILIARY .....	361-364
REAR AUXILIARY VALVE .....	365-366
REAR AUX. IN-LINE FILTER .....	367-368
REAR DOOR LOCK .....	369-370
REAR WIPER .....	371-372
SEAT .....	373-378

## 753 CONTENTS (Cont'd)

<b>ACCESSORIES &amp; OPTIONS (CONT'D)</b> .....	<b>231-412</b>
SEAT BAR KIT .....	379-384
SEAT BELT .....	385-386
SOUND KIT .....	387-388
SOUND OPTION .....	389-390
SOUND REDUCTION HARDHAT .....	391-392
STROBE LIGHT .....	393-398
TILT STOP KIT .....	399-400
TIMER KIT .....	401-402
TIRES & RIMS .....	403-408
TOOL BOX .....	409-410
BULK ITEMS .....	411-412
<b>NUMERICAL INDEX</b> .....	<b>413-470</b>
NUMERICAL INDEX .....	413-470

## 753 CONTENTS

<b>MAIN FRAME</b> .....	<b>12-37</b>
MAIN FRAME .....	12-13
OPERATOR CAB .....	14-17
SEAT & SEAT BAR .....	18-19
SEAT .....	20-23
PANELS .....	24-25
REAR DOOR .....	26-27
LIFT ARM & BOB-TACH .....	28-31
BOB-TACH .....	32-33
FUEL SYSTEM .....	34-37
<b>DRIVE TRAIN</b> .....	<b>38-47</b>
DRIVE TRAIN .....	38-39
MOTOR CARRIER .....	40-43
DISC BRAKE .....	44-45
AXLE .....	46-47
<b>HYDRAULIC SYSTEM</b> .....	<b>48-89</b>
HYDRAULIC CIRCUITRY .....	48-59
AUXILIARY HYDRAULICS .....	60-61
TILT CYLINDER .....	62-69
LIFT CYLINDER .....	70-75
CONTROL PEDALS .....	76-77
HYDRAULIC CONTROL VALVE .....	78-87
BUCKET POSITIONING VALVE .....	88-89
<b>HYDROSTATIC SYSTEM</b> .....	<b>90-127</b>
HYDROSTATIC CIRCUITRY .....	90-97
HAND CONTROLS .....	98-101
HYDROSTATIC MOTOR .....	102-105
HYDROSTATIC PUMP .....	106-121
GEAR PUMP .....	122-123
HYDROSTATIC OIL FILTER .....	124-127
<b>ELECTRICAL SYSTEM</b> .....	<b>128-159</b>
CAB ELECTRICAL CIRCUITRY .....	128-131
ENGINE ELECTRICAL CIRCUITRY .....	132-143
CONTROLS ELECTRICAL .....	144-147
ALTERNATOR .....	148-153
STARTER .....	154-157
STARTER KIT .....	158-159
<b>POWER UNIT</b> .....	<b>160-227</b>
COOLING SYSTEM .....	160-163
ENGINE & ATTACHING PARTS .....	164-181
THROTTLE .....	182-183
COOLING FAN DRIVE ASSY. ....	184-185
ENGINE & GASKET KITS .....	186-187
GEARCASE .....	188-189
CRANKCASE .....	190-191
ROCKER ARM COVER .....	192-193
VALVE ROCKER ARM .....	194-195
CYLINDER HEAD .....	196-197
OIL PAN .....	198-199
PISTON & CRANKSHAFT .....	200-201
FUEL CAMSHAFT .....	202-203
CAMSHAFT .....	204-205
WATER PUMP .....	206-207
WATER FLANGE & THERMOSTAT .....	208-209

## 753 CONTENTS (Cont'd)

<b>POWER UNIT (CONT'D)</b> .....	<b>160-227</b>
MANIFOLDS .....	210-211
ENGINE STOP LEVER .....	212-213
GOVERNOR .....	214-215
SPEED CONTROL PLATE .....	216-217
INJECTION PUMP .....	218-221
INJECTOR NOZZLES .....	222-223
INJECTOR HOLDER .....	224-225
AIR CLEANER .....	226-227
<b>ACCESSORIES &amp; OPTIONS</b> .....	<b>231-412</b>
ACCESS COVER .....	231-234
AIR DEFLECTOR KIT .....	235-236
AXLE SEAL KIT .....	237-238
BACK-UP ALARM .....	239-242
BEACON LIGHT .....	243-244
BLOCK HEATER .....	245-246
BOB-TACH LEVERS .....	247-248
BUCKET POSITION ON-OFF KIT .....	249-250
BUCKET POSITIONING VALVE KIT .....	251-254
BUMPERS .....	255-256
CAB DOOR .....	257-264
CAB ENCLOSURE .....	265-270
CAB WINDOWS .....	271-272
CLOSED ALTERNATOR .....	273-276
COUNTERWEIGHT KIT .....	277-284
DECALS .....	285-288
ELECTRICAL CONTROLS KIT .....	289-292
ENGINE MOUNT KIT .....	293-294
EUROPEAN ACCESSORIES .....	295-302
FENDER BRACE KIT .....	303-304
FIRE EXTINGUISHER .....	305-306
FLASHER LIGHTS .....	307-308
HAND CONTROL KIT .....	309-316
HANDLE KITS .....	317-318
HEATER KIT (FRESH AIR) .....	319-322
HEATER (FRESH AIR) .....	323-326
HEATER PLUMBING KIT (FRESH AIR) .....	327-328
HEATER KIT .....	329-330
HEATER .....	331-332
HEATER PLUMBING KIT .....	333-334
HOOD KIT .....	335-336
HORN & ELECTRICAL CONTROLS KIT .....	337-338
HORN KIT .....	339-340
HOURMETER KIT .....	340-341
INSECT SCREEN KIT .....	342-343
KEYLESS IGNITION .....	344-345
LIFT KIT .....	346-354
MUFFLER/PURIFIER KIT .....	355-358
RADIATOR SCREEN KIT .....	359-360
REAR AUXILIARY .....	361-364
REAR AUXILIARY VALVE .....	365-366
REAR AUX. IN-LINE FILTER .....	367-368
REAR DOOR LOCK .....	369-370
REAR WIPER .....	371-372
SEAT .....	373-378

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)