


753L



Bobcat®

Parts Manual

S/N 5122 11001-11999

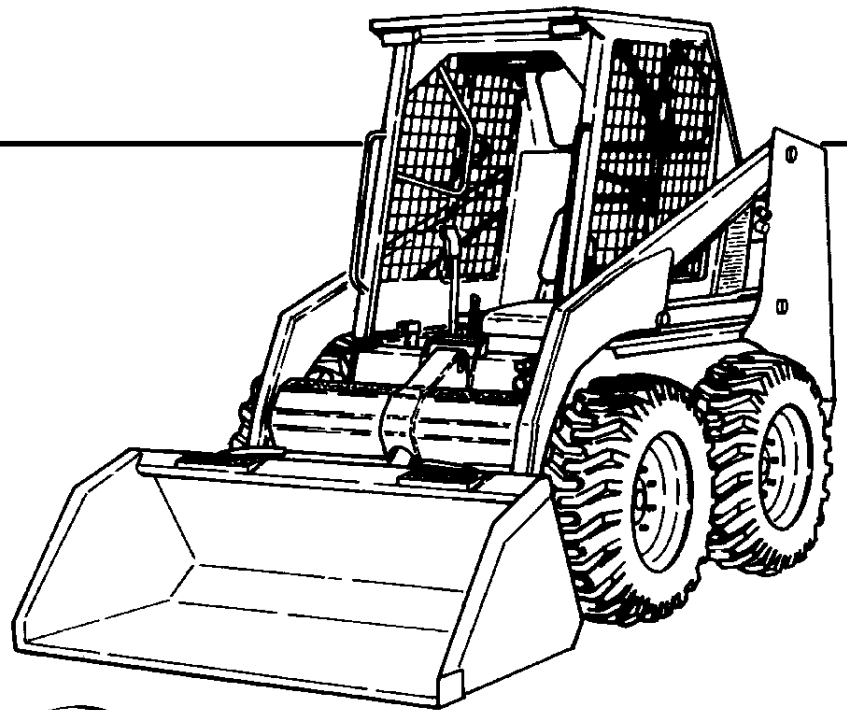

**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**

6722982 (6-99) Revised (8-00)



Printed in U.S.A.

© Bobcat Company 2000

753L ALPHABETICAL INDEX

ADHESIVE	260	INJECTION NOZZLES	149, 150
AIR CLEANER	116, 151	LATCH, REAR DOOR	24
ALTERNATOR ...	94, 98, 104, 122, 184	LEVER, PINTLE	64
ANTI-FREEZE	260	LIFT KITS	229, 230
BATTERY	94, 98	LIGHT SWITCH	90
BELT, ALTERNATOR	122	LIGHTS, FLASHER	204
BELT, COOLING FAN DRIVE ASSY.	112	LOCK, REAR DOOR	236
BELT, PUMP DRIVE	118	MAIN FRAME	12
BLACK GOLD	260	MANIFOLD	143
BLOCK HEATER	163	MOUNT, ENGINE	122
BLOWER, WHEEL	112	MOUNT, HYDRO. PUMP	118, 122
BOB-TACH	12, 26, 30	MUFFLER	116
BOOT, RUBBER	21	OIL	260
BOSS UNIT	98	OIL COOLER	62
BRAKES	38	PAINT	260
CAB	12, 14	PANEL, INSTRUMENT	90, 92
CAB ENCLOSURE	172	PEDALS, CONTROL	53
CABLE, BATTERY	94, 98	PISTON	138
CAMSHAFT	139, 140	POLISH	260
CAP, FUEL	32	PUMP, FUEL	32, 147
CAP, HYD. OIL	60	PUMP, GEAR	83
CAP, RADIATOR	112	PUMP, HYDRO.	76, 80
CHAIN, DRIVE	35	PUMP, INJECTION	148
CHAINCASE	12	PUMP, OIL	132
COOLING FAN DRIVE ASSY.	126	PUMP, WATER	141
COUNTER WEIGHTS	187, 188	QUICK COUPLERS	46, 206
CRANKSHAFT	138	RADIATOR	112
CYLINDER BLOCK	131	RIM, WHEEL	257
CYLINDER, LIFT	51	RING GEAR	118
CYLINDER, TILT	48	SEALANT	260
DECALS	190, 192	SEAT	16, 19, 240, 242, 243
DIPSTICK, ENG. OIL	136	SEAT BAR	16
DISPLAY, LCD	92	SEAT BELT	16, 249
DOOR, CAB	176	SENDER, ENG. OIL PRESS.	98
DOOR, REAR	24	SENSOR, ENG. TEMP.	98
DRIVE MOUNT ASSY.	36	SENSOR, HYD. PRESS.	98
ENGINE	116, 118, 128	SENSOR, HYDRO. TEMP.	98
FILTER, AIR	151	SHOCK CONTROLS	64
FILTER, ENG. OIL	129	SOLENOID	94, 98
FILTER, FUEL	32	SPROCKET, AXLE	35, 39
FILTER, HYD. OIL	62	STARTER	94, 98, 106, 108, 118
FIRE EXTINGUISHER	203	STOP, LIFT ARM	26
FUEL SENSOR	32, 94, 98	STROBE LIGHT	253, 254
FUSE	90	SWITCH, AUX. CONTROLS ...	90, 92
GAS SPRING	14, 174	SWITCH, GLOW PLUG	90
GASKET KIT, ENG.	128	SWITCH, IGNITION	90, 92
GLOW PLUG	149	SWITCH, LIGHT	90, 92
GUAGE, ENG. TEMP.	90	TANK, COOLANT	114
GUAGE, FUEL	90	TANK, FUEL	32
HARNESS, CAB	90, 92	THERMOSTAT	142
HARNESS, CONTROLS	102	TIRES	257
HARNESS, ENGINE	94	VALVE, BUCKET POS.	166
HARNESS, LIGHTS	231	VALVE, CONTROL	56
HEAD, CYLINDER	135	VALVE, ENGINE	134
HEATER	220, 222, 223	VALVE COVER	133
HOOD, ENGINE	12, 24, 116	VOLTMETER	90
HORN	225, 226	WINDOW, REAR	182, 251
HOURMETER	90, 227	WINDOW, SIDE	182
IGNITION SWITCH	90, 92	WINDSHIELD WIPER	176, 238

753L CONTENTS

MAIN FRAME	12-37
MAIN FRAME	12-13
OPERATOR CAB	14-15
SEAT & SEAT BAR	16-19
SEAT	20-23
PANELS	24-25
REAR DOOR	26-27
LIFT ARMS & BOBTACH	28-31
BOB-TACH	32-33
FUEL SYSTEM	34-37
DRIVE TRAIN	38-45
DRIVE TRAIN	38-39
MOTOR CARRIER	40-41
DISC BRAKE	42-43
AXLE	44-45
HYDRAULIC SYSTEM	46-63
HYDRAULIC CIRCUITRY	46-49
AUXILIARY HYDRAULICS	50-51
TILT CYLINDER	52-55
LIFT CYLINDER	56-57
CONTROL PEDALS	58-59
HYDRAULIC CONTROL VALVE	60-63
HYDROSTATIC SYSTEM	64-97
HYDROSTATIC CIRCUITRY	64-67
HAND CONTROLS	68-69
HYDROSTATIC MOTOR	70-71
HYDROSTATIC PUMP	72-87
GEAR PUMP	88-91
HYDROSTATIC OIL FILTER	92-97
ELECTRICAL SYSTEM	98-119
CAB ELECTRICAL CIRCUITRY	98-101
ENGINE ELECTRICAL CIRCUITRY	102-109
CONTROLS ELECTRICAL	110-111
ALTERNATOR	112-113
STARTER	114-117
STARTER KIT	118-119
POWER UNIT	120-177
COOLING SYSTEM	120-123
ENGINE & ATTACHING PARTS	124-131
THROTTLE	132-133
COOLING FAN DRIVE ASSY.	134-135
ENGINE & GASKET KITS	136-137
GEARCASE	138-139
CRANKCASE	140-141
ROCKER ARM COVER	142-143
VALVE ROCKER ARM	144-145
CYLINDER HEAD	146-147
OIL PAN	148-149
PISTON & CRANKSHAFT	150-151
FUEL CAMSHAFT	152-153
CAMSHAFT	154-155
WATER PUMP	156-157
WATER FLANGE & THERMOSTAT	158-159
MANIFOLDS	160-161

753L CONTENTS (Cont'd)

POWER UNIT (CONT'D)	120-177
ENGINE STOP LEVER	162-163
GOVERNOR	164-165
SPEED CONTROL PLATE	166-167
INJECTION PUMP	168-171
INJECTOR NOZZLES	172-173
INJECTOR HOLDER	174-175
AIR CLEANER	176-177
ACCESSORIES & OPTIONS	181-324
ACCESS COVER	181-184
AIR DEFLECTOR KIT	185-186
AXLE SEAL KIT	187-188
BACK-UP ALARM	189-190
BEACON LIGHT	191-192
BLOCK HEATER	193-194
BOB-TACH LEVERS	195-196
BUCKET POSITIONING VALVE KIT	197-198
BUCKET POSITIONING VALVE	199-200
BUCKET POSITION ON-OFF KIT	201-202
BUMPERS	203-204
CAB ENCLOSURE	205-206
CAB DOOR	207-214
CAB WINDOWS	215-216
CLOSED ALTERNATOR	217-220
COUNTERWEIGHT KIT	221-224
DECALS	225-228
ELECTRICAL CONTROLS KIT	229-232
ENGINE MOUNTS KIT	233-234
EUROPEAN ACCESSORIES	235-240
FIRE EXTINGUISHER	241-242
FLASHER LIGHTS	243-244
FRONT AUXILIARY KIT	245-248
HAND CONTROL KIT	249-252
HANDLE KITS	253-254
HEATER KIT (FRESH AIR)	255-258
HEATER (FRESH AIR)	259-262
HEATER PLUMBING KIT (FRESH AIR)	263-264
HEATER KIT	265-266
HEATER	267-268
HEATER PLUMBING KIT	269-270
HORN KIT	271-274
HOURMETER KIT	275-276
KEYLESS IGNITION	277-278
LIFT KIT	279-282
LIGHT KIT	283-284
MUFFLER/PURIFIER KIT	285-286
REAR AUXILIARY	287-288
REAR AUXILIARY VALVE	289-290
REAR DOOR LOCK	291-292
REAR WIPER KIT	293-294
SEAT	295-300
SEAT BAR KIT	301-304
SEAT BELT	305-306
SOUND KIT	307-308
SOUND OPTION	309-310

753L CONTENTS (Cont'd)

ACCESSORIES & OPTIONS (CONT'D)	181-324
SOUND REDUCTION HARDHAT	311-312
STROBE LIGHT	313-316
TIRES & RIMS	317-320
TOOL BOX	321-322
BULK ITEMS	323-324
NUMERICAL INDEX	325-373
NUMERICAL INDEX	325-373

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com