

 
 
625S BACKHOE

S/N A6TW00101
& Above



Bobcat®

Service Manual

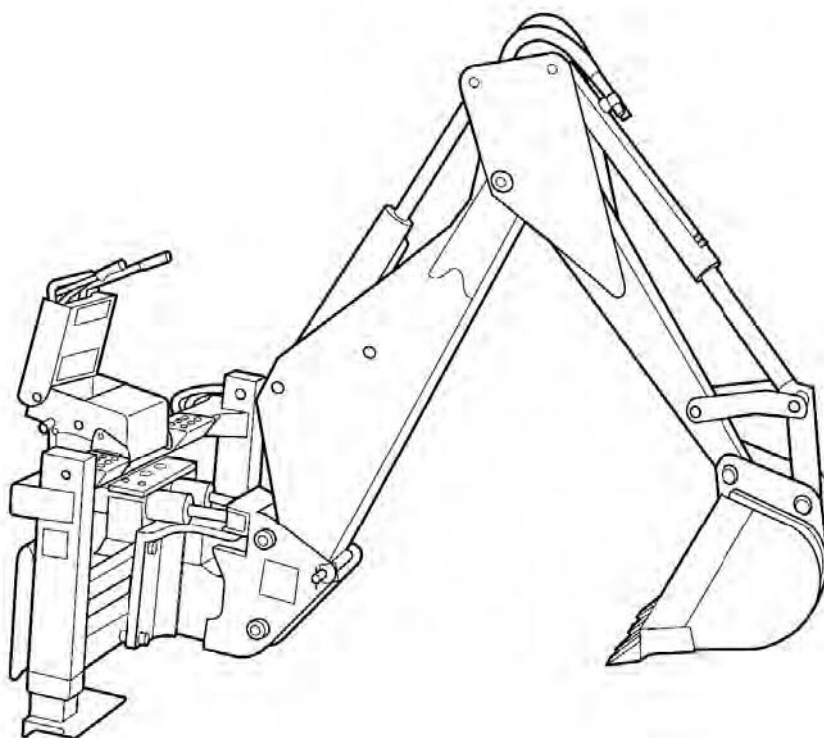


Bobcat

 
Printed in Europe


WARNINGS FOR BACKHOE OPERATION

 
WARNING


Operators must have instructions before running the machine. Untrained operators can cause injury or death.

 
 **Safety Alert Symbol.** This symbol with a warning statement means: "Warning, be alert! Your safety is involved! Carefully read the message that follows."

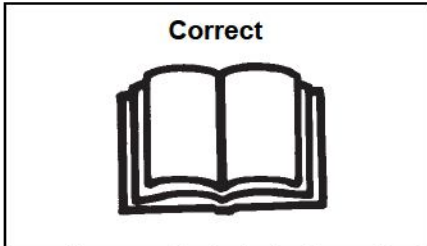

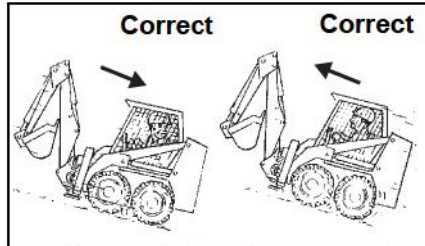

 Never use the loader/backhoe without instructions. Read the Operation & Maintenance Manual for the backhoe and the Operator's Handbook for loader. Ask the dealer about equipment for your application.

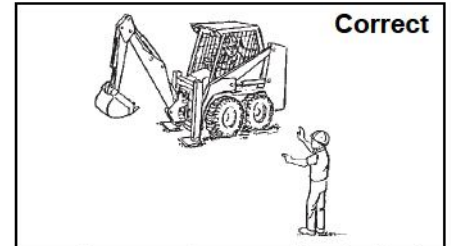 



 Keep the backhoe low and always drive with the backhoe pointing uphill when moving on slopes.

 



 Never permit personnel to stand in the maximum swing reach area while operating the backhoe.

 
 Always swing the backhoe to the uphill side. Use extra care when downhill dumping is necessary.


 Keep the machine level when operating the backhoe on slopes.

 
 Always use the backhoe stabilizers.

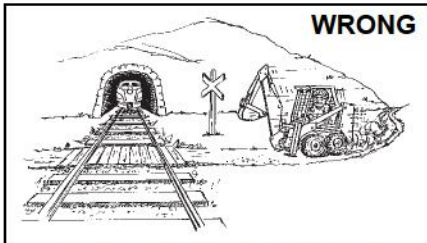


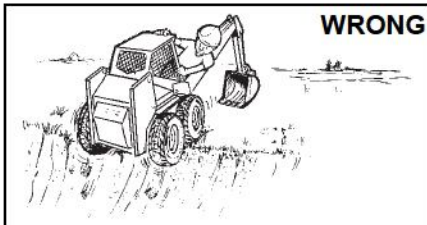 
 Before going into underpasses or tunnels, check for obstacles.

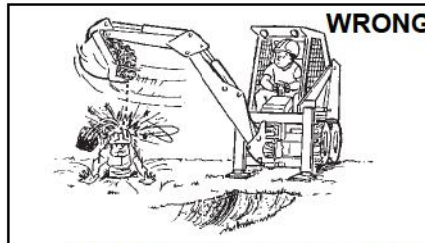


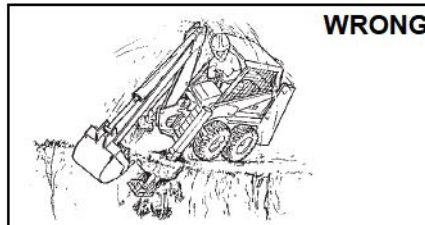 
 Never swing the bucket over other personnel.

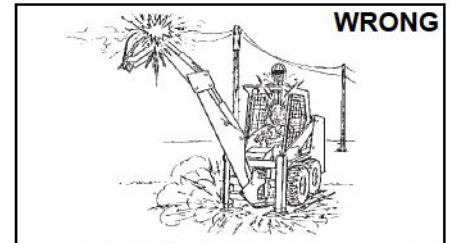


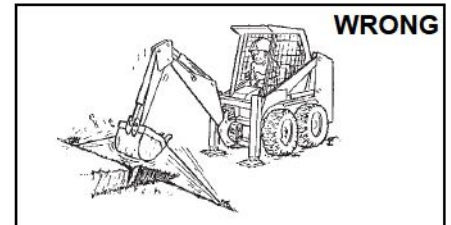 
 Check for clearance under overhead lines.

 


 
 Never operate the machine near an overhang or ditch.

 



 Never dig under the backhoe stabilizers.





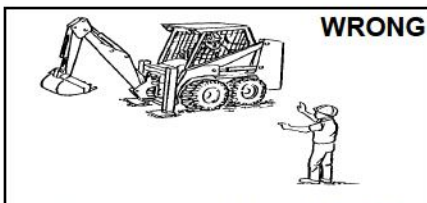 Check the area to be dug for overhead or underground lines such as electrical, gas, oil, water, etc. Use extreme caution in areas where present. Check with local authorities before digging.

 



 Operate only from the operator seat.

 Never use the controls as handholds.

 Always lower the backhoe to the ground, stop the loader engine, remove the key and lock the brake before leaving machine.

 Leave the backhoe with the controls in neutral position.

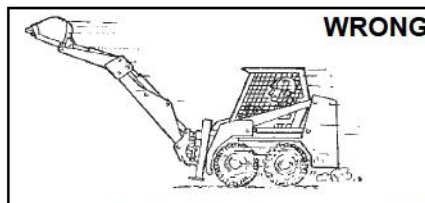

 Lock the boom in lowered position for transporting.

Safety equipment

The Bobcat backhoe attachment must be equipped with safety items necessary for each job. Ask your dealer about attachments and accessories: (1) CONTROL LOCKOUT SYSTEM, (2) BACKHOE BOOM LOCK PIN (replace if damaged), (3) SAFETY SIGNS (DECALS) (replace if damaged).

Dealer Copy -- Not for Resale

FOREWORD

This manual is for the Bobcat backhoe mechanic. It provides necessary servicing and adjustment procedures for the Bobcat backhoe and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

BACKHOE IDENTIFICATION.....	IV
DELIVERY REPORT	III
SERIAL NUMBER LOCATION.....	III

 
SERIAL NUMBER LOCATION

Figure 1



Always use the serial number of the Backhoe when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation [Figure 1].

Figure 2

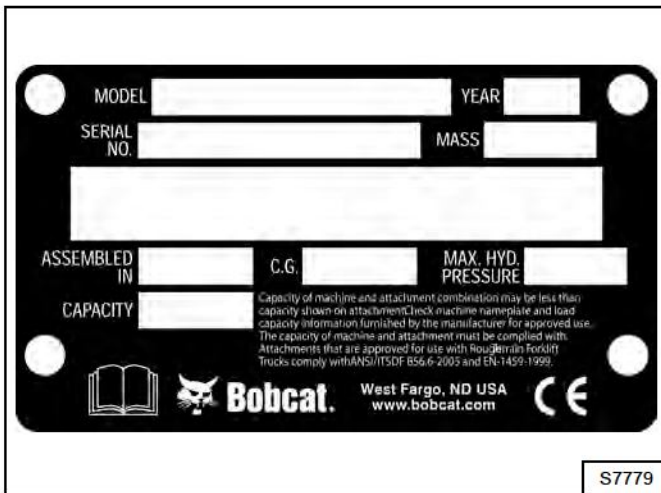

DELIVERY REPORT

 
The Delivery Report must be filled out by the dealer and signed by the owner or the operator when the Bobcat backhoe is delivered. An explanation must be given to the owner. Make sure form [Figure 3] is filled out completely.

Figure 3

Dealer Copy -- Not for Resale

BACKHOE IDENTIFICATION

Figure 4

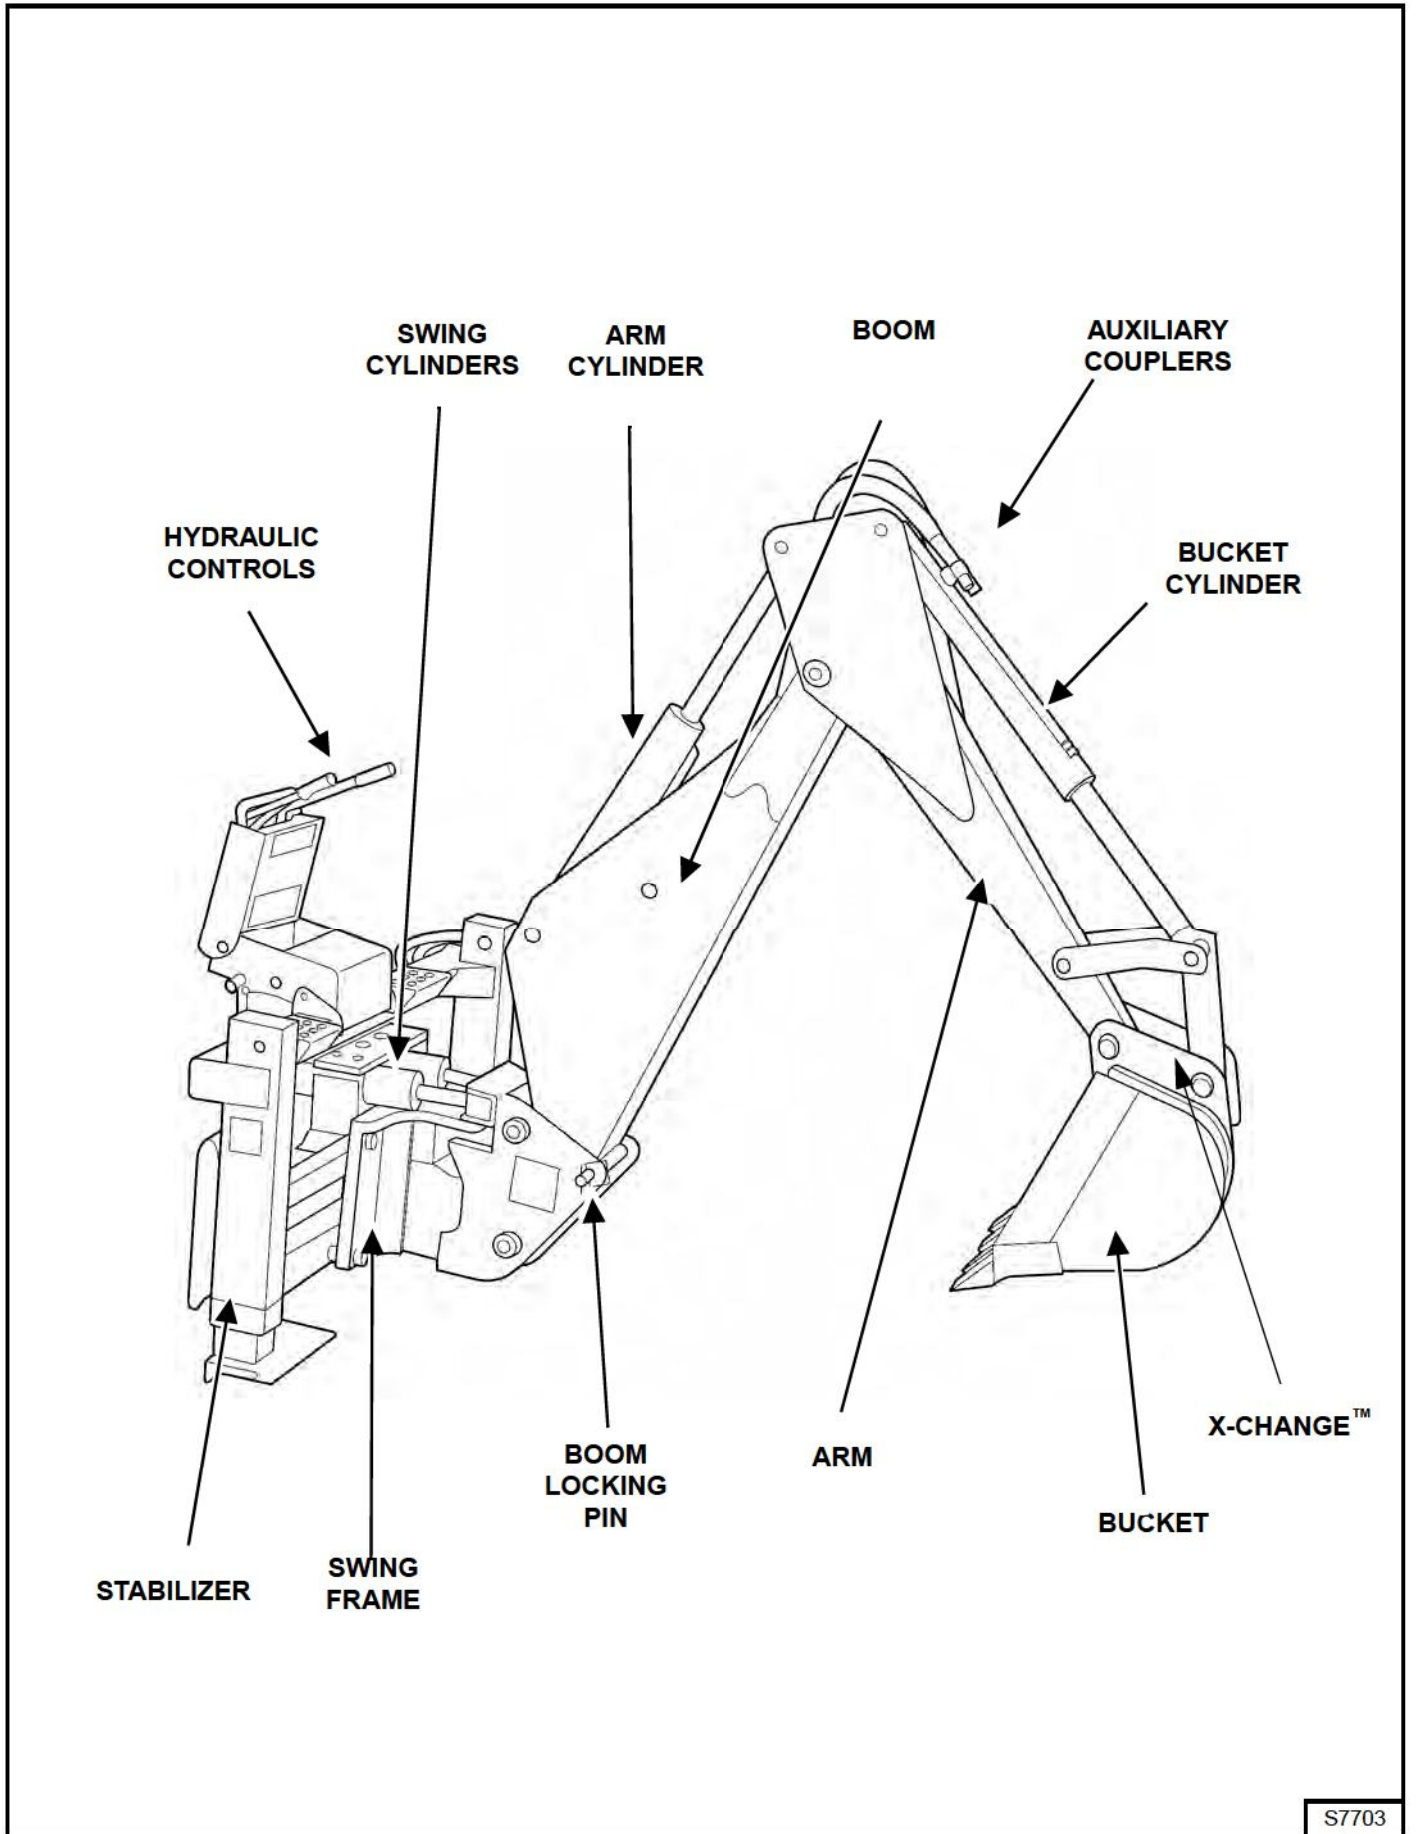

S7703

SAFETY

ATTACHING THE BACKHOE	XIV
BACKHOE HYDRAULIC CONTROL FUNCTIONS	XV
BOOM LOCK PIN FOR TRANSPORT	XIV
CRUSHING HAZARD	XIII
FIRE PREVENTION	IX
GENERAL HAZARD WARNING	XIII
MACHINE SIGNS (DECALS)	XII
REMOVING THE BACKHOE	XV
SAFE OPERATION IS THE OPERATOR'S RESPONSIBILITY	VII
SAFE OPERATION NEEDS A QUALIFIED OPERATOR	VII
SAFETY INSTRUCTIONS	VII
SAFETY SIGNS	XI
USE SAFETY RULES	VIII
USING THE X-CHANGE SYSTEM	XVI

SAFETY INSTRUCTIONS

Safe Operation Is The Operator's Responsibility

 Safety Alert Symbol
This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

 WARNING
--

Operator must have instructions before running the machine. Untrained operators can cause injury or death.

W-2001-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

 DANGER

The signal word **DANGER** on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107

 WARNING
--

The signal word **WARNING** on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The Bobcat machine and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or

coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine and the attachment.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the machine load capacities. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *Call Before You Dig* Section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, respiratory equipment, hearing protection, Special Applications Kits or a Front Window Guard are required for some work. See your Bobcat dealer about Bobcat Safety equipment for your machine.

SI ATT-0208

Dealer Copy -- Not for Resale

FIRE PREVENTION



Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for

leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Starting

Do not use ether or starting fluids on any engine that has glow plugs. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

Spark Arrestor Exhaust System

The spark arrestor exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrestor exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

SI ATT-0208

FIRE PREVENTION (CONT'D)

 
Welding And Grinding

Always clean the machine and attachment, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

Fire Extinguishers

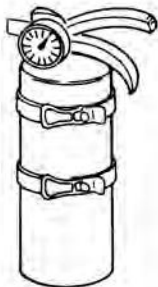

Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

Buy Now



Our support email:

ebooklibonline@outlook.com