




Bobcat®

Service Manual

Rotary Cutter

(66) S/N B37K00101 & Above
(66HF) S/N B37600101 & Above
(72) S/N AYVY00101 & Above
(72HF) S/N B37500101 & Above
(80) S/N B37700101 & Above

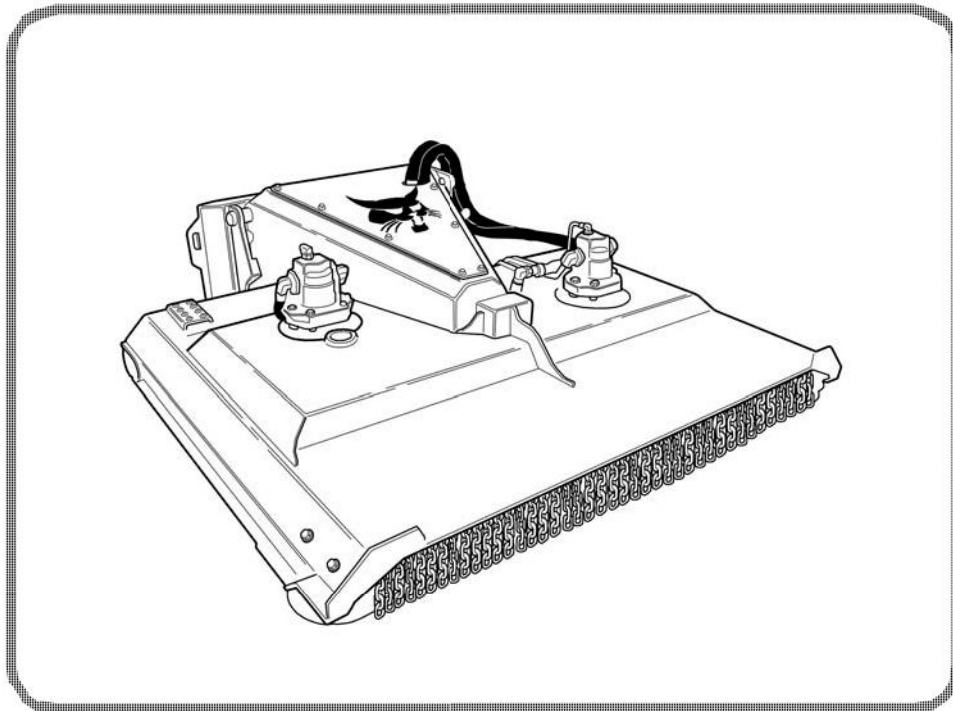

Dealer Copy -- Not for Resale



MAINTENANCE SAFETY




WARNING







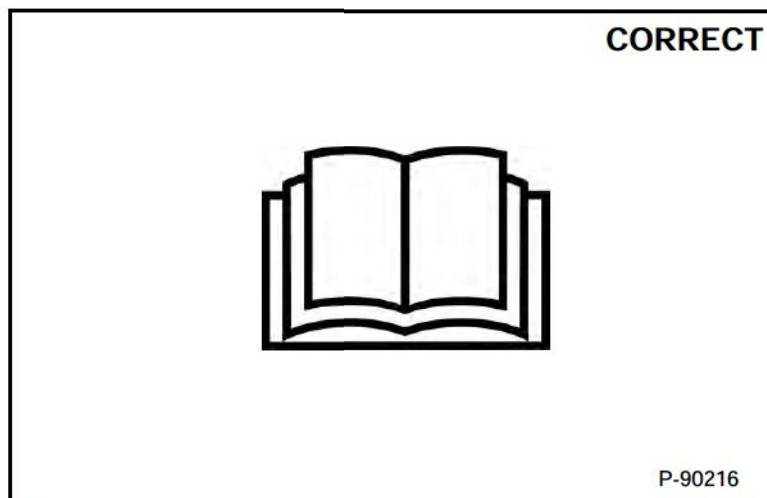

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



-  Never service attachments / implements without instructions. See Operation & Maintenance Manual and Attachment / Implement Service Manual.
-  Cleaning and maintenance are required daily.
-  Never service or adjust attachment / implement with the engine running unless instructed to do so in manual.
-  Always lower the attachment / implement to the ground before lubricating or servicing.
-  Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.
-  Stop, cool and clean engine of flammable materials before checking fluids.
-  Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.
-  Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.

Dealer Copy -- Not for Resale

MSW30-0409

CONTENTS

SAFETY & MAINTENANCE	10-01
HYDRAULIC SYSTEM	20-01
MAINFRAME	30-01
SPECIFICATIONS	SPEC-01
ALPHABETICAL INDEX	INDEX-01

Dealer Copy -- Not for Resale


FOREWORD

SERIAL NUMBER LOCATIONS	1-7
DELIVERY REPORT	1-8
MANUAL STORAGE LOCATION	1-9
ATTACHMENT IDENTIFICATION	1-10

SERIAL NUMBER LOCATIONS

Always use the serial number of the Rotary Cutter when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Figure 1

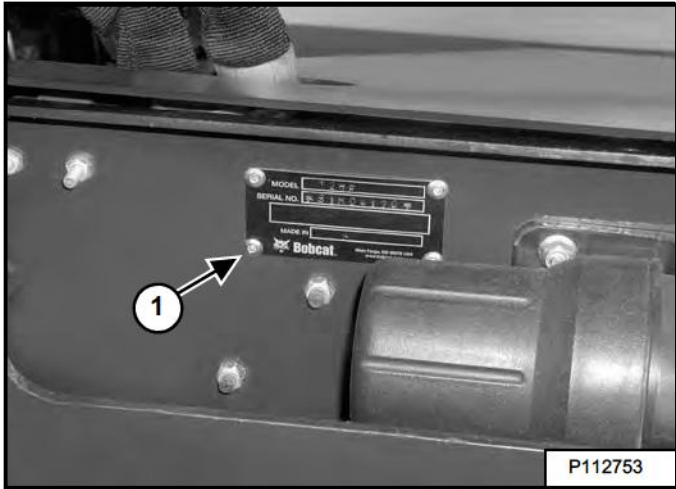

The Rotary Cutter serial number plate (Item 1) [Figure 1] is located on the left side of the mounting frame.

DELIVERY REPORT

Figure 2


The diagram shows a form layout for a delivery report. It features a header section at the top right, a prominent 'WARNING' section on the left, and multiple text input areas. A small box at the bottom right of the form contains the identifier 'B-16315'.

The delivery report must be filled out by the dealer and signed by the owner or operator when the Rotary Cutter is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 2].

MANUAL STORAGE LOCATION


Read and understand the Operation and Maintenance Manual before operating the rotary cutter.

Figure 3

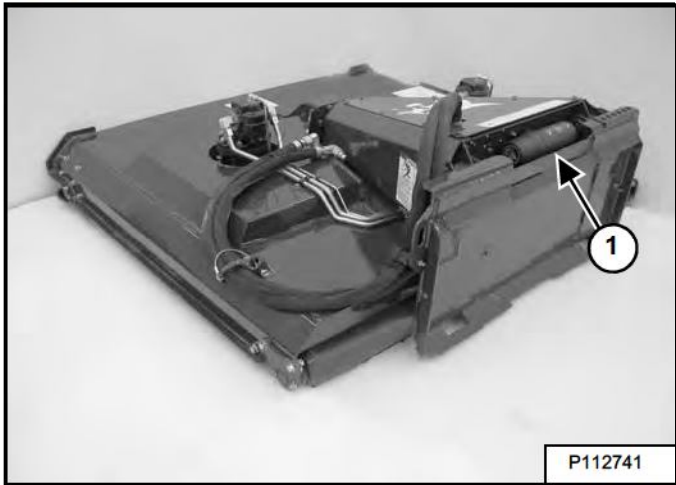

The Operation & Maintenance Manual and Safety Manual are stored in a container (Item 1) [Figure 3].

ATTACHMENT IDENTIFICATION

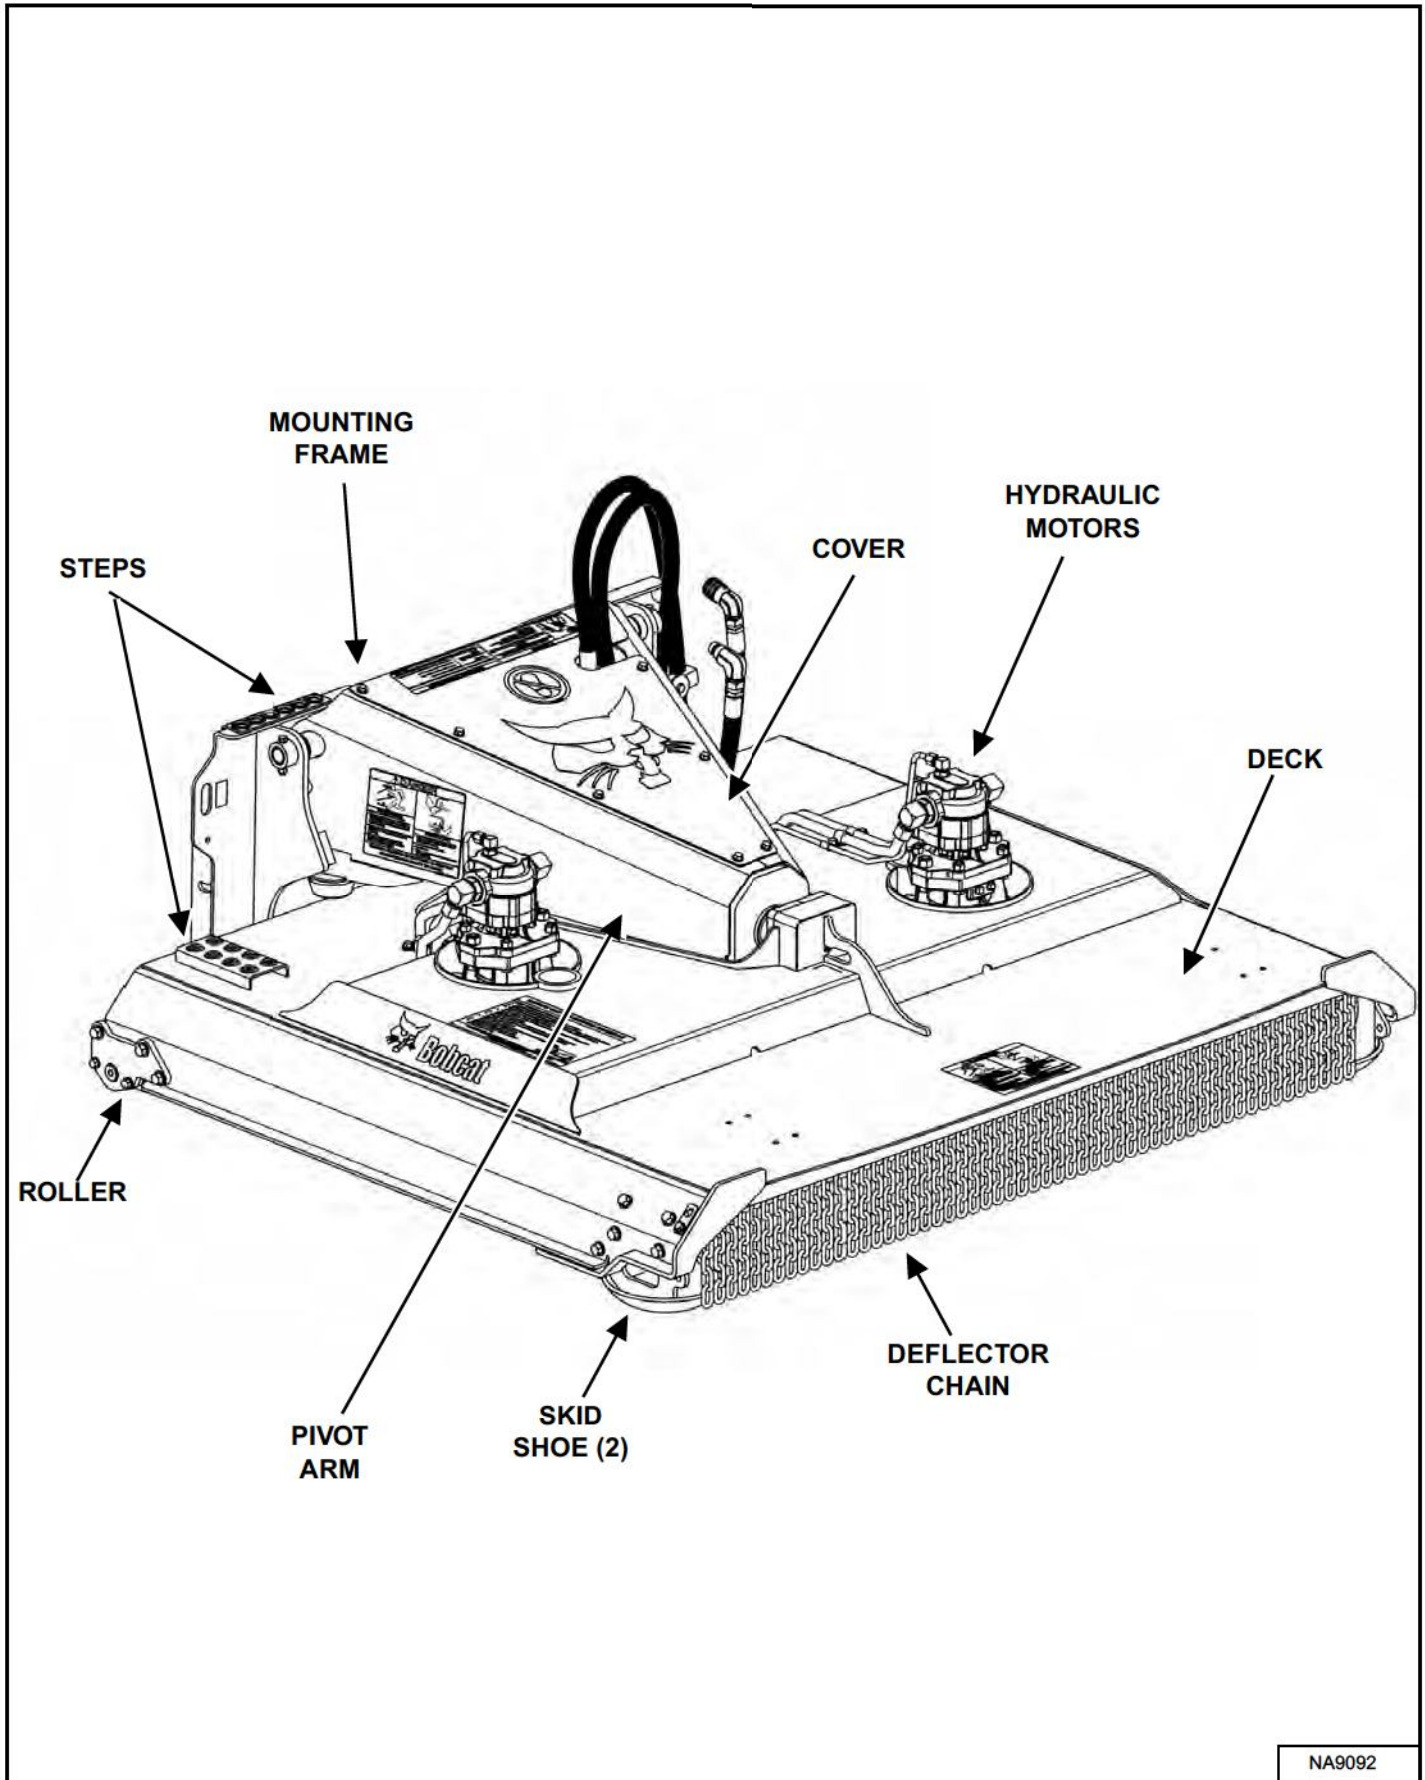

Dealer Copy -- Not for Resale

SAFETY & MAINTENANCE

TROUBLESHOOTING	10-10-1
Chart	10-10-1
DAILY INSPECTION	10-20-1
Attachment Mounting Frame	10-20-1
Rotary Cutter	10-20-1
Bob-Tach	10-20-3
Checking The Blade Shut-Off Device	10-20-5
CLEANING THE ROTARY CUTTER	10-30-1
REMOVAL AND INSTALLATION OF BLADE	10-40-1
Procedure(s)	10-40-1
REMOVAL AND INSTALLATION OF DEFLECTOR CHAIN	10-50-1
Procedure(s)	10-50-1
REMOVAL AND INSTALLATION OF SKID SHOE	10-60-1
Procedure	10-60-1
REMOVAL AND INSTALLATION OF RUBBER STOPS	10-70-1
Procedure	10-70-1
COVER	10-80-1
Removal And Installation	10-80-1
LUBRICATION	10-90-1
Lubrication Points	10-90-1
MOTOR CARRIER LUBRICATION	10-100-1
Checking And Adding Oil	10-100-1
Removing And Replacing Oil	10-100-1
SERVICE SCHEDULE	10-110-1
Description	10-110-1
Chart	10-110-1

Dealer Copy -- Not for Resale

Buy Now



Our support email:

ebooklibonline@outlook.com